

Auger Removal

Remove the auger motor chain. Take the auger motor off. Take out the two screws that hold the auger in place. I used J-B Weld to secure the T-nuts to the housing. From the front, use a rod and tap the auger out. Clean the auger tube using hot water soaked rags until clean. Use high temp silicone sealant around the the auger. Tighten the two auger screws back and forth so nothing gets in a bind. Turn auger by hand the make sure it spins freely.



