


527 ESSENTIAL SETTINGS (INSTALLER ACCESS)

ADJUST MENU	
Item Field	Setting
Set Room Heat	Home Owner Specified
Set Room Heat	---
Set Room Heat Away	---
Backlite	30 Sec
Temp Units	°F
Device /Software	527 / XX
Room Maximum	85°F
Room Maximum	---
Set Room Minimum	45°F
Schedule	---
Supply Pump	---
Supply Pump Delay	---
Cycle	---
Air Group	OFF
Address	Auto
Floor Cooling	---
Escape	^ v

To Access the program mode of the Tekmar 527 control, press and hold simultaneously the 'Mode', 'UP', and 'DOWN' buttons. 'Adjust' will appear in the upper left corner of the display. Press and hold the both buttons for 2 seconds to go to the next setting. The controls will go back to the normal operation after the buttons are left alone for 10 seconds

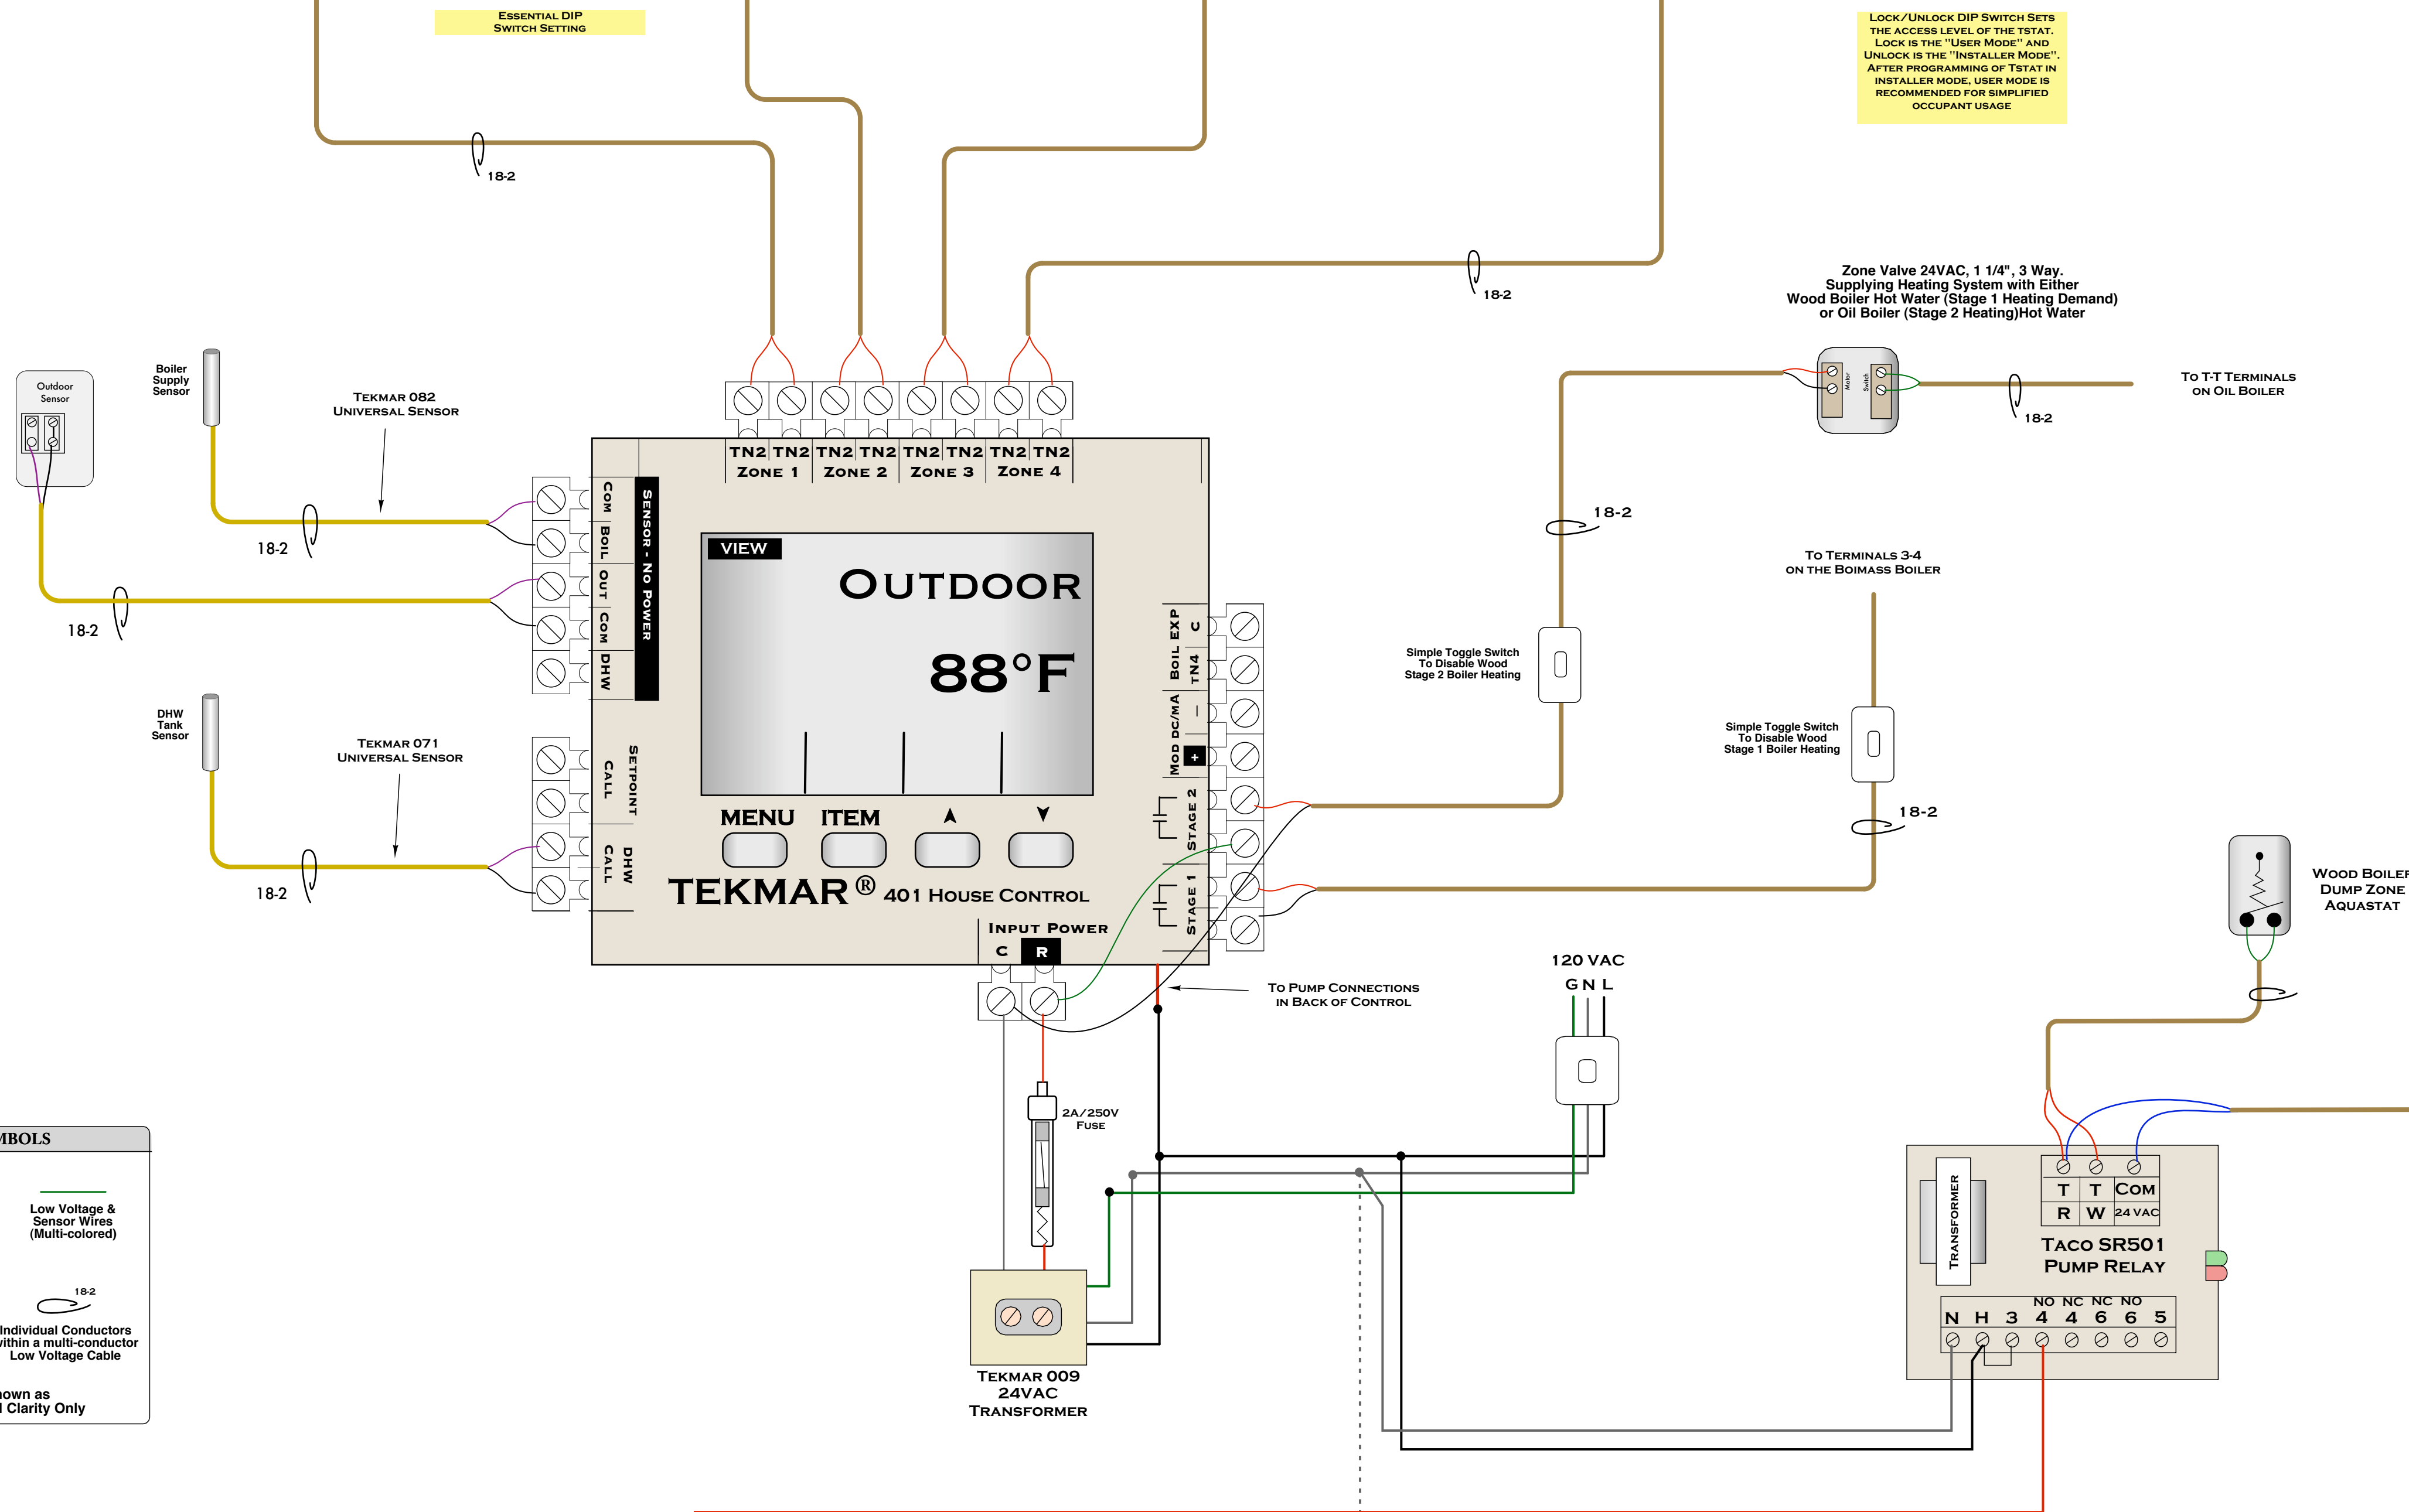

KEY TO COMMON SYMBOLS

Individual Conductors shown as Dashed are Depicted for Visual Clarity Only

401 ESSENTIAL SETTINGS ADJUST MENU

ITEM FIELD	SETTING
Outdoor Design	10°F
Boiler Type	2Stage
Boiler Design	180°F
Boiler Min	130°F
WWSD Occ	65°F
DHW Mode	1
DHW Occupied	140°F
Units	°F

DHW Mode 1 is a non Priority Mode Where the DHW Pump Can Run in Parallel with any zone pump that might be calling.

THE TEKMAR 401 HAS TWO DIFFERENT ACCESS LEVELS. THE **INSTALLER ACCESS** LEVEL ALLOWS FULL ACCESS TO ALL THE SETTINGS WHILE THE **USER ACCESS** LEVEL RESTRICTS THE SETTINGS TO WWSD AND TEMPERATURE UNITS. THE 401 DEFAULTS TO THE **USER ACCESS** MODE AFTER 12 HOURS OF OPERATION. THE ACCESS LEVEL IS FOUND IN THE TOOLBOX MENU. THE **FACTORY DEFAULT** SETTING IS **INSTALLER**.

