

HOW TO CHANGE FEED RATES INTERNALLY ON 4-DIGIT BOARDS

- TO CHANGE FEED RATES FOR HEAT SETTINGS 3-5: PRESS HEAT RANGE AND AUX ARROWS UP SIMULTANEOUSLY AND HOLD FOR APPROXIMATELY 5 SECONDS. THIS WILL DISPLAY A NUMBER. USING THE AUX ARROW, ADJUST THIS NUMBER UP FOR MORE FUEL FEED OR DOWN FOR LESS FUEL FEED. PRESS ON TO SAVE IT.
- TO CHANGE FEED RATES FOR HEAT SETTINGS 1 & 2: PRESS HEAT RANGE AND AUX ARROWS DOWN SIMULTANEOUSLY AND HOLD FOR APPROXIMATELY 5 SECONDS. THIS WILL DISPLAY A NUMBER. USE THE AUX ARROWS TO ADJUST UP FOR MORE FUEL OR DOWN FOR LESS FUEL. PRESS ON TO SAVE.
- **ADJUST BY 15 UNITS AT A TIME. IT IS BEST TO CLEAN AND RESTART THE STOVE TO SEE IF THE ADJUSTMENTS MADE WORK. THESE ADJUSTMENTS MADE WITH THE STOVE ON AND RUNNING.**

HOW TO ADJUST DRAFT SPEEDS INTERNALLY ON 4-DIGIT BOARDS

- TO CHANGE DRAFT RATES FOR HEAT SETTINGS 3-5: PRESS DRAFT FAN AND AUX ARROWS UP SIMULTANEOUSLY AND HOLD FOR APPROXIMATELY 5 SECONDS. THIS WILL DISPLAY A NUMBER. USING THE AUX ARROW, ADJUST THIS NUMBER UP FOR MORE AIR OR DOWN FOR LESS AIR. PRESS ON TO SAVE IT.
- TO CHANGE DRAFT RATES FOR HEAT SETTINGS 1 & 2: PRESS DRAFT FAN AND AUX ARROWS DOWN SIMULTANEOUSLY AND HOLD FOR APPROXIMATELY 5 SECONDS. THIS WILL DISPLAY A NUMBER. USE THE AUX ARROWS TO ADJUST UP FOR MORE AIR OR DOWN FOR LESS AIR. PRESS ON TO SAVE.
- **ADJUST BY 15 UNITS AT A TIME. IT IS BEST TO CLEAN AND RESTART THE STOVE TO SEE IF THE ADJUSTMENTS MADE WORK. THESE ADJUSTMENTS ARE MADE WITH THE STOVE ON AND RUNNING.**