


Guidelines

Hand tighten thermostatic head onto zone valve.

NOTE: Do Not use any tools when installing the thermostatic head onto the zone valve. Hand tighten **only!**

Setting the Thermostatic Head

1. Unlock the indicator clips by pulling them down.
2. To lock the indicator clips (creating a minimum and maximum temperature limit), push the clips up when aligned with the guides. Ensure that the setting arrow is between the indicator clips. The setting arrow cannot be moved past the locked indicator clips.
3. Align the setting arrow with the desired control setting (see table below).

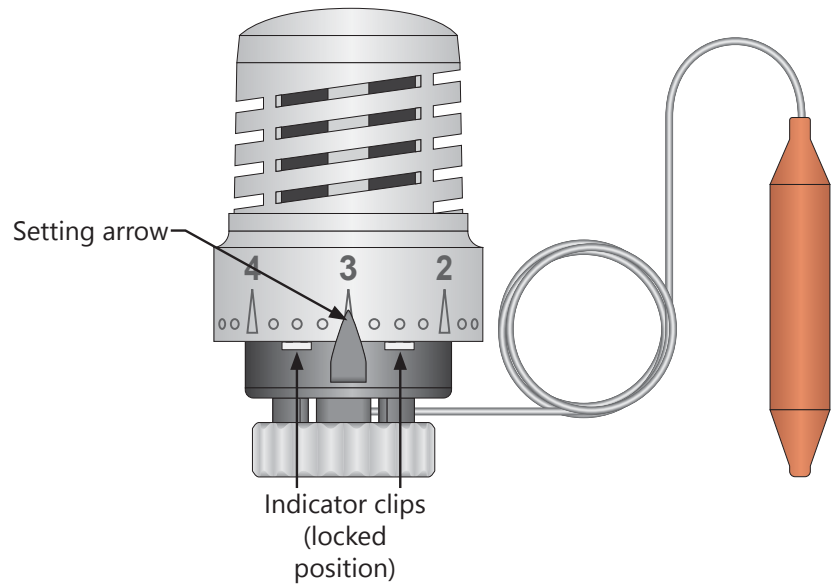

Control Settings

Setting	Temp.	
	(°F)	(°C)
1	68°F	20°C
2	82.4°F	28°C
3	98.6°F	37°C
4	113°F	45°C
5	127.4°F	53°C
6	143.6°F	62°C
7	158°F	70°C

