



Figure 1 is the front view of the fireplace. The Outside Air register inlet is high on the left side (blue arrow). I believe that the only air inlet is to the dilution box (Figure 2). The manual shows fresh air entering the fireplace low and from the front (Figure 3). I cannot find any fresh air inlet in that area of the fireplace. Figure 4 shows what I think is really happening: air comes down from up high, spills out the front door and some feeds the fire.

