



MODE 2 - If the house is calling for heat and the Jetstream is not being fired, the house draws heat from the storage tank.

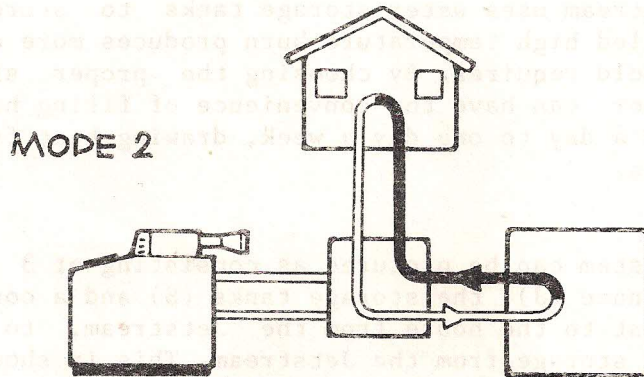

MODE 3 - If the house is calling for heat and the Jetstream is being fired, it is most efficient to bypass the storage and heat the house directly as shown below: - note - with the KERR System II when the house reaches the desired temperature, the controls automatically switch to heating the storage, thus no energy is wasted.

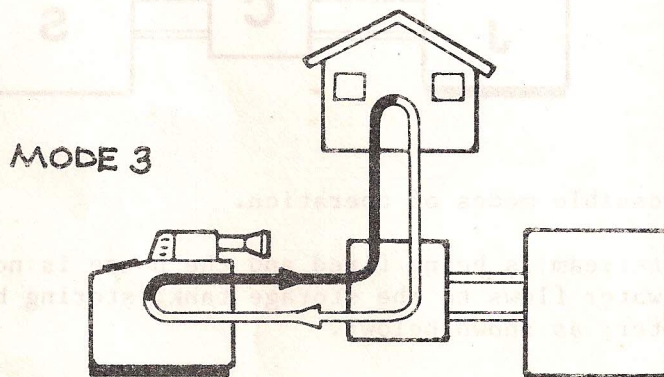

A backup furnace can provide heat when the Jetstream is not being fired and the storage is cold.