



B. Component Locations

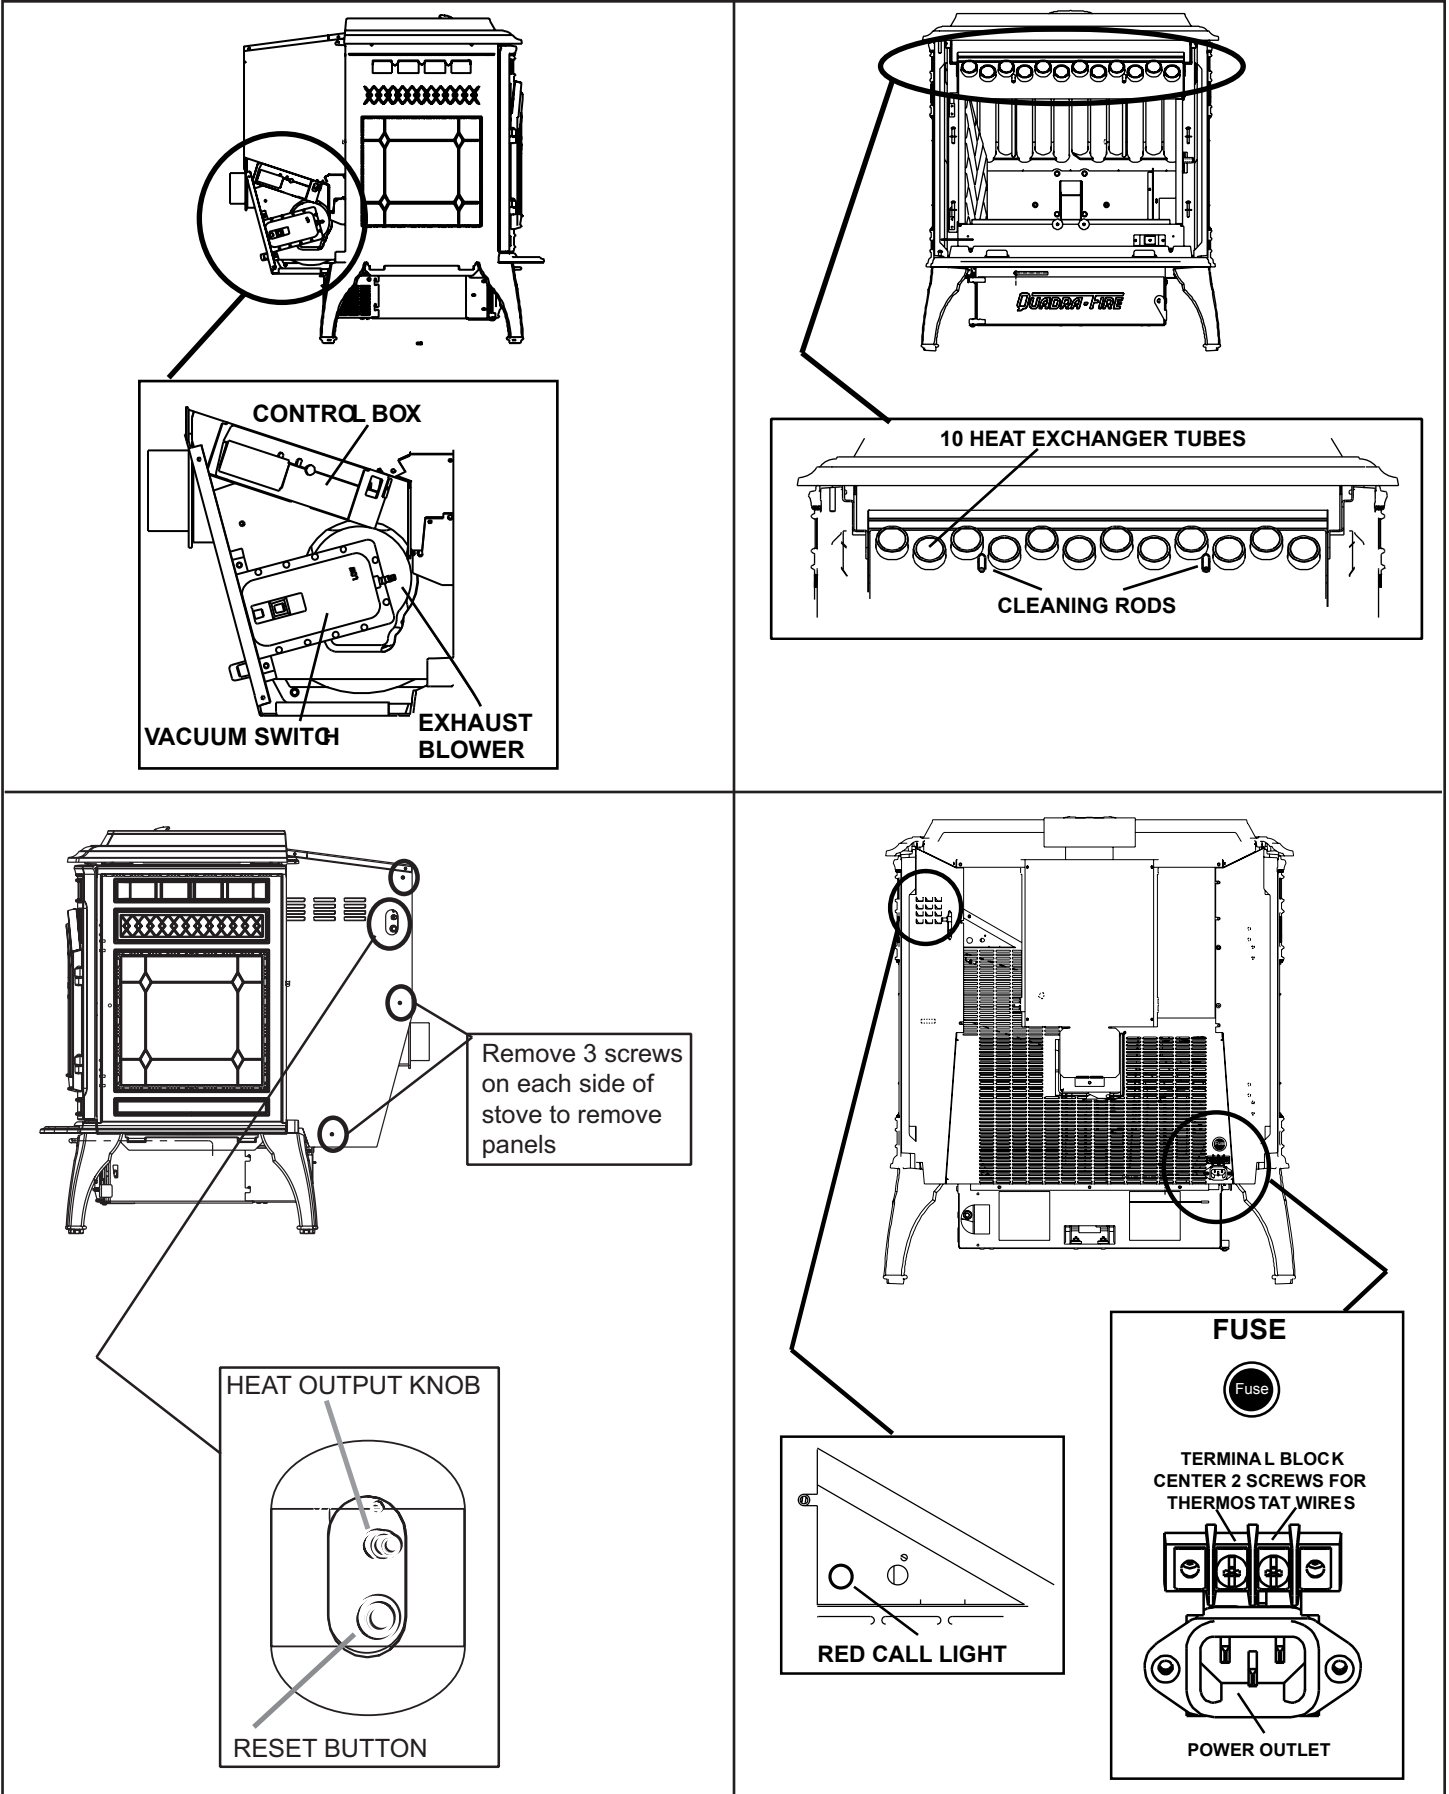


C. Exploded Views

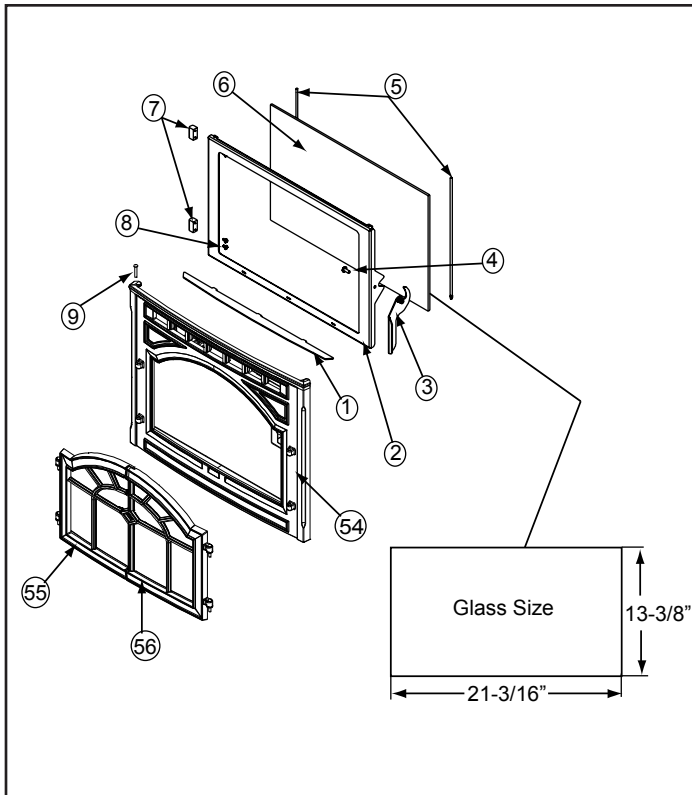


Item	Description	Part Number
1	Door, Cast, Left	See Service Parts
2	Door, Cast, Right	See Service Parts
3	Face, Cast	See Service Parts
4	Door Stiffener	7005-274
5	Door Frame for Glass	7005-273
6	Door Latch Assembly	7021-006
7	Screw 1/4-20 x 5/8 TH PHL	220-0440
8	Rope Retainer	7005-268
9	Glass Assembly with Gasket	7005-058
10	Hinge, Door	450-2910
11	Screw, 10-32 x 5/16 PH PHL MS ZC	229-1230
12	Hinge Pin (Rivet)	Gold: 72171 Nickel: 433-1590

Figure 35.1 - Door, Face, Glass & Door Latch Assembly

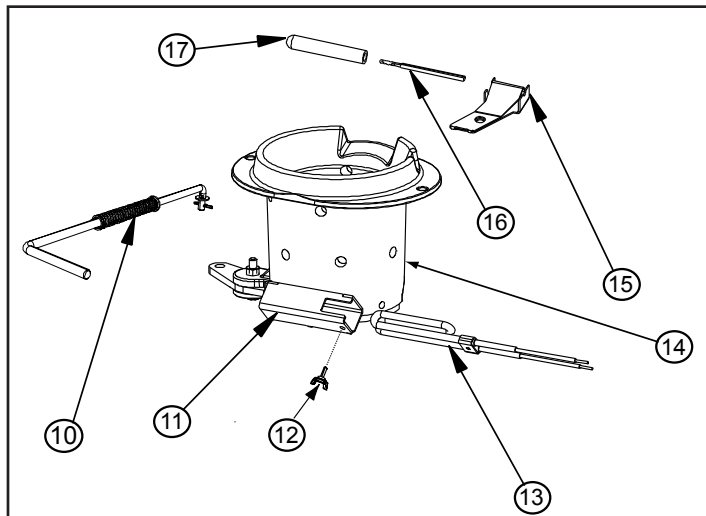


Item	Description	Part Number
10	Firepot Pull Rod	7005-019
11	Igniter Bracket	Not Replaceable
12	Thumb Screw	7000-223
13	Igniter	7000-020
14	Firepot	7005-031
15	Thermocouple	812-4470
16	Thermocouple Clamp	7001-203
17	Thermocouple Cover	812-1322

Figure 35.2 - Firepot Assembly

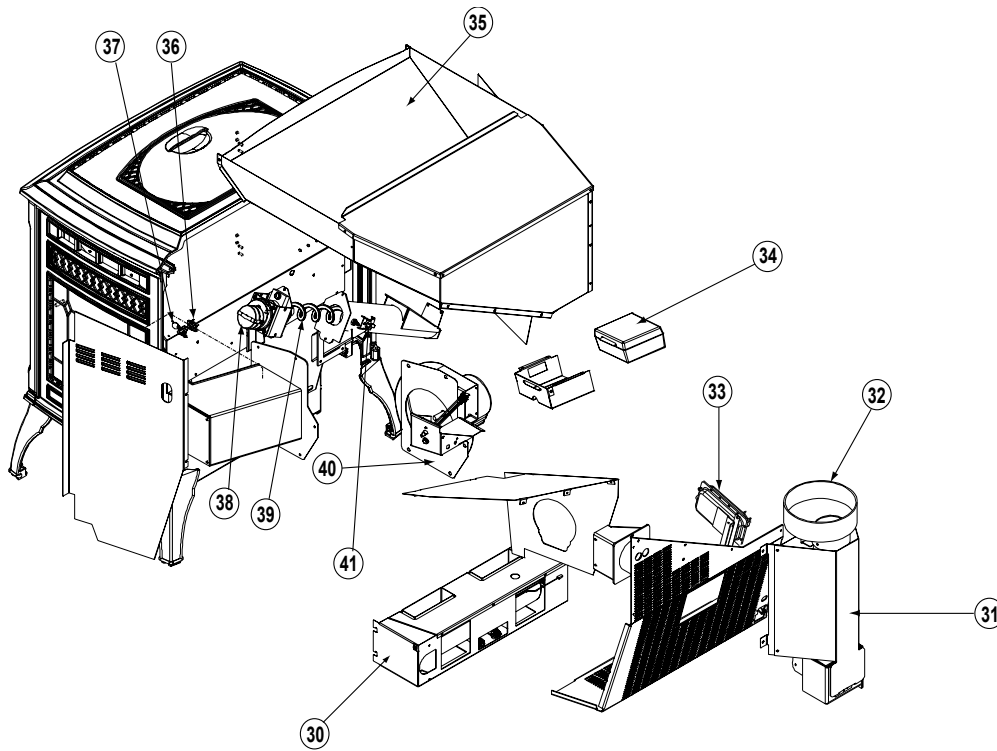

Nbr	Description
30	Convection Blower
31	Top Vent Adapter, 3 to 3 inch
32	Top Vent Offset Adapter, 3 to 6 inch
33	Vacuum Switch
34	Control Box
35	Hopper
36	Snap Disc #2, 200°
37	Snap Disc #1, 125°
38	Feed Motor Assembly
39	Feed Spring Assembly
40	Exhaust Blower
41	Snap Disc #3, 250°

Figure 36.1

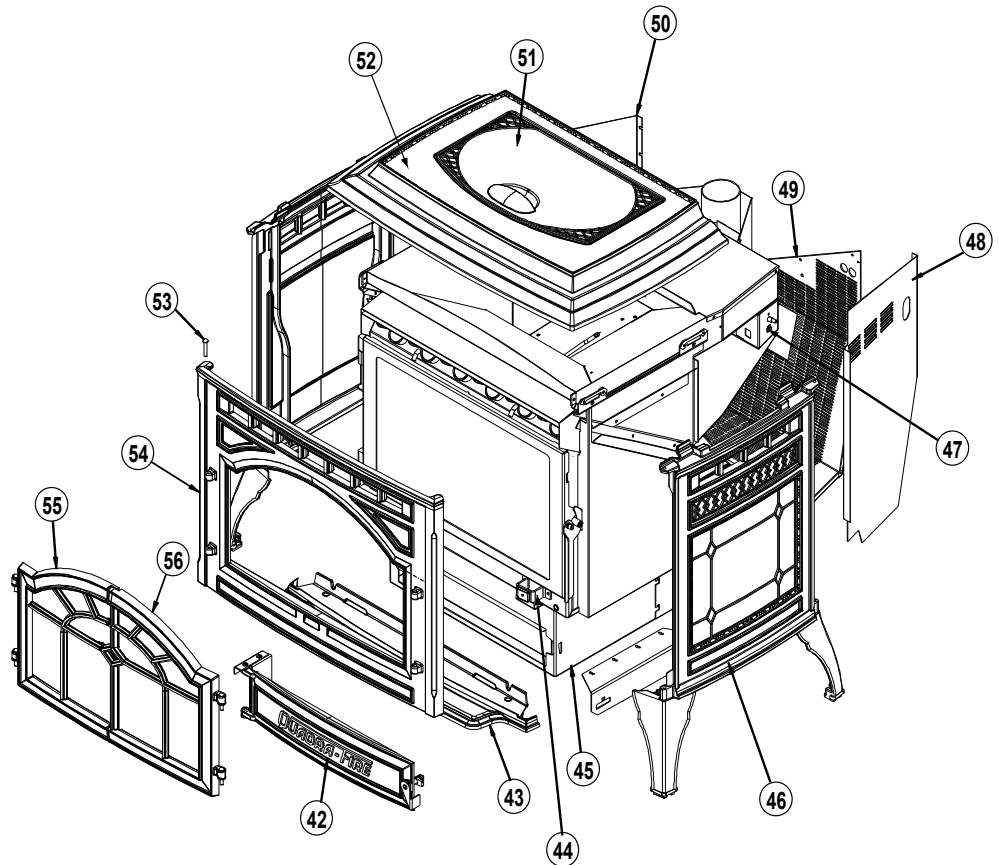

Nbr	Description
42	Ash Removal Door
43	Ash Lip
44	Magnet & Bracket
45	Ash Pan
46	Side, Cast
47	Reset Button
48	Panel, Right Side
49	Panel, Rear
50	Panel, Left Side
51	Hopper Lid
52	Top, Cast
53	Hinge Pin (Rivet)
54	Face Assembly
55	Door, Left
56	Door, Right

Figure 36.2