


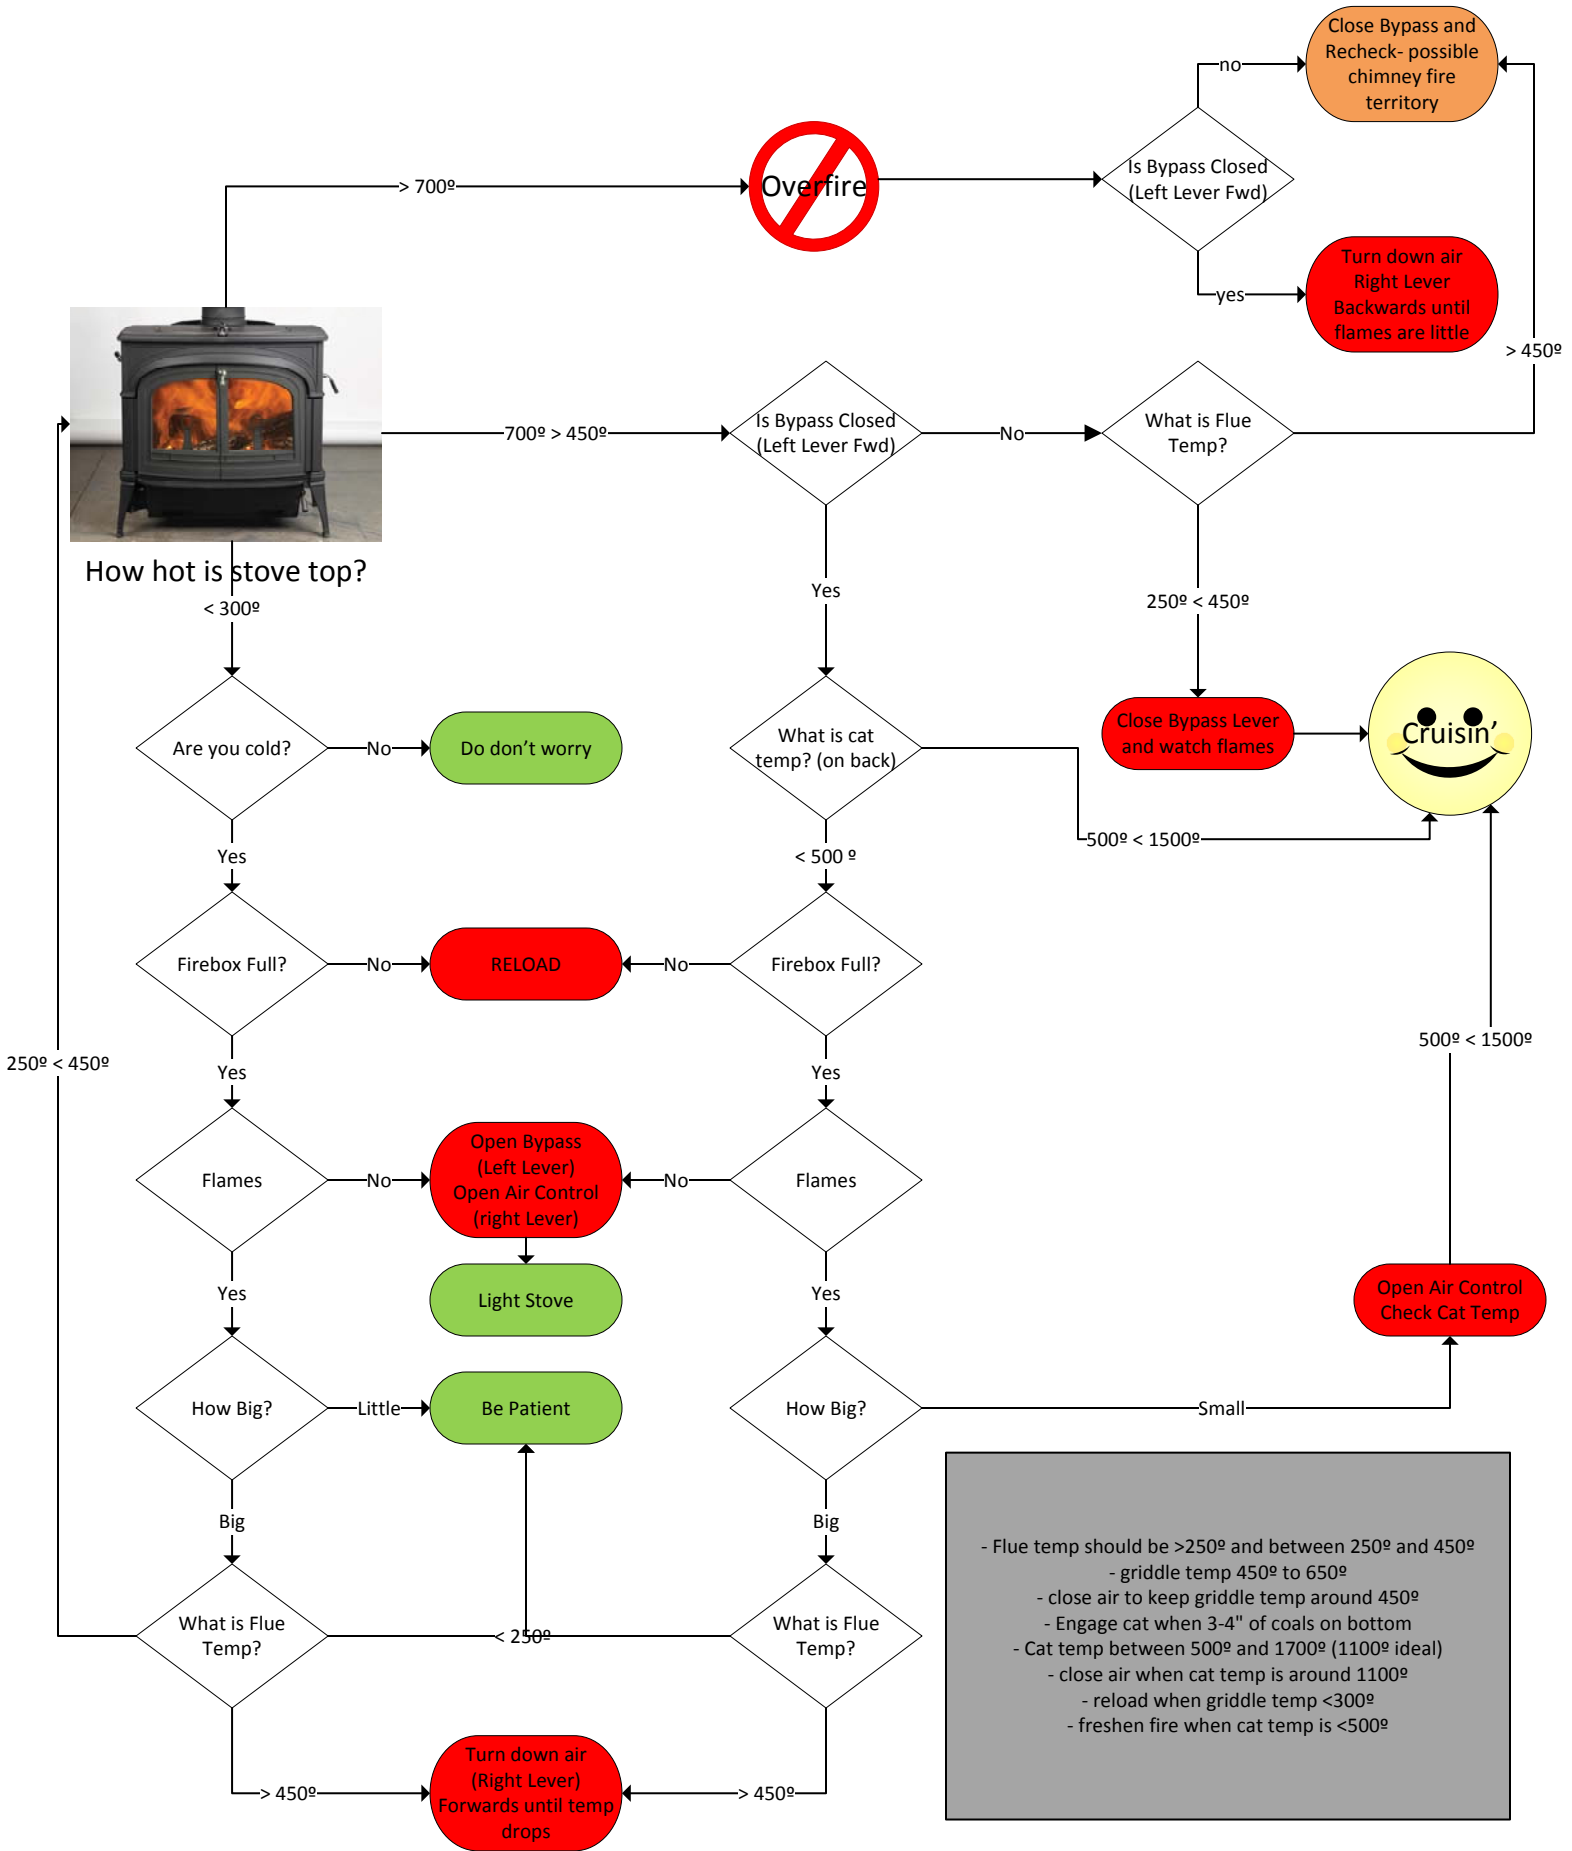

How hot is stove top?



- Flue temp should be >250° and between 250° and 450°
 - griddle temp 450° to 650°
 - close air to keep griddle temp around 450°
 - Engage cat when 3-4" of coals on bottom
 - Cat temp between 500° and 1700° (1100° ideal)
 - close air when cat temp is around 1100°
 - reload when griddle temp <300°
 - freshen fire when cat temp is <500°