





INSTALLATION AND OPERATION MANUAL

FREESTANDING
AND INSERT
PELLET FIRED
STOVES

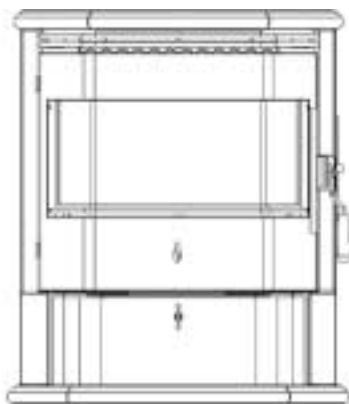

**Freestanding Model
Profile® 20 FS**

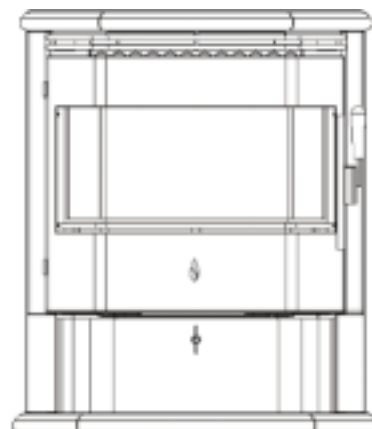

**Freestanding Model
Profile® 30 FS**

RETAIN THESE
INSTRUCTIONS
FOR FUTURE
REFERENCE



**Insert Model
Profile® 30 INS**

These appliances must be properly installed and operated in order to prevent the possibility of a house fire. Please read this entire owner's manual before installing and using your pellet stove. Failure to follow these instructions could result in property damage, bodily injury or even death. Contact your local building or fire officials to obtain a permit and information on any installation restrictions and inspection requirements in your area.



IMPORTANT WARNINGS

CAUTION: Read this manual thoroughly before starting installation. For your safety, follow the installation, operation and maintenance instructions exactly without deviation. Failure to follow these instructions may result in a possible fire hazard and will void the warranty. If this appliance is not properly installed, a house fire may result. Contact local building or fire officials about restrictions and installation inspection in your area.

1. DO NOT CONNECT THIS UNIT TO A CHIMNEY FLUE CONNECTED TO ANOTHER APPLIANCE.
2. Do not connect this appliance to air ducts or any air distribution system.
3. Do not install a flue damper in the exhaust venting system of this appliance.
4. Do not use class B venting intended for gas appliances as a chimney or connector pipe on a pellet fired appliance.
5. The minimum clearances must be maintained for all combustible surfaces and materials including; furniture, carpet, drapes, clothing, wood, papers, etc. Do not store firewood within this clearance space.
6. INSTALLATION DISCLAIMER - This stoves exhaust system works with negative combustion chamber pressure and a slightly positive chimney pressure. Therefore, it is imperative that the exhaust system be gas tight and installed correctly. Since Lennox Hearth Products has no control over the installation of your stove, Lennox Hearth Products grants no warranty, implied or stated for the installation or maintenance of your stove, and assumes no responsibility for any consequential damage(s).
7. Burning any kind of fuel consumes oxygen. If outside air is not ducted to the appliance, ensure that there is an adequate source of fresh air available to the room where the appliance is installed.
8. This stove is not intended for use in commercial installations other than where the stove is being sold without prior approval from Lennox Hearth Products.
9. The stove will not operate using natural draft, nor without a power source for the blower and fuel feeding systems.
10. Never use gasoline, gasoline-type lantern fuel, kerosene, charcoal lighter fluid, or similar liquids to start or "freshen up" a fire in this heater. Keep all such liquids well away from the heater while it is in use.
11. CONTINUOUS OPERATION: When operated correctly, this appliance cannot be overfired. Continuous operation at a maximum burn can, however, shorten the life of the electrical components (blowers, motors, and electronic controls), and is not recommended. Typical approved operation would include running at the low to mid range setting with occasional running on the maximum setting during the coldest periods of the winter. The blower speed control should be turned to high when operating the stove on the high heat setting.
12. CAUTION: NEVER PUT FINGERS NEAR AUGER. Pellet fuel is fed to the UltraGrate™ by a screw auger. This auger is driven by a high torque motor.
13. The auger is capable of doing serious harm to fingers. Keep pellets in the hopper at all times and keep fingers away from auger. The auger can start and stop automatically at any time while the stove is running.
14. CAUTION: HOT WHILE IN OPERATION. An appliance hot enough to warm your home can severely burn anyone touching it. Keep children, clothing and furniture away. Contact may cause skin burns. Do not let children touch the appliance. Train them to stay a safe distance from the unit.
15. APPROVED FUEL: This appliance is designed specifically for use only with pelletized wood fuels only. With its advanced UltraGrate™ technology, this appliance is designed and approved for the burning of wood residue pellets with up to 3% ash content. This appliance is NOT approved to burn cardboard, nut hulls, cherry pits, corn, etc. regardless if it is in pellet form. Failure to comply with this restriction will void all warranties and the safety listing of the stove. Consult with your authorized Lennox Hearth Products dealer for more information on approved pellet fuels and the proper UltraGrate™ for the fuels in your area.
16. FLYASH BUILD-UP: For all wood pellet fuel-burning heaters, the combustion gases will contain small particles of fly ash. This will vary due to the ash content of the fuel being burned. Over time, the fly ash will collect in the exhaust venting system and restrict the flow of the flue gases. The exhaust venting system should be inspected regularly and cleaned as necessary.
17. SOOT FORMATION Incomplete combustion, such as occurs during startup, shutdown, or incorrect operation of the room heater will lead to some soot formation which will collect in the exhaust venting system. A precautionary inspection on a regular basis is advisable to determine the necessity of cleaning. The exhaust venting system should be inspected regularly and cleaned as necessary.
18. DISPOSING OF ASHES: Any ashes removed from the pellet stove must be deposited in a metal container with a tight-fitting lid. The closed container of ashes should be placed on a noncombustible floor or on the ground, well away from all combustible materials, outside of the dwelling pending final disposal. If the ashes are disposed of by burial in soil or otherwise locally dispersed, they should be retained in the closed container until all cinders have been thoroughly cooled.
19. SAVE THESE INSTRUCTIONS.
20. See the listing label located on the back of stove (or see *Safety / Listing Labels* on pages 45 and 46).

TABLE OF CONTENTS

| | |
|---|-------|
| Important Warnings | 2 |
| Testing / Listing, EPA, Using this Manual | 3 |
| Planning Your Installation..... | 4-8 |
| Manufactured (Mobile) Home Installation | 8 |
| Installation | 9-19 |
| Care and Operation..... | 20-25 |
| Routine Maintenance..... | 26-28 |
| Annual Maintenance..... | 29-30 |
| Specifications | 31-33 |
| Definitions..... | 34 |
| Wiring Diagram | 35 |
| Troubleshooting..... | 36-37 |
| Replacement Parts List / Diagrams..... | 38-43 |
| Optional Accessories..... | 44 |
| Safety / Listing Label and EPA Label | 45-46 |
| Ownership Records..... | 47 |

LISTING / TESTING

Listing: The listing laboratory is ITS (Intertek Testing Services) and the listing mark is Warnock Hersey.

Testing: In accordance with the specifications and procedures listed in UL 1482 & ASTM E1509 for solid fuel room heater, this appliance has been independently tested to UL, ULC and CSA standards. UL 1482 states requirements for installations as a freestanding room heater, or hearth insert for masonry or listed factory built (zero clearance) fireplaces. The safety-listing label is located on an inside hopper surface of the pellet stove. Please read this safety label carefully. It contains important information about installation and operation of this appliance. This appliance is tested and listed for residential installation according to current national and local building codes as:

- A Freestanding Room Heater
- A Manufactured (mobile) Home Heater

EPA (Environmental Protection Agency)

Status: EPA Exempt - Pellet appliances that are designed with the combustion air supply exceeding the 35 to 1 (by weight) ratio are exempt from EPA regulations and are "non-affected facilities."

PRODUCT IS SUBJECT TO CHANGE WITHOUT NOTICE.

CONGRATULATIONS ON THE PURCHASE OF YOUR NEW PELLET STOVE MANUFACTURED BY LENNOX HEARTH PRODUCTS.

When you purchased your new pellet stove, you joined the ranks of thousands of concerned individuals whose answer to their home heating needs reflects their concern for aesthetics, efficiency and our environment. We extend our continued support to help you achieve the maximum benefit and enjoyment available from your new pellet stove.

It is our goal at Lennox Hearth Products to provide you, our valued customer, with an appliance that will ensure you years of trouble free warmth and pleasure.

Thank you for selecting a Lennox Hearth Products stove as the answer to your home heating needs.

Sincerely,
All of us at Lennox Hearth Products

PACKAGING LIST

The assembled pellet stove model Profile® 20 FS, Profile® 30-FS and Profile® 30 INS are packaged with an accessory package which contains the following:

- One - Installation and operation instructions manual.
- One - Warranty.
- One - Power cord.
- One- Control board – Profile® 30 INS only.
- One - Screw, #8 x ½" tek (for mounting control board) – Profile® 30 INS only.
- One - Grate scraper.
- One - Heat exchange tube brush – Profile® 30 Series only.
- One - Lower trim
- One - Wall thermostat.
- One - Roll of thermostat wire.
- Two- Leveling bolts, ¼-20 x 3" – Profile® 30 INS only.

Surround Kit (For Profile® 30 INS Only)

(Purchased separately, see page 44) kit is packaged with:

- One - Top surround panel.
- One - Left surround panel.
- One - Right surround panel with door.
- One - Left side trim.
- One - Right side trim.
- One - Top trim.
- Two - Corner keys ("L" shaped brackets).

USING THIS MANUAL

Please read and carefully follow all of the instructions found in this manual. Please pay special attention to the safety instructions provided in this manual. The homeowner's *Care and Operation Instructions* included here will assure you have many years of dependable and enjoyable service from your appliance.

PLANNING YOUR INSTALLATION

QUESTIONS TO ASK LOCAL BUILDING OFFICIAL

A correct installation is critical and imperative for reducing fire hazards and perilous conditions that can arise when wood pellet burning appliances are improperly installed. The installer must follow all of the manufacturers' instructions.

The installation of this appliance must conform to local codes and applicable state and federal requirements. Familiarity with these requirements before installation is essential. Important considerations to discuss with local building officials include:

1. Applicable codes (i.e. Uniform Mechanical Code, State or Regional Codes.)?

Electrical codes:

In USA, NEC, ANSI / NFPA 70-1987.

In Canada, CSA C22.1

Power Supply Requirements – The power cord must be plugged into a standard, 115 volt, 60 Hz grounded electrical outlet. The approximate power requirement is 200 watts, and will peak up to 700 watts for approximately 6 minutes when the self-igniter is operating (it will turn off 2 minutes after flame detection). The power cord must be routed to avoid contact with any of the hot or sharp exterior surface areas of the stove. When installed into a manufactured (mobile) home, the appliance must be electrically grounded to the steel chassis (see page 8, *Manufactured [Mobile] Home Requirements*). These requirements must be met unless otherwise specified by state or local authorities.

WARNING - Electrical Grounding Instructions: This appliance is equipped with a three-prong (grounding) plug for your protection against shock hazard and should be plugged directly into a properly grounded three-prong receptacle. Do not cut or remove the grounding prong from this plug.

2. Local amendments?
3. Is a permit required - cost?
(you may wish to contact your insurance company to ask if they require this).+
4. Is outside combustion air required?
5. Rooms where the installation is not allowed?

INSTALLATION / MAINTENANCE STANDARDS

National Fire Protection Association – The primary NFPA standard that refers to installation and maintenance of pellet appliances and venting is NFPA 211: Chimneys, Fireplaces, Vents, and Solid Fuel appliances, Latest Edition.

SELECTING A LOCATION

The design of your home and where you place your stove will determine its value as a source of heat. A wood stove depends primarily on air circulation (convection) to disperse its heat, and therefore, a central location is often best. There are other practical considerations, which must be considered before a final selection of locations is made.

- ◆ Existing Chimneys
- ◆ Pellet Fuel Storage
- ◆ Aesthetic Considerations
- ◆ Roof Design (rafter locations & roof pitch)
- ◆ Room Traffic
- ◆ Proximity to Combustibles
- ◆ Electrical Wiring

The installation of this stove will require some research. Once your options are determined, consult with your local building department who will be able to give you the necessary installation requirements for your area (Is a building permit required? Rooms where installation may not be allowed, etc.).

Warning: Check all local building and safety codes before installation. The installation instructions and appropriate code requirements must be followed exactly and without compromise. Alterations to the stove are not allowed. Do not connect the stove to a chimney system serving another stove, appliance, or any air distribution duct. Failure to follow these instructions will void the manufacturers warranty.


SMOKE DETECTORS

Since there are always several potential sources of fire in any home, we recommend installing smoke detectors. If possible, install the smoke detector in a hallway adjacent to the room (to reduce the possibility of occasional false activation from the heat produced by the stove). If your local code requires a smoke detector be installed within the same room, you must follow the requirements of your local code. Check with your local building department for requirements in your area.

PLANNING YOUR INSTALLATION

FLOOR PROTECTION - Profile® 20 FS & Profile® 30 FS

These appliances require non-combustible floor protection. The floor protector must be a 3/8" (minimum) UL approved hearth pad or equivalent. If the floor protection is to be stone, tile, brick, etc., it must be mortared or grouted to form a continuous non-combustible surface (see *Using Alternate Material as Floor Protector* on this page). If a chimney connector extends horizontally over the floor, the protection must cover the floor under the connector and at least 2" to either side.

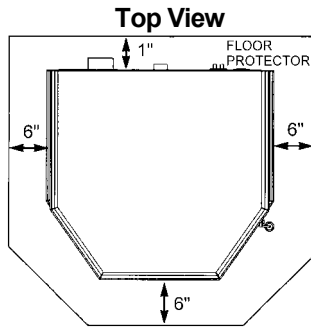

A non-combustible floor protector must fully cover the area beneath the appliance and extend 6" to the front, 6" to the sides, and 1" from the back (see illustration below).

FLOOR PROTECTION / HEARTH EXTENSION USING ALTERNATE MATERIAL AS FLOOR PROTECTOR (also see *Floor Protection* above for freestanding models and *Hearth Requirements*, page 7 for an insert model)

The alternate material used as a floor protector or hearth extension must be constructed of a durable non-combustible material having an equal or better insulating value (lower k value) of $k = 1.28 \text{ BTU} / \text{IN FT}^2 \text{ HR } ^\circ\text{F}$ or a thermal resistance that equals or exceeds $r = 78 \text{ HR } ^\circ\text{F FT}^2 \text{ IN} / \text{BTU}$. With these values, determine the minimum thickness / material required using the formula and the table shown here (see chart - *Alternative Floor Protection Materials*).

Note: Any noncombustible material having a thickness of 1" whose k value is less than 1.28 or whose r value is more than .78 is acceptable. If the alternate material used has a higher k value or lower r value will require a greater thickness of the material used. In some cases, if the k value is less or the r value higher, a thinner material may be used.

Methods of determining floor protection equivalents

To determine the thickness required for any material when either the k or r values are known:

T_M = Thickness of material in inches
 K_M = K value of desired material
 T_L = Minimum listed thickness

Example: Micore CV230 is to be used for the floor protection. How thick must this material be?

The following **formulas** give the means of determining minimum thickness required of alternate materials.

Using the **k formula**:

Desired thickness of the alternate material = $\frac{\text{k value of desired material (per inch)}}{\text{k value of listed material (per inch)}} \times \text{Minimum thickness of listed material}$

$$T_M (\text{inches}) = \frac{K_M}{1.28} \times T_L$$

$$T_M (\text{inches}) = \frac{0.43^* \times 1''}{1.28}$$

Answer using $k = 0.34 \times 1'' = 0.34 = 3/8''$ thickness Micore will be required.

Using the **r formula**:

$$T_M (\text{inches}) = \frac{0.78}{r_M} \times T_L$$

$$T_M (\text{inches}) = \frac{0.78 \times 1''}{2.33^*}$$

Answer using $r = 0.34 \times 1'' = .034 = 3/8''$ thickness Micore will be required.

At times it is important to know what combination of materials are acceptable for use as floor protection. The "R values" are used to determine acceptable combinations of materials because "R values" are additive where r and k values are not.

"R value" = $\frac{1}{k} = r \times \text{thickness of material used}$

ALTERNATIVE FLOOR PROTECTION MATERIALS

| Listed Material | Values | | Min. Thick |
|-------------------------------|--------------|--------------|------------|
| | k (per inch) | r (per inch) | T_L |
| Millboard | 1.28 | 0.78 | 1" |
| Alternative Materials | Values | | Min. Thick |
| | k (per inch) | r (per inch) | T_L |
| Wonderboard | 1.92 | 0.56 | 1 1/2" |
| Common brick | 5.00 | 0.20 | 3 7/8" |
| Cement mortar | 5.00 | 0.20 | 3 7/8" |
| Ceramic tile | 12.5 | 0.08 | 9 3/4" |
| Marble | 11.0 | 0.09 | 8 5/8" |
| Micore CV230 (U.S. Gypsum) | 0.43 | 2.33 | 3/8" |
| Ceraform 126 (Johns-Manville) | 0.27 | 3.70 | 1/4" |

Example: Given that the required "R value" for a suitable floor protector used must be equal to or greater than: "R" = $r \times T_L = 0.78 \times 1'' = 0.78$.

PLANNING YOUR INSTALLATION

Clearances to combustibles are determined from testing to applicable standards for allowable heat transfer. The clearances allowed as shown here, do not take into account operation or serviceability requirements.

CLEARANCES

Profile® 20 FS and Profile® 30 FS - Standard residential or manufactured (mobile) home installation. These appliances require the following minimum clearances to combustibles:


MINIMUM CLEARANCES TO COMBUSTIBLES

| Profile® 20 FS | Manufactured (Mobile) Home or Residential Installation | |
|--|--|------------------------|
| | Horizontal Flue – Directly Through Wall | Interior Vertical Flue |
| | inch / millimeter | inch / millimeter |
| A - Sidewall to unit | ◆4" / 102 mm | ◆4" / 102 mm |
| B – Backwall to unit | 1" / 26 mm | 9" / 229 mm |
| C – Sidewall to unit Corner | 1" / 26 mm | 1" / 26 mm |
| D – Max. Depth of Alcove | ●24" / 610 mm | ●24" / 610 mm |
| E – Flue to Wall | 3" / 77 mm | 3" / 77 mm |
| ◆ Measured to fuel hopper lid in alcove. | | |
| ● Minimum Alcove Measurements - Height 48" / 1220 mm Width 31" / 788 mm | | |


| Profile® 30 FS | Manufactured (Mobile) Home or Residential Installation | |
|--|--|------------------------|
| | Horizontal Flue – Directly Through Wall | Interior Vertical Flue |
| | inch / millimeter | inch / millimeter |
| A - Sidewall to unit | ◆6" / 153 mm | ◆6" / 153 mm |
| B – Backwall to unit | 1" / 26 mm | 9" / 229 mm |
| C – Sidewall to unit Corner | 1" / 26 mm | 1" / 26 mm |
| D – Max. Depth of Alcove | ●16" / 407 mm | ●16" / 407 mm |
| E – Flue to Wall | 3" / 77 mm | 3" / 77 mm |
| ◆ Measured to fuel hopper in alcove. | | |
| ● Minimum alcove measurements - Height 48" / 1220 mm Width 38" / 966 mm | | |

- Minimum clearances specified may not allow for ease of operation and maintenance (please take this in to account when planning the installation). If installed to the minimum clearances, removal of the appliance may be necessary for servicing.


Rear Wall or Alcove - Profile® 20 FS and Profile® 30 FS

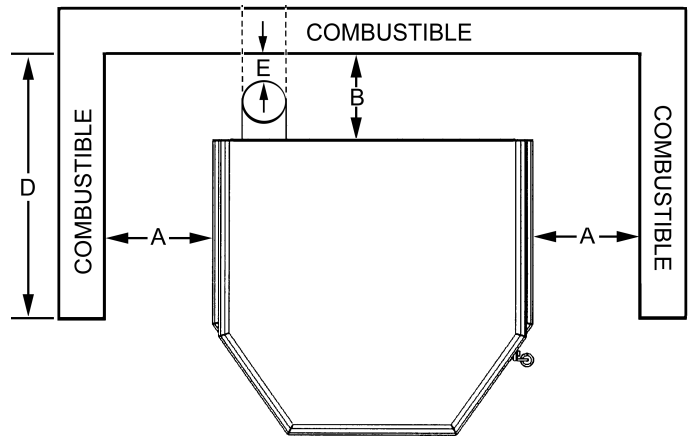

Corner - Profile® 20 FS

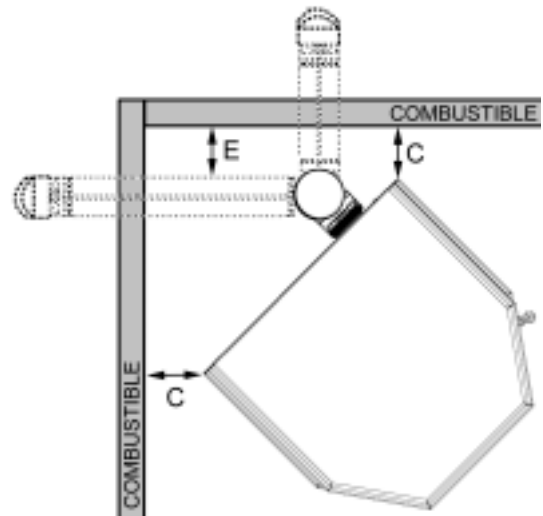

Corner - Profile® 30 FS

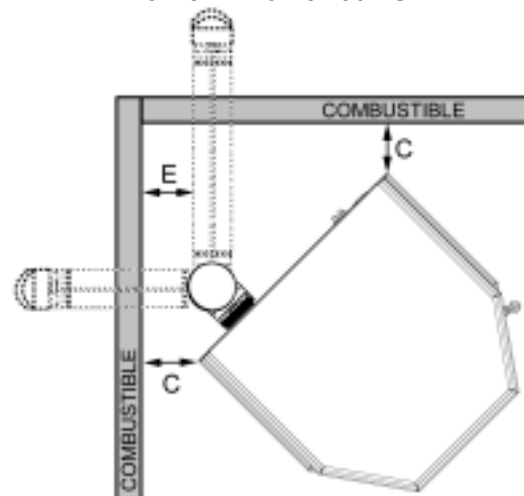

PLANNING YOUR INSTALLATION


Clearances to combustibles are determined from testing to applicable standards for allowable heat transfer. The clearances allowed as shown here, do not take into account operation or serviceability requirements.

MASONRY AND ZERO CLEARANCE FIREPLACES

The model Profile[®] 30 INS is approved for installation into a solid fuel burning fireplace, either a masonry fireplace or an approved factory-built / zero clearance fireplace (see pages 18 and 19 for additional information on venting).

Dimensions Into a Fireplace

| | |
|--|------------------|
| Height | 20 1/8" / 512 mm |
| Width @ Front (extends back 1 1/2") | 32" / 814 mm |
| Width @ back | 24 5/8" / 626 mm |
| Depth | 17 3/4" / 452 mm |

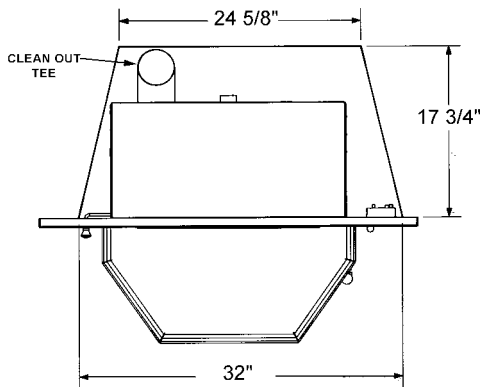

CAUTION: The fireplace in which the Profile[®] 30 INS is to be installed must be thoroughly cleaned if it has been used to burn wood or synthetic logs. Have the chimney and all inside surfaces of the fireplace brushed and vacuumed so that no soot, embers, or loose combustion deposits can be drawn into the heat circulation blower and blown into the living area. If any portion of the chimney system shows signs of structural or mechanical weaknesses, such as: cracks, leaky joints, corroded or warped surfaces, the faulty portion must be repaired or replaced prior to installing this appliance.

IMPORTANT: When installing the Profile[®] 30 INS into a factory built fireplace, the firebox must accept the insert without modification other than removing bolted or screwed together pieces such as smoke shelf / deflectors, ash lips, screen or door tracks and damper assemblies. Any fireplace component which is removed must be retained so they can be reinstalled to restore the fireplace to its original operating condition. The removal of any part must not alter the integrity of the outer shell of the pre-engineered fireplace cabinet in any way.

HEARTH REQUIREMENTS / FLOOR PROTECTION

Profile[®] 30 INS



The area directly in front of the Profile[®] 30 INS must be protected by a noncombustible material or a fireplace hearth or hearth extension as follows:

Combustible flooring must be protected by non-combustible material in Canada and 10 millimeter (3 / 8 inches) millboard or equivalent non-combustible in U.S. extending beneath the heater and to the front as indicated or to the nearest permitted combustible material. See page 5 for requirements when using alternate material as hearth extension.

The protected area must extend 6" to the front of the face of the Profile[®] 30 INS.

MINIMUM CLEARANCES TO COMBUSTIBLES

| | inches / millimeters |
|-------------------------|----------------------|
| A - Insert to side wall | 6" / 153 mm |
| B - Insert to side trim | 1" / 26 mm |
| C - Hearth extension | 6" / 153 mm |
| D - Insert to mantel | 18" / 458 mm |
| E - Insert to top trim | 1" / 26 mm |

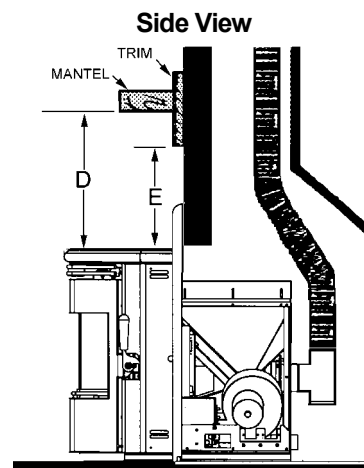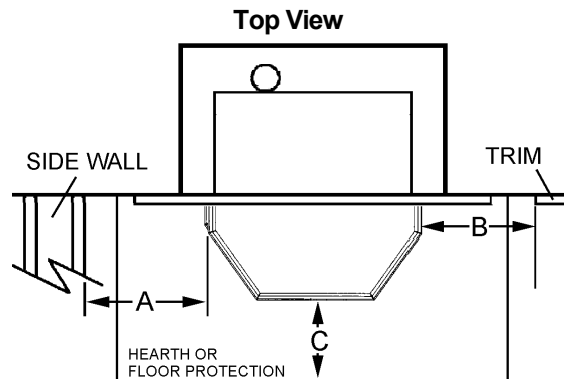

PLANNING YOUR INSTALLATION


MANUFACTURED (MOBILE) HOME INSTALLATION Freestanding Models – Profile® 20 FS and Profile® 30 FS

In addition to the standard installation instructions, the following instructions may be required by local, state or federal building codes:

- Stove must be permanently bolted to the floor.
- An outside air inlet must be provided for combustion and be unrestricted while unit is in use.
- Stove must be permanently electrically grounded to the steel chassis of the home. The location selected for ground attachment to the stove must be dedicated for this purpose.
- See pages 12 through 17 for additional information on venting requirements.
- Do not install appliance in a sleeping room.
- The structural integrity of the manufactured home floor, walls, ceiling and roof must be maintained.

NOTE: The grounding of this product, at installation, must comply with NFPA-70 standards, CSA C22.1 in Canada, as well as any local codes.

Models – Profile® 20 FS and Profile® 30 FS

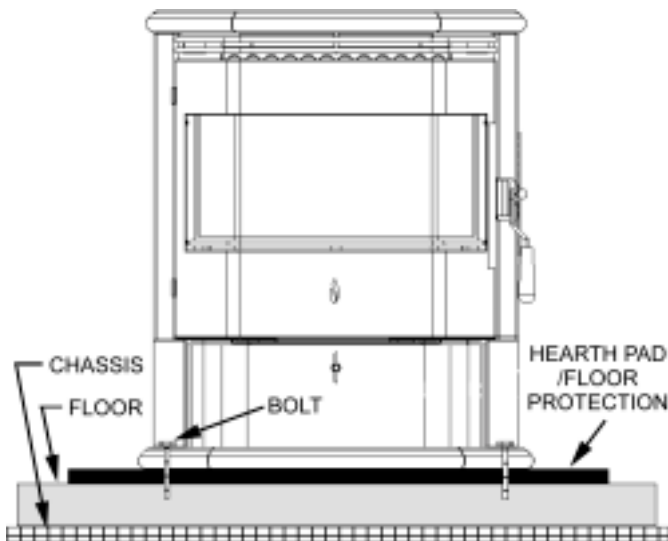

MANUFACTURED (MOBILE) HOME EXHAUST VENT PIPE INSTALLATION GUIDELINES


Use only listed type “PL” pellet vent pipe. Pipe should extend at least 3 feet above the part of the roof through which it passes. The top of the pipe should be at least 2 feet above the highest required elevation of any part of the manufactured (mobile) home within 10 feet of the pipe.

If the exhaust vent exits the manufactured (mobile) home at a location other than the roof, and exits at a point 7 feet or less above the ground level on which the manufactured (mobile) home is positioned, a guard or method of enclosing the pipe shall be provided at the point of exit for a height of up to 7 feet. The openings, if any, in this guard shall not allow a 3/4” rod to pass through. A 1/2” rod could pass through but should not be able to touch the pipe when inserted through the opening a distance of 4 inches.

INSTALLATION

REMOVING APPLIANCE FROM PALLET

1. After removing the packaging from the stove, lift the hopper lid, and remove all pre-packaged items that were shipped in the hopper. Next, open the stove door and remove all pre-packaged items.
2. Using a 7/16" socket or open end wrench, remove the bolts which secure stove to pallet. The bolts are located on the underside of the wooden pallet.

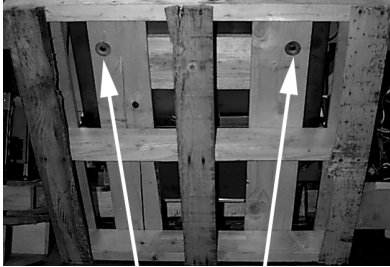

Remove the three bolts from underneath the pallet.

NOTE: Bolts may be used in manufactured (mobile) home installation to permanently secure stove to floor (see previous page).

INSTALLATION CHECK LIST

It is strongly recommended that you have an authorized Lennox Hearth Products dealer install your stove. If you install your stove yourself, you should review your installation plan with an authorized Lennox Hearth Products dealer.

Check list:

Check off each item as you proceed with the installation process.

- Read the ENTIRE stove installation section first
- Read the Insert or Freestanding section (whichever applies).
- Determine the appropriate measurements and locations for your installation.
- Follow the general installation directions under Stove Installation and the installation section appropriate to your stove.
- Be sure to pre-fit all items before you install, fasten, or set up the stove permanently.

Prior to lighting your stove:

- Review the safety precautions section.
- Review the pellet fuels section.
- Review the Operating Instructions.
- Follow the Operating Instructions.
- Plug power cord connector into corresponding connector on the back of appliance (see illustrations on page 11 showing connector locations).
Note: Profile® 30 INS – Route power cord behind side surround panel.

After you have begun operation of your stove:

- Review the routine cleaning / maintenance information.
- Enjoy the warmth from your new Lennox Hearth Products pellet stove!

It is important to level the appliance. In some installations such as a recessed firebox floor (if the existing fireplace floor is lower than the hearth), install the 2 leveling bolts (1/4-20 x 3" long) into the threaded holes at the rear base of the Profile® 30 INS. Adjust bolts until appliance is level.


INSTALLING SURROUND ASSEMBLY - Profile® 30 INS (to be done after venting system is installed)

This appliance comes with a set of metal panels that enclose the fireplace opening when fitted together. There is also a trim assembly that frames the surround assembly to give it an attractive finished appearance. Put the surround assembly together according to the following instructions (ref. see illustration on page 44).

1. Remove panels from package.
2. Open the hopper lid on Profile® 30 INS so it is out of the way for when panels are installed.
3. Install the control board onto the right side panel (with door) using the TEK screw (#8 x 1/2") provided.
4. Position the power cord so that it will be behind either the right or left side surround panel when they are installed.
5. Install right side surround panel onto right side of the Profile® 30 INS body by sliding the 2 flanges on side of panel into corresponding slots on the Profile® 30 INS.
6. Connect the wiring harness from the Profile® 30 INS into corresponding connector on control board.
7. Locate damper rod on left side of the Profile® 30 INS. Rotate angled arm of rod so it is pointing down. Remove damper knob and set aside.
8. Install the left-hand panel onto the left side of Profile® 30 INS body by sliding the 2 flanges on side of panel into corresponding slots on the Profile® 30 INS.
9. Reach behind left surround panel and rotate damper arm so that end is inserted into the upper right hand slot of left surround panel (see illustration on page 10, Profile® 30 INS).
10. Reinstall damper knob by threading it onto end of damper rod.
11. Set the top surround panel in place over the two side panels. Position the 2 tabs on bottom of top surround panel so they slide into corresponding clips on the Profile® 30 INS. Connect the top surround panel to the side panels by pressing pins from side panels into corresponding holes on top panel.
12. Remove the surround trim from its packaging. Assemble it together using the corner keys ("L" shaped brackets) provided. Slide assembled trim over the top surround panel and slide it down over the side panels.
13. Push the Profile® 30 INS back into place so the surround is flush with the face of the hearth.

INSTALLATION

Profile® 30 INS (Only) – Install damper rod knob as illustrated below and explained on page 9 (see, *Installing Surround Assembly – Profile® 30 INS*).

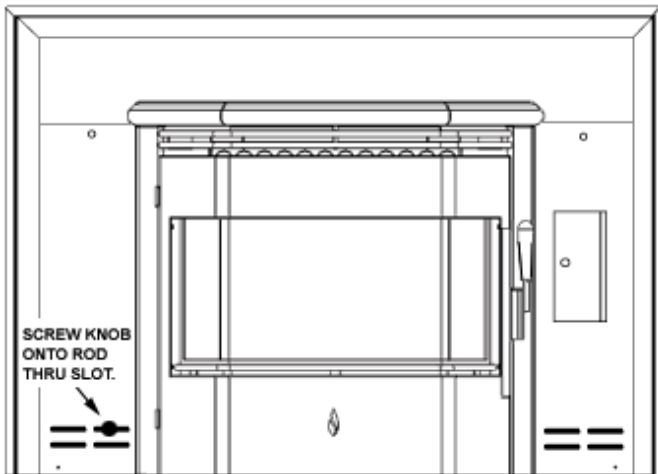

Install Damper Knob during Surround Installation (see page 9)

Damper Locations

See 'Opening Side Panels', page 30 for instructions on opening the side panels for models Profile® 20 FS & Profile® 30 FS. See 'Installing Surround Assembly' for instructions on side surround panel access for model Profile 30 INS.

Profile® 20 FS - The damper is located behind the right-hand side panel.

Profile® 30 FS - The damper is located behind the left-hand side panel.

Profile® 30 INS - The damper rod is located on the left surround panel.

Damper Adjustment

It is very important to preset your damper prior to burning your pellet stove.

The damper plate contains nine notches spaced in 1/8" increments that aid in positioning (see figures A & B).

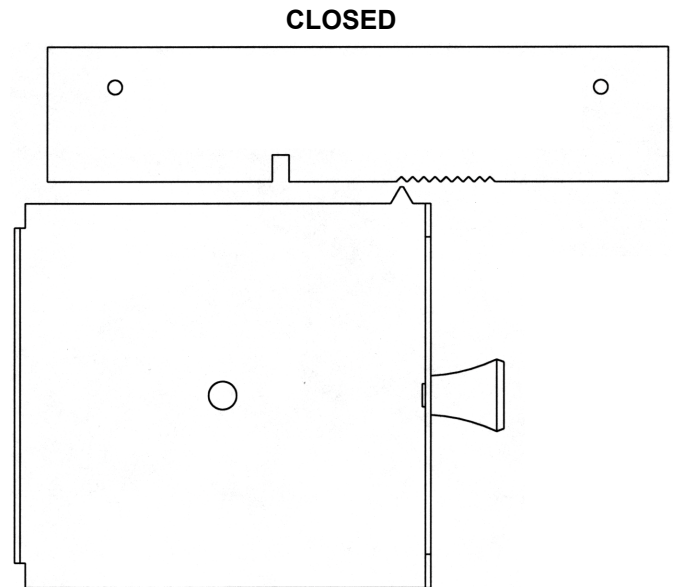


Fig. A

For initial setup, push the damper all the way in (when facing the front of the stove, in is to the center of the stove, and out is away from the center of the stove) and slowly pull back three to four notches (see figure B). This setting should provide an adequate air to fuel ratio for most installations.

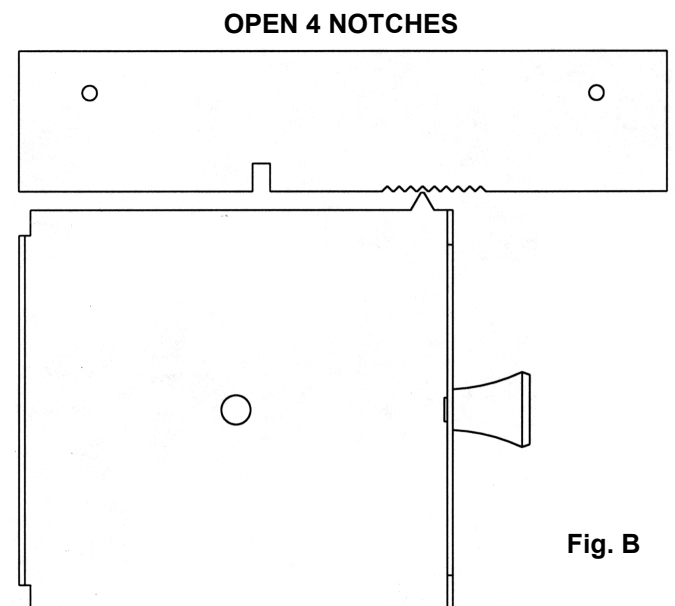


Fig. B

INSTALLATION

THERMOSTAT INSTALLATION:

NOTE: Always Disconnect Power Before Performing The Thermostat Installation.


A 24 volt wall thermostat and 20 feet of 18-gage thermostat wire is included in your stoves accessory package. It is recommended that the thermostat and thermostat wire be installed by an authorized Lennox Hearth Products dealer.

Installation Steps:


1. Unplug stove power cord from the wall outlet.
2. Locate the thermostat terminal block (see illustrations below).
3. Loosen the two terminal screws on the terminal block and remove the jumper.
4. Connect the two wires from your thermostat to the terminals (one per terminal). Ensure that the purple wires from the harness remain connected to the terminal block and tighten the terminal screws. Make sure the wires are firmly connected to the thermostat.
5. Plug in the stove and you are ready to operate with your thermostat!

NOTE: If the wall thermostat provided is not used, the jumper is required for the stove to operate.

Model: Profile® 30 FS

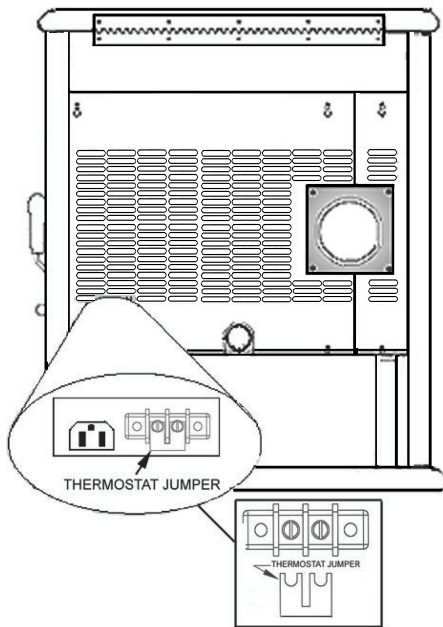


Model: Profile® 30 INS

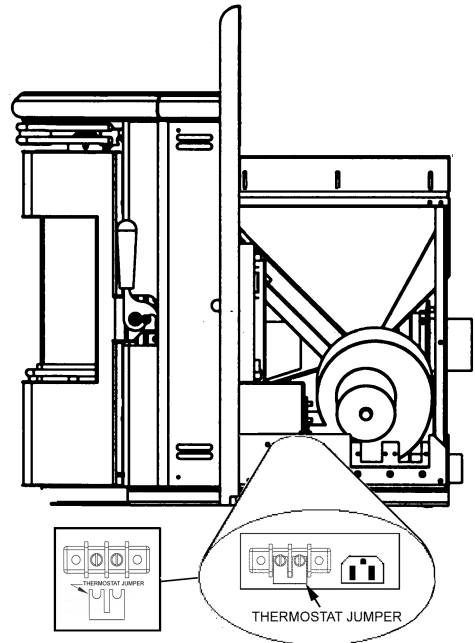

NOTE: Also see page 35 for additional information on terminal blocks.

Model: Profile® 20 FS

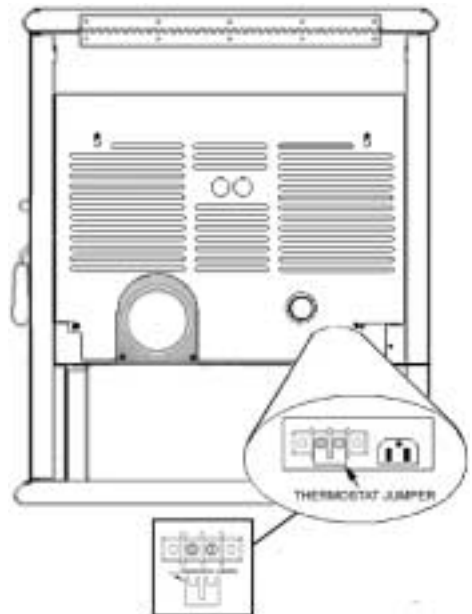

INSTALLTION

VENTING REQUIREMENTS

It is recommended that only an authorized dealer install your pellet stove. The specified installation requirements must be followed to ensure conformity with both the safety listing of the appliance and local building codes. All clearances, installation instructions and precautions specified by the vent manufacturer must be followed.

Selecting a Location (Freestanding Models)- Review the appliance clearance requirements before installing the venting system (see page 6). Position the appliance far enough away from walls to allow adequate room for servicing. Choose the appliance location with the least amount of interference with the house framing, plumbing, wiring, etc.

Preferred Vent Configuration – For the best performance, we recommend a vent run design which runs vertically and terminates above the roofline. This design will allow natural draft to improve the flow of flue gases and will aid in combustion and stove performance.

Type of Pipe – This stove requires type “PL” (pellet vent pipe, sometimes referred to as “L-Vent pellet vent”), which conforms to UL standard 641. Connect the pellet vent pipe or the “tee” to the flue collar using a minimum of three screws and seal as specified in “Pipe / Liner Joint Requirements” on this page. Do not use class B gas chimney or single wall chimney as a substitute.

Size of Pipe -These pellet appliances are approved for use with the following vent sizes: 3” / 75mm standard, or 4” / 100mm (see page 14 - for determining correct size vent). Use a 3” / 75mm to 4” / 100mm adapter (Cat. No. 14M81) or a 3” / 75mm to 4” / 100mm “tee” in order to run 4” / 100mm pipe.

Offsets - In every installation, a single or double clean-out “tee” is recommended for every ninety-degree offset (this tee will help collect ash residue and will allow for routine cleaning without the need to disconnect sections of pipe).

Note: Offsets and horizontal runs accumulate fly ash and soot which reduces the exhaust flow and performance of the stove.

Total Offsets in venting system should not exceed 270° total in direction change.

Horizontal Runs - The maximum total horizontal run must not exceed 10 feet (3.1 meters).

Horizontal run of pipe requires 1/4” / 7 mm rise per foot.

Pipe Clearances / Requirements – See pipe manufacturers instructions for installation of venting components and clearances. Follow pipe manufacturers installation precautions for passing pipe through a combustible wall or ceiling (i.e. use an approved thimble).

Notes:

Pellet vent pipe requires 3” / 75mm clearance from outside of pipe unless otherwise specified by vent manufacturer (all diameters: 3” / 75mm and 4” / 100mm).

A support bracket should be installed every 4’ (1.2m) of pellet vent pipe on the exterior wall of the house unless otherwise specified by vent manufacturer.

Pipe / Liner Joint Requirements - All pipe joints must be secured with a minimum of 3 screws. ALL horizontal joints must be sealed gas tight. Use RTV silicone with a rating of at least 570° F (969° C), or Interam to provide a complete seal at the flue collar and on all joints.

Connection to Masonry Chimney through a Wall (Freestanding Models) - Be sure to verify the construction of a masonry chimney, as it may have combustible framing.

The use of single wall flex or rigid 24 gage stainless steel pipe as a liner is approved.

Connection to an Existing Class A Chimney (Freestanding Models) - A chimney adapter can be used to make the connection from 3” / 75mm or 4” / 100mm pellet vent pipe to existing UL chimney system. Verify with the pipe manufacturer that your pipe brands will interconnect. The use of single wall flex or rigid pipe (24 gage stainless steel) as a liner is approved.

Direct-Vent Installations (Horizontal): On all direct-vent installations (short, horizontal runs with no vertical pipe); care should be taken when choosing a location for terminating the vent. It is not recommended to directly vent the exhaust on the prevailing wind side of the house. It is recommended that when an appliance is vented directly through a wall, a minimum of 8’ (2.5m) of vertical pipe should be installed to create some natural draft. This will reduce the possibility of smoke or odor entering the dwelling during appliance shutdown or loss of power.

INSTALLTION

VENT TERMINATION

Do not terminate vent in an enclosed or semi-enclosed area such as: carports, garage, attic, crawl space, under a deck, porch, narrow walkway, closely fenced area, or any location that can build up a concentration of fumes such as a stairwell, covered breezeway etc.

Vent surfaces can get hot enough to cause burns if touched. Adults should supervise children when they are in the area of a hot stove. Non-combustible shielding or guards may be required.

Termination Cap: The termination of the outside chimney of the pellet stove shall be located in accordance with the following:


- A. Higher than 3' (.92m) above any forced air inlet (air conditioner, etc.) located within 10' (3m).
- B. Not less than 4' (1.2m) below, 4' (1.2m) horizontally from or 1' (3.1m) above any gravity air inlet (door, window, etc.) which flue gases could re-enter the dwelling.
- C. Not less than 2' (.6m) from combustible materials such as an adjacent buildings, fences, protruding parts of the structure, roof overhang, plants and shrubs, etc. and not less than 7' (2.1m) above grade when located adjacent to the public sidewalks (access). The final termination of the exhaust system must be configured so that flue gases do not jeopardize the safety of people passing by, overheat combustible portions of nearby structures or enter the dwelling.
- D. Not less than 3' (.92m) below an eave (maximum overhang of 3' (.92m) or any construction that projects more than 2" (51mm) from the plane of the wall.
- E. The distance from the bottom of termination to grade is 12" (305mm) minimum. This is conditional upon plants and nature of grade surface: Be careful to choose a location for the vent termination which does not expose people or shrubs to high heat from the exhaust gases. The exhaust gases are not hot enough to ignite grass, plants and shrubs located in the vicinity of the termination although they should be a minimum of 3' (.92m) away. The grade surface under the termination must not be a lawn.
- F. Since sparks may escape from the exhaust pipe of any stove, use caution when positioning the vent pipe. Refer to pipe manufacturer's instructions when installing and terminating the exhaust. The vent pipe should be horizontal and never run the pipe in a downward direction (recommend a ¼" (7mm) rise per foot horizontal).

Notes:

- It is not recommended to terminate exhaust vent on the prevailing wind side of the house.
- It is not recommended using a termination cap with a screen (fly ash can collect in a screen resulting in blockage).


Chimney Height Requirements

The vent termination height required is 12" minimum above the roof penetration point as illustrated below (Ref. National Standard, NFPA 7-4.1). Check with your local building official for additional requirements for your area.

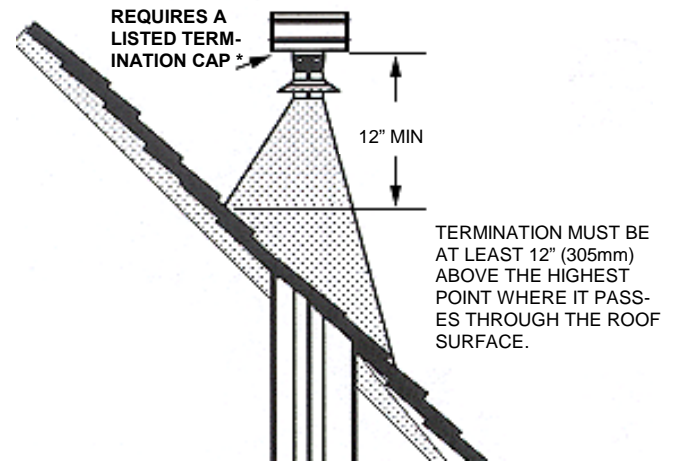

Manufactured (Mobile) Home Chimney Height Requirements

The chimney must extend 3' (.92m) above the level of roof penetration and a minimum of 2' (.61m) higher than any roof surface within 10' (3m) (see below). Check with your local building officials for additional requirements for your area.

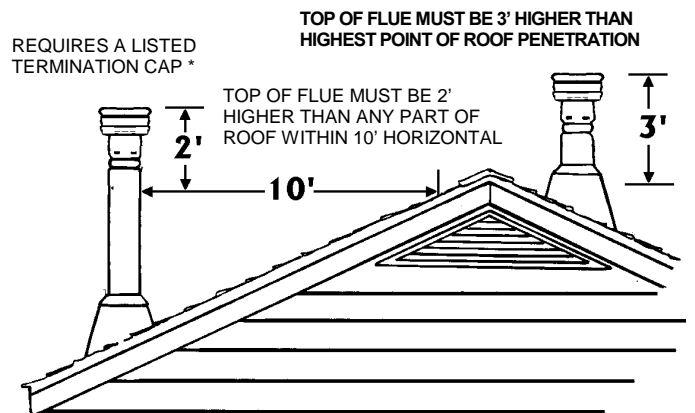

To pass inspection in nearly any jurisdiction, the chimney must meet both safety and exhaust flow requirements. The (3' by) 2' by 10' rule applies to both masonry and factory built chimneys.

* Ref. NFPA 7 – 4.1.2, Vents installed with a listed cap shall terminate in accordance with the terms of the cap's listings.

INSTALLATION

DETERMINING SIZE OF PIPE TO INSTALL

To determine what diameter pipe to use in an installation (3" or 4"), first find the "equivalent pipe length" using the following guidelines, then plot this figure and the altitude on the chart.

Fill out the installation chart, and calculate your total equivalent pipe length. After you have the total equivalent pipe length, use the *Pipe Selection Chart* below to determine if your installation requires 3" or 4" exhaust pipe.


INSTALLATION CHART

| Type of Pipe | # of Elbows or Feet of pipe | | Equivalent Feet | Total Equivalent Feet |
|--------------------------|-----------------------------|---|-----------------|-----------------------|
| 90° Elbows / Tee (A & G) | | x | 5 Ft. (1.5m) | |
| 45° Elbows (C) | | x | 3 Ft. (1m) | |
| Horizontal (B & F) | | x | 1 Ft. (.3m) | |
| Vertical (E) | | x | .5 Ft. (.15m) | |

- A- 90 Degree Elbow
- B- 1' Horizontal Pipe
- C- 45 Degree Elbow
- D- Standoff Braces
- H- Wall Thimble

- E- 8' Vertical Pipe
- F- 2' Horizontal Pipe
- G- 90 Degree Tee


NOTE: All equivalent pipe styles shown to the right are standard for all freestanding models.

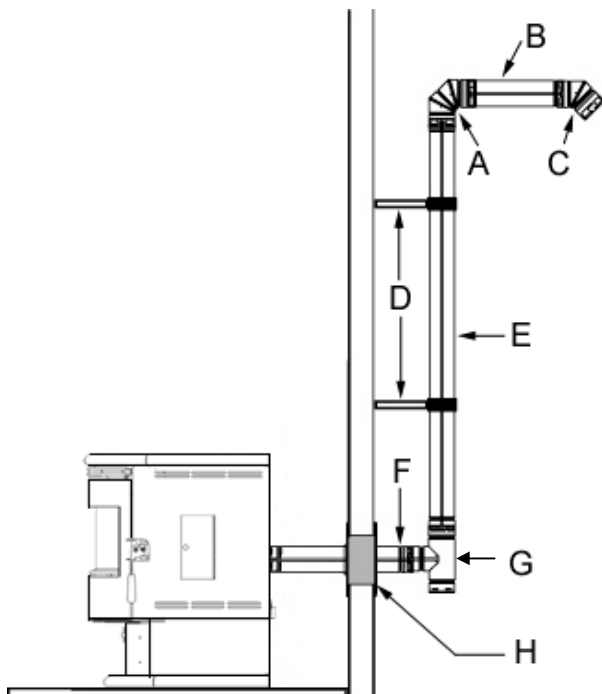

SAMPLE INSTALLATION CHART

| Type of Pipe | # of Elbows or Feet of pipe | | Equivalent Feet | Total Equivalent Feet |
|--------------------------|-----------------------------|---|-----------------|-----------------------|
| 90° Elbows / Tee (A & G) | 2 | x | 5 Ft. (1.5m) | 10 (3m) |
| 45° Elbows (C) | 1 | x | 3 Ft. (1m) | 3 (1m) |
| Horizontal (B & F) | 3 | x | 1 Ft. (.3m) | 3 (1m) |
| Vertical (E) | 8 | x | .5 Ft. (.15m) | 4 (1.2m) |
| | | | | Total = 20 |

PIPE SELECTION CHART

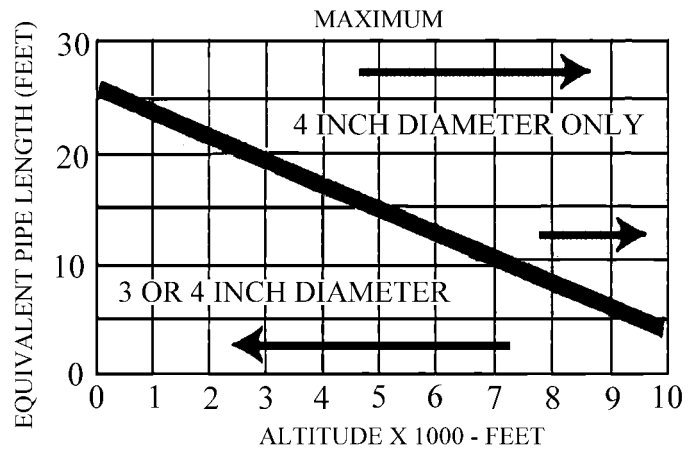

INSTALLATION

INSTALLING YOUR FREESTANDING PELLET STOVE

Standard Horizontal Exhaust Installation

1. Locate the proper position for the listed type "PL" wall thimble. Avoid cutting wall studs when installing your pipe. Use a saber saw or keyhole saw to cut the proper diameter hole through the wall to accommodate the wall thimble. Use extreme caution to avoid cutting into power lines within the wall of the home. The hole size will depend on the brand of pellet vent that you are using. Install the wall thimble in the hole.

ALL INTERLOCKING PIPE CONNECTIONS WITHIN THE ROOM MUST BE SEALED WITH RTV AND SECURED WITH A MINIMUM OF 3 FASTENERS PER CONNECTION.

2. Position the stove approximately 12" (.3m) from the wall on the floor pad. Push listed type "PL" pipe through wall thimble. Squeeze a bead of high temperature silicone (RTV) sealer around the end of the machined portion of the 3" (76mm) pipe connector on the back of the stove. Firmly push on a section of listed type "PL" pipe until inner pipe liner pushes into the bead of RTV sealer.
3. Push the stove (with pipe attached) towards wall. Pipe will go through the wall thimble. Do not position the back of the stove closer than 1" (25mm) from the wall.


Note: Greater back clearance will improve the serviceability of the stove.

4. Install listed type "PL" 45 degree elbow with rodent screen or cap (optional) on outside end of pipe. The rodent screen should be no less than 1/2" (13mm) mesh and may clog with soot and ash if left unattended during the burn season.

NOTE: The end of the exhaust pipe must extend a minimum of 12" (.3m) from the outside of the building.

5. If the installation includes a source of outside combustion air; cut a separate hole through the wall for the fresh air tube. This tube should be 1-5/8" (42mm) [min.] diameter, steel only. Connect outside air pipe to air inlet on stove. This tube must be terminated with a 90 degree elbow or hood.


NOTE: Combustion air may also be drawn from a vented crawl space under the home. All joints for connector pipe are required to be fastened with at least three screws. If vented horizontally, joints shall be made gas-tight in a manner as specified on this page (see instruction #1). Install vent at clearances specified by the vent manufacturer.

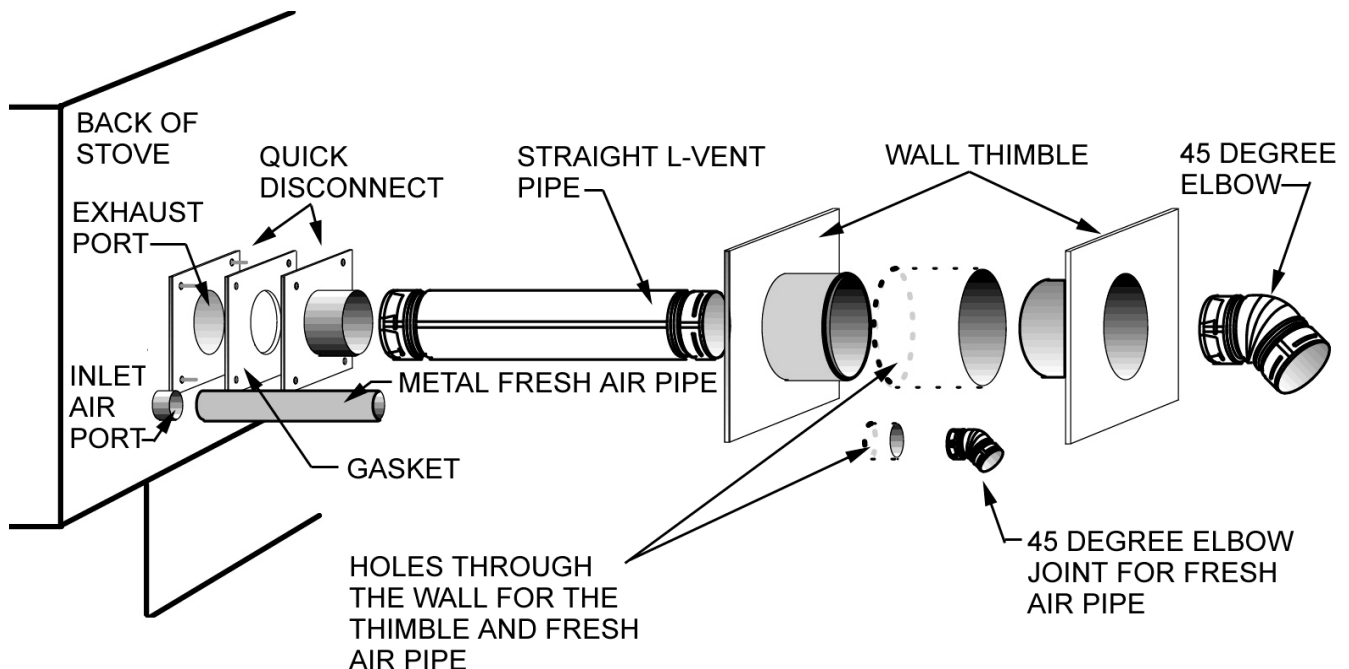


INSTALLATION

Standard Horizontal Installation Configurations


Profile® 30 FS*
Corner Through the Wall

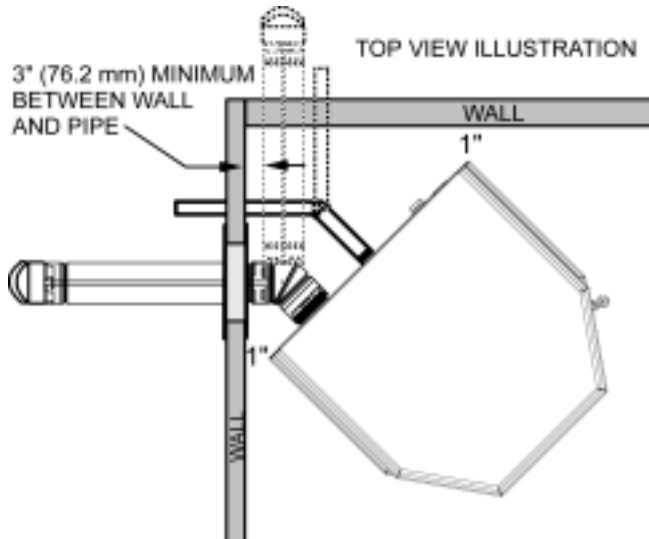

Profile® 20 FS *
Corner Through the Wall

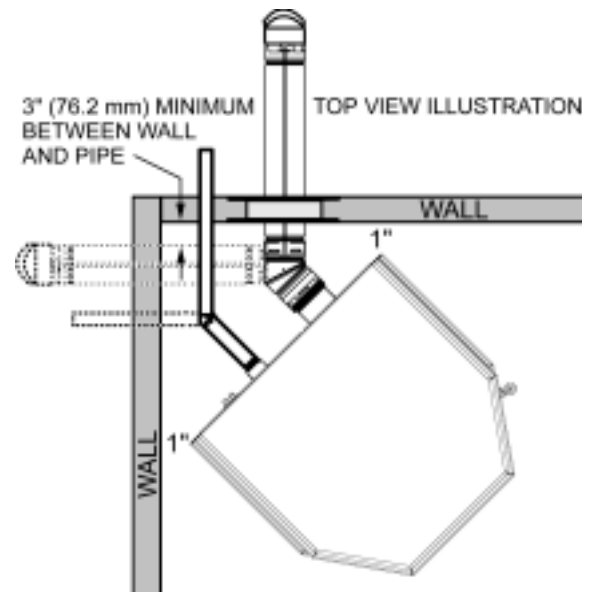

Profile® 20 FS and Profile® 30 FS
Parallel Through the Wall

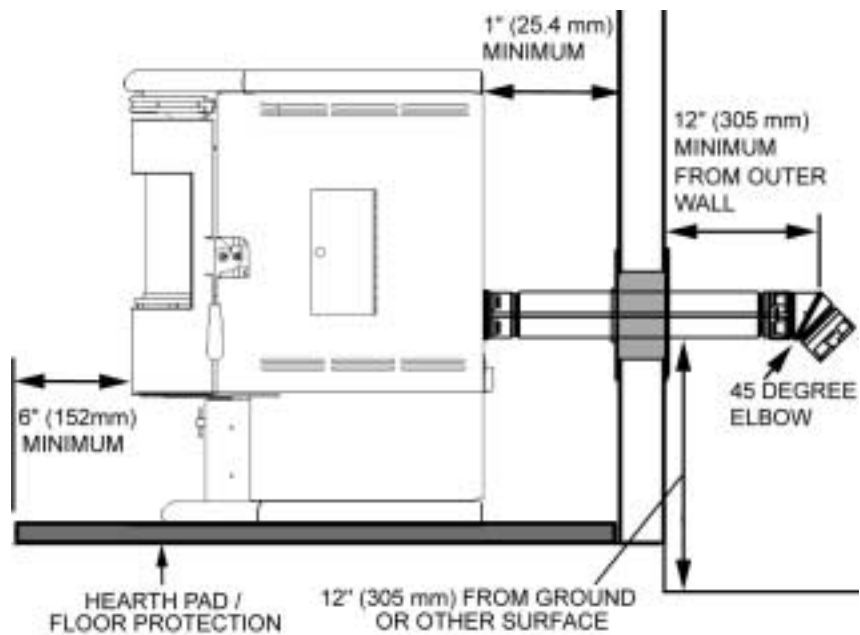

* If you vent to the furthest wall, the vent pipe must maintain a 3" clearance parallel to the other wall.




INSTALLATION

Standard Vertical Installation Configurations Models: Profile® 20 FS and Profile® 30 FS

These freestanding models may be connected to an existing flue or by installing listed type "PL" vent pipe. If a liner is run all the way to the top of the existing chimney, the existing flue should be sealed with a steel plate. Start a vertical run with a Tee at the back of the stove. Other options are illustrated below. *Note: See page 13 for Vent Termination Requirements*

Preferred Installation – Vertical Vent Through the Roof

This venting configuration allows for the best stove performance. The vertical pipe promotes natural draft and with the chimney inside the dwelling, the flue gases stay warm, thus rising at a consistent rate.

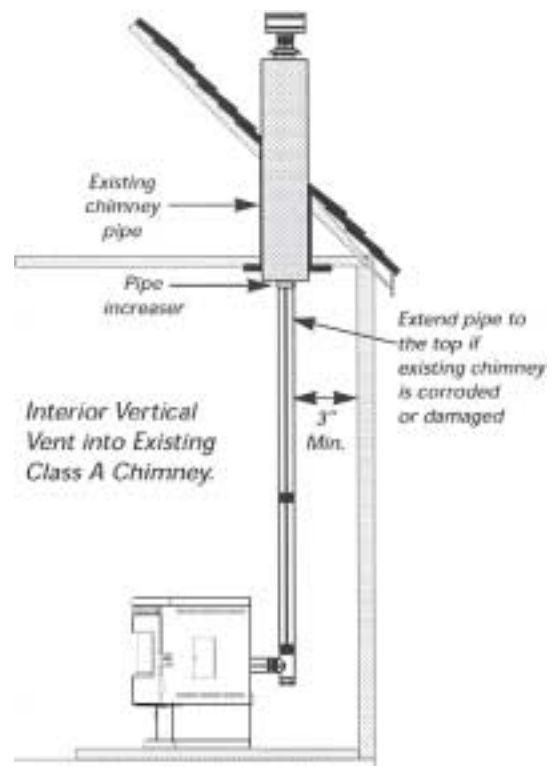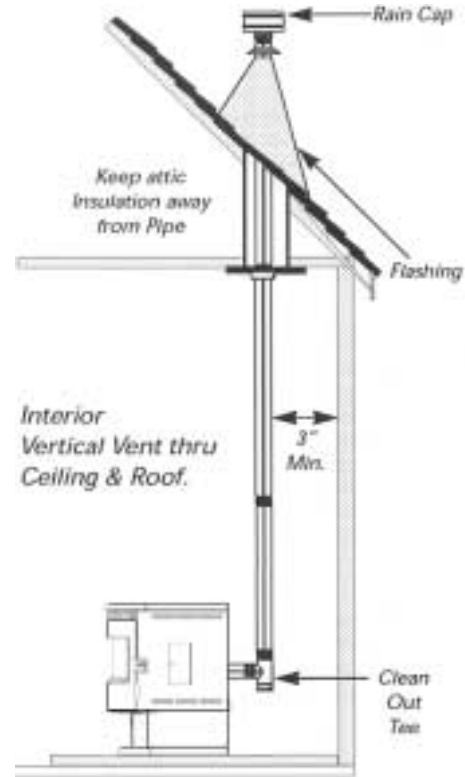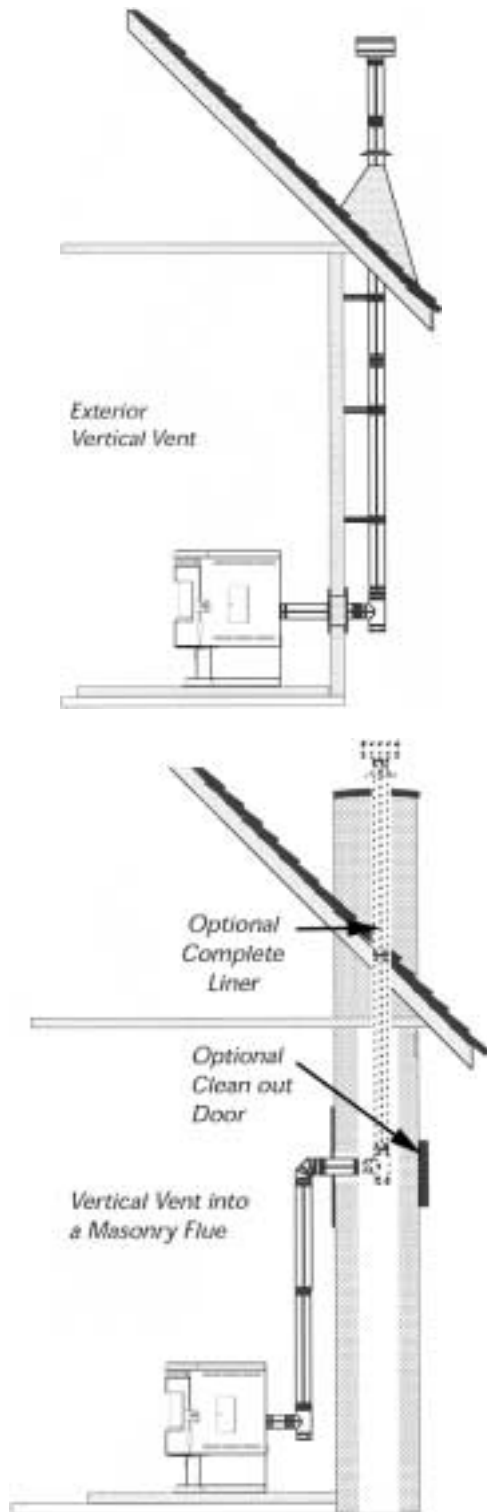

INSTALLATION

Standard Installation Configurations Into and Existing Fireplace – Model: Profile® 30 INS

IMPORTANT- Make sure the chimney and firebox are clean and free of soot and ashes before installation begins. Failure to do so may result in the transfer of soot into the room by way of the convection fan.

Venting Into an Existing Chimney

The Profile® 30 INS may be installed into a masonry or factory built fireplace as illustrated on this page. When installing into a masonry chimney, it is recommended that the exhaust vent be extended to the top of the chimney as shown on the following page. However, if the vent pipe does not extend to the top of the chimney, the starter pipe must extend a minimum of 18" above the damper. You must seal the damper area so that the air / exhaust in the chimney cannot communicate with the air in the fireplace firebox (this is a positive flue connection. See the following instructions for one method of sealing flue).

Direct Connection (Positive Flue Connection)

Installation into a Masonry Fireplace without a full reline – Profile® 30 INS

The Profile® 30 INS does not require a full reline when installing into a masonry fireplace (however it is recommended to ensure proper drafting of the appliance). As a minimum the vent connector from the insert must extend a minimum of 18" above the damper and the damper area must be sealed to prevent dilution air from entering the chimney which will affect proper drafting of appliance.

Note: Sealing the damper area so that the air / exhaust in the chimney cannot communicate with the air in the fireplace firebox is called a "Direct Connection" or a "Positive Flue Connection". See the following instructions for acceptable methods for sealing chimney throat.


Positive Flue Connection Methods

A qualified installer should evaluate the existing fireplace to determine the best method for achieving a positive flue connection between the flue extension (starter pipe) and the chimney. The most common method for achieving a positive flue connection in masonry fireplaces is to secure a seal-off plate in the fireplace throat using masonry screws. Other acceptable methods include packing noncombustible material around vent pipe or using a flue adapter. Whatever "seal off" method is used must effectively seal the area to prevent dilution air to enter the chimney.

"Direct Connection" (Not Allowed In Canada)

The vent pipe must extend a minimum of 18" above the damper. The chimney must not be corroded or damaged in any way for this type of installation to be permitted.

A non-combustible seal is required at the damper area (to prevent dilution air from entering the chimney). See *Positive Flue Connection* for guidelines.

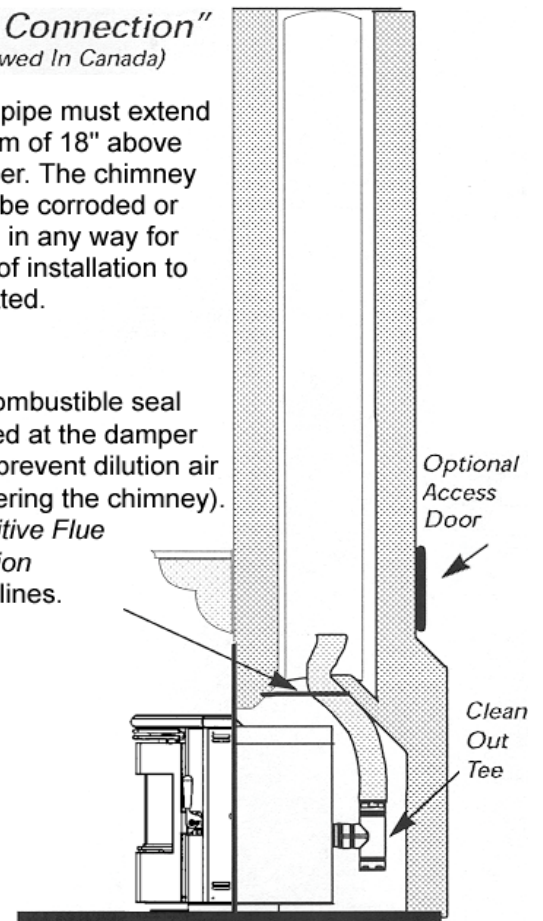

INSTALLATION


INSTALLING PROFILE 30 INS (CONTINUED)

IMPORTANT- Make sure the chimney and firebox are clean and free of soot and ashes before installation begins. Failure to do so may result in the transfer of soot into the room by way of the convection fan.

"Full Chimney Reline"

Recommended for *ALL* Chimney installations

Approved Liner for Factory Built (ZC) and Masonry Fireplaces: Single wall, flex or rigid 24 gage minimum stainless steel.

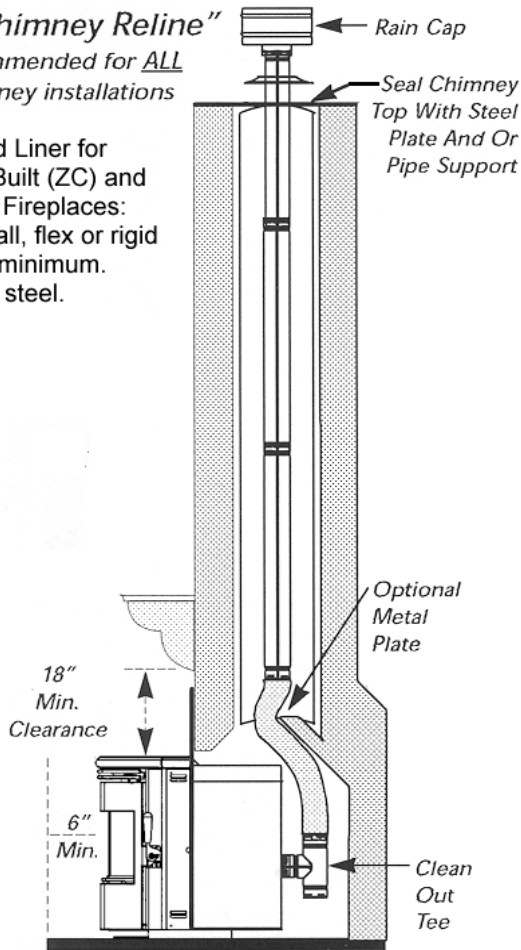


"Direct Vent"

(Not Allowed In Canada)


U.S.A. - The insert may be installed as a Direct-Vent (through the chimney structure) in Masonry Fireplaces if local codes permit.

Canada - Installing insert as a Direct-Vent is not allowed. Fireplace chimney must be fully relined from the insert outlet to termination. See "Full Chimney Reline".

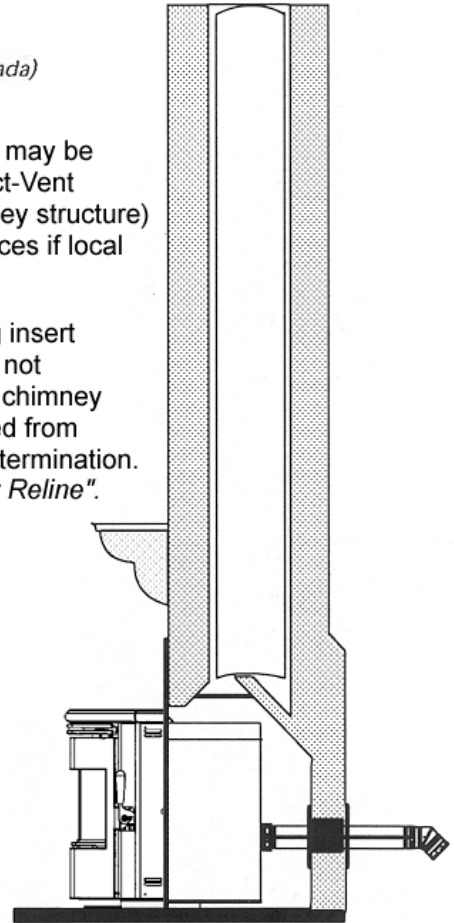

VENT TERMINATION WHEN SINGLE WALL LINER IS USED.

A single wall liner is not designed for exposure to the elements. A section of pellet vent pipe is required as illustrated below.

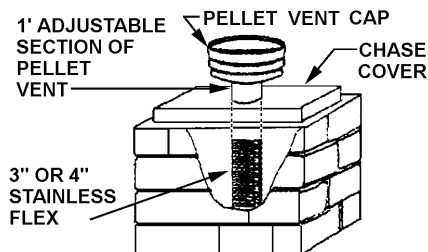

CARE AND OPERATION

CONTROL BOARD OPERATION

Stove On / Off Button – This button will turn your stove on or off while in Manual or Automatic mode (see page 23 for details). The green on / off light at the top of control board will indicate the on / off status.

Heat Output Button – The heat output button has three selection settings, Low, Medium and High. Pressing the button will scroll the red indicator lights from Low to High. The button controls the pellet feed and combustion airflow simultaneously. The control board is preset to provide the optimum ratio of fuel and air at each setting. Settings can be changed at any time but will only take affect after the start-up cycle is complete. Each press of the Heat Button will increase the heat output, and will scroll to the lowest setting after reaching the maximum setting.

Blower – The blower button operates the convection fan. This will change the flow of hot air into the room. Three choices are available Low, Medium, and High. When the Blower Button is pressed the yellow indicator light will scroll to Low, Medium, or High. **NOTE:** When running your stove on high heat output, the control board will not allow you to select the low blower speed. This is a safety precaution to protect against overheating. Blower settings can be changed at any time, but will only take affect after the start-up cycle is complete.

Fault Mode – The control system automatically monitors the flame using a photoeye located near the pellet feed tube. If the stove runs out of pellets the control board automatically goes into a “fault” status. The control board will initiate the shut down cycle and safely shut down the stove leaving it in the “fault” mode. The on / off indicator light near the top of the control board will flash rapidly when in this mode. After refilling the hopper with pellets, press the Start Button. If a thermostat is not being used the stove will go into the start-up cycle. If a thermostat is being used the stove will go into the start-up cycle if the thermostat is in the demand mode. If the thermostat is in the stand-by mode when the fault is cleared, the stove will remain in the stand-by mode until it closes again.

Calibration Mode – Located behind the swing down door at the bottom of the control board is a button labeled “Calibration.” Pressing the Calibration Button enters the control board into “Calibration Mode,” where adjustments of up to +/- 20% (increments of 5%) can be made to the fuel feed and the combustion blower.


Fuel Feed Trim – It is recommended that you contact your authorized Lennox Hearth Products dealer before adjusting the Fuel Feed Trim. The size and density of pellet fuels varies widely among pellet manufacturers and has an impact on the fuel feed rates of your pellet stove. Pressing the Calibration Button will enter the control board into calibration mode, indicated by the

illumination of an LED labeled “Calib.” Pressing the Calibration Button for the first time will initiate the fuel feed trim, where one red “Heat” LED will illuminate to indicate the current trim status (factory set at ‘0’). The fuel feed rate may now be increased by pressing the Heat Button and decreased by pressing the Blower Button. Each increment from the ‘0’ position is +/- 5%, with a total trim range of +/- 20%. To exit calibration mode without adjusting the combustion air (see Combustion Air Trim below), press the Calibration Button two times. The new fuel feed setting will remain in memory and can only be changed by repeating the above procedures.

* It is important to note that changing the fuel feed trim WILL affect the time of the initial fuel feed dump during start-up. The start-up fuel dump is factory set at 1 minute and 50 seconds. Each incremental change in the fuel feed trim changes the start-up time by +/- 6 seconds.

Combustion Air Trim – Pressing the Calibration Button for the second time will initiate the combustion air trim, where one yellow “Blower” LED will illuminate to indicate the current trim status (factory set at ‘0’). The combustion air flow may be increased by pressing the Heat Button and decreased by pressing the Blower Button. Each increment from the ‘0’ position is +/- 5%, with a total trim range of +/- 20%. Press the Calibration Button for a third time to store the settings into memory and exit calibration mode. The new combustion air trim settings will remain in memory and can only be changed by repeating the above procedures.

NOTE – It is recommended that the damper be used to fine-tune your stove to your particular fuel and installation configuration (see page 10).

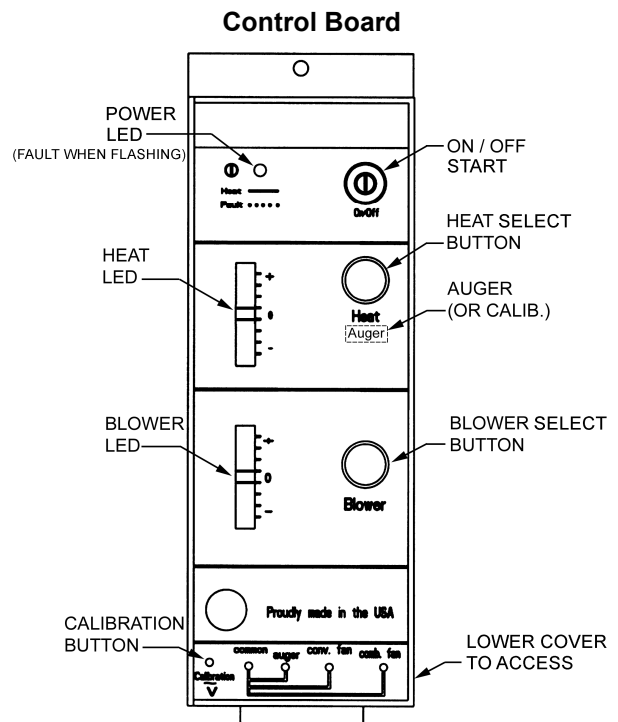

CARE AND OPERATION

CONTROL BOARD CONTINUED...

Note: The control board is equipped with an internal memory which will recall the last setting and mode the stove was in prior to loss of power. Because we individually check each stove prior to packaging, one of the two scenarios will appear when you first plug in your stove.

- 1). The Green LED at the top of the control board will illuminate and the blowers will be running. This is a standard cool down mode and will last no longer than ten minutes. This happens during testing when the stove is turned off (which initiates cool down mode) and then is unplugged.
- 2). The Green LED at the top will illuminate and the red and yellow LED's will illuminate on the control board, indicating that the stove is in the run mode. This happens during testing if the stove is unplugged without first turning the control board off (the control board remembers its last setting, which was the run mode).

If your stove follows that described in number 2 above, simply press the ON / OFF button once to turn the stove off, this will initiate the cool down mode. The stove can be restarted at any time during the cool down mode by pressing the ON / OFF button once.


Start-up Sequence of Events

1. Fault time delay is initiated (14 minutes 15 seconds).
2. Fuel feed rate of 100% for 1 minute 50 seconds (when trim left at factory setting of 0) auger trim setting ranges from 1:26 to 2:14 depending on -4 to +4 respectively.
3. Combustion fan operation starts (medium range voltage).
4. Convection fan operation starts (medium range voltage). Power LED is activated (steady green).
6. Igniter operation activated (line voltage).
7. Photoeye looks for flame (flame dominance scheme).
8. * If needed second & third fuel dumps are available at predetermined time deliveries (4 minutes & 6 minutes after initial).

Flame Detection Sequence of Events - This is what happens after flame has been detected.

- Happens within the *Start-up Time Delay* sequence.
- 0 to 1 minute no fuel feed.
- Flame settles.
- Bed of embers built.
- 1 minute mark: Fuel Feed rate 20% for 4 minutes 15 seconds (1 second on / 4 seconds off).
- 2 minute mark: igniter turns OFF / convection blower = panel setting.
- 5 minute 15 seconds mark: combustion fan = panel setting / LED indicator still active.

Start-up Time delay ends 14 minutes 15 seconds after pushing the start button!

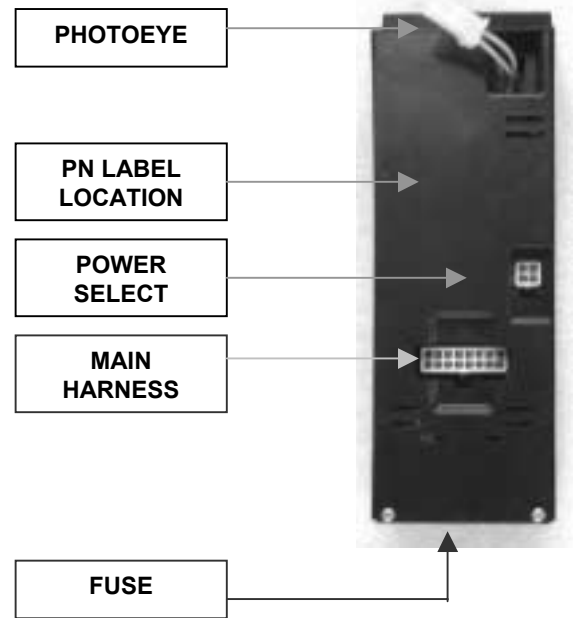

Calibrating Fuel Feed & Combustion Voltage

Calibration is the function of internal software and should be done by a qualified technician.



Access to perform calibration is behind the lower door located on the face of the control board. Use a penknife to pop open door. Voltage access ports for all circuits are located here as well.

Calibration is the function of internal software and should be done by a qualified technician.

Access to perform calibration is behind the lower door located on the face of the control board. Use a penknife to pop open door.

Voltage access ports for all circuits are located here as well.

Fuel Feed Trim Steps:

1. Push button "once" to access fuel feed calibration mode.
2. Identify the current calibration setting indicated by one RED LED bar and the word "AUGER" in red below heat control button.
3. Push the "HEAT" control button to adjust setting UP. Each push raises the RED LED bar and increases feed rate.
4. Push the "BLOWER" control button to adjust setting DOWN. Each push will drop the RED LED bar decreasing feed rate.
5. Push the calibration button two more times to lock in selected setting.

CARE AND OPERATION

Combustion Voltage Trim Steps:

1. Push button "twice" for access voltage calibration mode.
2. Identify the current calibration setting indicated by one YELLOW LED bar.
3. Push the "HEAT" control button to adjust setting UP. Each push raises the YELLOW LED bar & increases voltage 5%.
4. Push the "BLOWER" control button to adjust setting DOWN. Each push lowers YELLOW LED bar decreasing voltage 5%.
5. Push the calibration button once to lock in selected results.

Fuel Delivery Rate

The feed rate button manages the fuel delivery rate by controlling the amount of time the auger motor will run as follows:

Profile® 20 FS

| Feed Rate Setting | Auger Motor ON/OFF Time (seconds) | *Lb.'s per hour fuel delivery | ◆ Approximate BTU per hour fuel delivery | Burn Time (hours) |
|-------------------|-----------------------------------|-------------------------------|--|-------------------|
| Low = | 1 on/5.40 off | 1.5 Lb.'s/hr. | 13,000 BTU/hr | 37 |
| Med.= | 1 on/3.30 off | 2.5 Lb.'s/hr. | 21,000 BTU/hr | 22 |
| High = | 1 on/1.75 off | 3.8 Lb.'s/hr. | 32,000 BTU/hr | 15 |

Profile® 30 FS

| Feed Rate Setting | Auger Motor ON / OFF Time (seconds) | *Lb.'s per hour fuel delivery | ◆ Approximate BTU per hour fuel delivery | Burn Time (hours) |
|-------------------|-------------------------------------|-------------------------------|--|-------------------|
| Low = | 1 on/4.50 off | 1.7 Lb.'s/hr. | 14,000 BTU/hr | 48 |
| Med.= | 1 on/1.90 off | 2.6 Lb.'s/hr. | 22,000 BTU/hr | 30 |
| High = | 1 on/1.15 off | 4.5 Lb.'s/hr. | 39,000 BTU/hr | 18 |

Profile® 30 INS

| Feed Rate Setting | Auger Motor ON / OFF Time (seconds) | *Lb.'s per hour fuel delivery | ◆ Approximate BTU per hour fuel delivery | Burn Time (hours) |
|-------------------|-------------------------------------|-------------------------------|--|-------------------|
| Low = | 1 on/4.50 off | 1.7 Lb.'s/hr. | 14,000 BTU/hr | 30 |
| Med.= | 1 on/1.90 off | 2.6 Lb.'s/hr. | 22,000 BTU/hr | 20 |
| High = | 1 on/1.15 off | 4.5 Lb.'s/hr. | 39,000 BTU/hr | 12 |

* Feed rates are approximations only. Actual feed rate will vary depending on size, quality and length of fuel used and variations in line voltage.

- ◆ Estimated heat input based on fuel value of 8500 BTU per lb. of fuel.

Your pellet stove can be operated in either manual or automatic mode. The manual mode is used when operating without a thermostat. The automatic mode is used when utilizing a wall thermostat. When utilizing the thermostat capability the burn time can be extended dramatically depending on thermostat setting. Note: It is normal for some ash to build up on the inner glass surface at the lower burn settings.

Initial Start-Up / Empty Hopper or Feed Tube:

During an initial start-up, or in the case where the hopper has run out of fuel, it will be necessary to prime the auger feed system. The control board is set to deliver fuel for approximately 2 1/2 minutes during start-up, which, with a fully primed auger tube, will provide the appropriate amount of fuel for ignition.

When first starting your pellet stove, it will be necessary to prime the auger tube. To prime the auger tube you need to first fill the hopper with pellets, and press the ON button on the control board. Wait approximately 2 1/2 minutes and turn the control board OFF and then back ON again. Wait an additional 2 1/2 minutes (if necessary) and continue this process until fuel begins to fall into the UltraGrate™. Remember, different brand fuels feed at different rates.

Once fuel starts to enter the UltraGrate™, turn the stove OFF and then back ON. The auger tube should now be primed and the stove should deliver enough fuel for proper ignition. It may be necessary to follow these procedures in the event that the hopper runs completely out of fuel.

CARE AND OPERATION

Manual Operation:

Pressing the stove on / off button initiates the start-up cycle. The green on / off light, near the top of the control board, will light up to indicate the "on" status. The fan speeds and pellet feeds are fixed during this time to provide appropriate ignition. The Fast-Fire igniter system will light the pellets feeding to the UltraGrate™, after about 3 minutes. The start-up cycle is in effect for approximately 2 minutes after flame is detected in the UltraGrate™. A photoeye, located near the pellet feed tube monitors the existence of flame. After the start-up cycle your stove will be in the run mode. At this point the stove will operate in the heat output and blower settings selected. These settings can be selected either during or after the start-up cycle. Pressing the stove on / off button during the run mode will initiate the shut down cycle. The on / off indicator light will turn off. The pellets will stop feeding and the blowers will run at a fixed speed for approximately 10 minutes. At this point your stove is safely shut down and can ONLY be restarted by pressing the stove on / off button again.

Automatic Operation:

Your stove is capable of running in an automatic mode with the use of a wall thermostat. NOTE: For the thermostat to control the operation of the stove, the "on" status must be active on the stove's on / off button. The thermostat will establish either a demand mode or a stand-by mode. The thermostat should be set for the desired room temperature. If the room temperature drops below the level on the thermostat the stove will automatically begin the start-up cycle, as explained above in the Manual Operation section. Once the start-up cycle is completed the stove will operate in whatever heat and blower setting you have selected. For best operation under thermostat control, the Medium or High settings recommended. When the desired room temperature is reached the stove will automatically go into the shut down cycle. The pellet feed will stop and the blowers will continue for a controlled time allowing safe shut down of your stove. All lights will remain on when the thermostat is open. The heat and blower settings can be changed at any time, but only take affect during the run mode. When the temperature in the room drops to the level set at the thermostat, the stove will again begin the start-up cycle and resume automatic operation in the demand mode.

NOTE: If the stove on / off button is pressed while the thermostat is in the standby mode the stove will not restart until the thermostat closes.

Lighting Procedure Without Igniter

Your pellet stove can be lit manually without using the automatic igniter by following the procedure below. If your stove is set up to run on a thermostat, the thermostat circuit needs to be closed (as if permanently in the demand mode). The thermostat wires should be removed from the rear of the stove and replaced with the jumper originally supplied with your stove. If a jumper is not available the thermostat should be set to the highest setting. This will keep the stove in the demand mode. If your automatic ignition system should ever need troubleshooting, repair or replacement, please contact your authorized Lennox Hearth Products dealer.

1. Press the ON button on the control board.
2. Wait approximately 2 1/2 minutes while the pellets prime the grate (the pellets will stop feeding automatically).
3. Place a small amount of an approved (non-volatile) fire starter on top of the pellets in the grate, (see your authorized Lennox Hearth Products dealer for appropriate fire starting products). DO NOT USE FLAMMABLE LIQUIDS TO START YOUR STOVE!
4. Light the "fire starter" with a match and close the door.
5. The photoeye will detect that a flame is present and will begin feeding pellets in approximately 2 minutes.
6. The control board will continue to go through the normal start-up cycle and the flame should be well established within 10 minutes from the time the ON button was initially pressed. Remember – you are now in manual mode and heat settings should be selected to the desired room heat level.

Turning Off Your Stove

Press the stove on / off button to initiate the shut down cycle. The pellets will stop feeding and the blowers will continue to run on a timed cycle. The stove will shut down safely upon completion of the shut down cycle.

CARE AND OPERATION

DAMPER OPERATION (All models)

The damper is a plate that helps control the amount of airflow supplied for combustion. With the damper pushed all the way in the airflow is at its minimum. As the damper is pulled out, more air is allowed to flow.

It will be necessary to monitor the appearance of the flame during the first 4-8 bags of pellets. If your flame is smoky red / orange with evidence of soot at the top of the flame, you need more combustion air; pull the damper out one notch and re-evaluate the appearance of the flame. It may be necessary to continue this process, moving the damper one notch at a time until proper combustion is attained (the flame should become yellow and begin to "dance"). If the flame is "short" at the higher burn rates, or if the pellets are burning up in the grate before new pellets are fed into the fire, push the damper in one notch and monitor the flame. Continue the process of moving the damper one notch at a time and evaluating the flame until proper flame appearance is achieved.

Once the damper has been properly set it should not need adjusting unless you are changing from a premium grade pellet to a standard or high ash pellet, in which case the damper may need to be pulled out to help prevent the accumulation of ash in the grate.

DAMPER ADJUSTMENT GUIDELINE

Lack of Combustion Air: By opening the damper, this will increase combustion air delivery. Symptoms of insufficient combustion air include; unburned fuel, lazy smoky or red / orange flame, excessive ash or soot, excessive buildup on glass.

Contributing factors:

- High Altitude – Lack of oxygen
- Restrictive Venting (elbows, horizontal runs, cold external chimneys, etc.).
- Dirty / Poor Quality Fuel.

Note: Excessive amounts of fly ash built-up in the grate, clinkers in the grate or leakage of air (if the grate is not properly seated) will starve the fire for air. See *Routine Maintenance*, on page 26 for information on cleaning the stove.

Excessive Combustion Air: By closing the damper, this will reduce combustion air delivery. Symptoms of excessive air include; fuel burns too quickly (results in smoking or smoldering pellets), white to yellow flame, etc. If the damper is open too much, the burning pellets will lift off the grate and fly up into the air much like popping corn does.

Contributing factor:

- Venting system providing excessive draft.

Correct Combustion Air / Proper Burn Characteristics: When the damper is correctly set, the burning pellets should move (wiggle) around slightly and the flame should be bright yellow.

AUTOMATIC SAFETY FEATURES

Power Outage:

During a power outage, the stove will shut down safely. The stove will automatically restart when power is resumed. The solid state control board has an internal memory that will retain heat output and blower speed settings through voltage interruptions. A small amount of smoke may leak from the top of the window glass, the hopper and from the combustion air intake, if the stove is vented horizontally with no vertical pipe. This will not persist for more than 3 to 5 minutes and will not be safety hazard. It may set off your smoke alarm.

Note: If the area in which you live is prone to frequent power outages, it is recommended that a minimum of 8 feet (2 ½ meters) of vertical vent pipe be included in a freestanding installation to induce a natural draft in the event of a power failure.

Overheating:

A high temperature switch will automatically shut down the stove if it overheats. Allow up to 45 minutes cooling time before re-lighting. Keep enough convection air going through stove to keep it cooling properly, this will ensure long life of the stove. If the overheating continues, contact your authorized Lennox Hearth Products dealer for more information.

CARE AND OPERATION

FUEL

Pellet Fuel Hopper - It is recommended to open the hopper lid by grasping it on the side as shown in the following picture.

Open Hopper Lid by Grasping the Side

Be very careful not to touch other hot areas on stove!



Clinkering - Silica (or sand) in the fuel, along with other impurities, can cause clinkering. A clinker is a hard mass of silica formed in the burning process. Clinkering is a function of the fuel, (not the stove), but adversely affects the performance of the stove by blocking off the air passages in the grate. Even P.F.I. approved pellet fuel may tend to clinker. A clinker can be removed from the UltraGrate™ and placed in the ash pan with the use of the grate scraper / ash pan tool furnished with your stove. See Routine Maintenance (on page 26) for more information on cleaning.

Ash - The frequency of removal of the ash and maintenance performed on the stove is directly proportional to the ash content of the fuel and the operation duration of your pellet stove. Low ash fuel may allow longer intervals between cleaning, however, a stove burning high ash fuel may need to be cleaned as often as everyday.

PLEASE NOTE: Lennox Hearth Products has no control over the manufacturing of pellet fuel and will not be held responsible for poor stove performance or any damage caused by poor quality pellet fuels.

Fuel Feed Rates - Different brands of pellets will feed at varying rates due to their size and density (length and diameter). This may require a slight adjustment in the damper control (see page 10) or the fuel feed trim to compensate (see page 20).



Fuel Specifications - Using the UltraGrate™ burn system, this appliance has been designed to burn wood residue pellets with up to 3% ash content. Agricultural pellets (i.e.... Corn, alfalfa etc.) are not permitted to be burned in the stove. Dirty fuel will adversely affect the performance of the stove.

Caution: The use of unapproved, dirty, wet and / or high salt content fuel will void the warranty!

Wood pellets manufactured to the pellet fuels institute (P.F.I.) certification standard are available in two grades, Standard and Premium. The primary difference between the two is the ash content of the pellets.

The P.F.I., specification for standard grade & premium grade residential pellet fuel is as follows:

- CHLORIDES (Salt): Less than 300 p.p.m.
- BULK DENSITY: 40 lb. / Cu. Ft. minimum
- MOISTURE CONTENT: 8% maximum
- ASH CONTENT: < 3% maximum (standard grade) < 1% maximum (premium grade)
- FINES: 0.5% maximum through a 1/8" screen
- BTU CONTENT: Minimum 8200 BTU per pound.

Pellet Feed / Pellet Size - The pellet feed system is designed to handle a wide range of pellet sizes up to a maximum of 5 / 16" diameter. Different pellets may feed at considerably different rates. You may notice a difference in the burn if you change pellet fuel sizes. The longer the pellet, the slower it will feed and vice versa. If the stove will not stay burning at the minimum fuel feed setting, those particular pellets may not be feeding fast enough. If this happens, reduce the amount of combustion air by adjusting the damper. See page 10 before adjusting the damper.

Long Burn Time - When operated correctly, this appliance cannot be overfired. Continuous operation at a maximum burn can, however, shorten the life of the electrical components (blowers, motors, and electronic controls), and is not recommended. Typical approved operation would include running at the low to mid range setting with occasional running on the maximum setting during the coldest periods of the winter. The blower speed control should be turned to high when operating the stove on the high heat setting. A lower heat setting is recommended for overnight operation or when the room is vacated for long periods of time.

Note: See *Fuel Delivery Rate* on page 22 for burn times.

ROUTINE MAINTENANCE Unplug and Ensure Stove is Cold Before Performing Any Maintenance Work

The following areas need to be inspected and cleaned as part of routine maintenance:

ROUTINE CLEANING

Note: Stove will need to be shut off and cooled enough to handle before routine cleaning is performed.

Always disconnect power before doing any routine cleaning.

The following areas need to be inspected during Routine Cleaning:

- UltraGrate™ (burn grate)
- Ash Slide Plate (free standing model only)
- Ash Pan
- Heat Exchange Tubes
- Photoeye Slot
- Exhaust Passages and Vent Pipe

UltraGrate™ (Burn Grate for All Models)

The UltraGrate™ should be inspected periodically to assure that the air holes have not become clogged with ash or clinkers. The UltraGrate™ can easily be cleaned with the grate scraper / ash pan tool, or it can be removed for cleaning. It is very important to monitor the ash build up under the UltraGrate™, as excessive amounts of ash will block combustion air from entering the grate, causing pellets to pile-up in the grate. The ash build-up under the grate is easily dumped into the ash pan by pulling out the ash slide weekly as shown below. The grate cleaning procedure is the same for all models.

UltraGrate™



* (Recommended Frequency of 1 day – 2 weeks)

ASH PAN (Profile® 20 FS and Profile® 30 FS)

The ash pan will have to be emptied periodically, depending on amount of fuel consumed. The ash pan is located in the pedestal on the Profile® 20 & Profile® 30. It can be removed by turning the T-Bar latch fully counter-clockwise.

Ash Pan



* (Recommended Frequency of 2 days – 2 weeks)

ASH PAN (Profile® 30 INS)

The Profile® 30 INS has two ash pans, an upper and lower. They should be emptied whenever necessary. The upper ash pan is accessed by opening the door and simply lifting the ash pan out. The lower ash pan is removed by pulling straight out using the grate scraper tool. Be sure to dump ashes into a non-combustible container. All ash removal and cleaning should be done while stove is cold.

Lower Ash Pan



* (Recommended Frequency of 1 day – 1 week)

* Inspect at minimum frequency stated until you establish a minimum frequency required for your installation (frequency will vary depending upon fuel BTU value / ash content, usage, and misc. installation variables).

ROUTINE MAINTENANCE Unplug and Ensure Stove is Cold Before Performing Any Maintenance Work

The following areas need to be inspected and cleaned as part of routine maintenance:

ASH SLIDE PLATE (Profile® 20 FS and Profile® 30 FS)

Ash that accumulates around the grate can be “dropped” into the ash pan without opening the firebox door. Simply pull open the ash release slide plate as shown in photo using the grate scraper tool provided. Remove the ash pan as shown. Note: Make sure to fully close the plates when finished. Failure to close the ash release slide plates completely may cause the fuel to burn poorly (due to reduced air flow through the grate), which may then cause pellets to “pile up” in the grate. Important: The ash slides must be fully closed for firebox door to close.

Ash Slide Plate



* (Recommended Frequency of 1 day – 2 weeks)

HEAT EXCHANGER TUBES (All Models)

ONLY CLEAN HEAT EXCHANGER TUBES AFTER STOVE HAS COOLED DOWN.

1. Tube Scraper

After opening the firebox door, use the hole in the handle of the Grate Scraper Tool to “grab” onto the rod. Using the Grate Scraper Tool, pull the rod up and out towards the opening of the firebox. Continue pulling until the Tube Scraper reaches the top of the firebox. The rod is located on the outside, above the door. Pull the tube scraper out, then repeat 2–3 times to remove fly ash from the heat exchange tubes.

It may be easier to clean the tubes by first removing the heat exchanger baffle. Loosen the two screws holding the baffle in place (do not fully remove). The baffle contains keyhole slots allowing the screws to remain in place while removing the baffle. The scraper can now be pulled in a more horizontal manner, which allows the scraper to move more freely.

* Inspect at minimum frequency stated until you establish a minimum frequency required for your installation (frequency will vary depending upon fuel BTU value / ash content, usage, and misc. installation variables).

Tube Scraper



* (Recommended Frequency of 2 days – 2 weeks)

2. Cleaning Brush

WARNING: DO NOT USE BRUSH ON HOT STOVE

With tube scraper rod pulled out 2 – 3 inches, insert brush behind tube scraper and remove ash build-up. Clean to the left & right side of heat exchanger, between tubes and the top of the firebox.

Clean Behind Tube Scraper



* (Recommended Frequency of 2 weeks - 2 months)

ANNUAL MAINTENANCE (To be performed by a certified technician).

Unplug and Ensure Stove is Cold Before Performing Any Maintenance Work. Include routine maintenance with annual maintenance. The following areas need to be inspected and cleaned as part of annual maintenance:

PHOTOEYE (All Models)

WARNING: DO NOT USE BRUSH ON HOT STOVE

The photoeye uses a narrow slot in the side of the feed tube to view flame (left side Profile® 20 FS, right side Profile® 30 FS and INS). This area should be cleaned periodically to prevent pellet debris build-up. Pellet debris build-up may cause the stove to go into "fault" mode. Use the brush provided (see additional *Suggestion* below) and thoroughly clean the entire sidewall of the feed tube on the side where photoeye slot is located.

*Suggestion: Compressed air can also be used to remove pellet debris from photoeye slot (use only canned compressed air such as what is commonly sold at computer supply stores. **DO NOT** use an air compressor).*

Clean Photoeye Slot




* (Recommended Frequency of 2 weeks - 2 months)


EXHAUST PASSAGES AND VENT PIPE (All Models)

Inspect frequently and clean when necessary. Fly ash will accumulate at all bends in the exhaust system. Note: Large amounts of fly ash build-up will create a lack of combustion air. Removing the clean out tee cap on vertical installations will allow an inspection of the ash build-up in the clean out tee and will help you to decide how frequently more extensive cleaning must be performed.

Clean-Out Tee

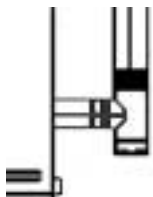

Rain Cap

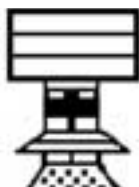

* (Recommended Frequency of 1-2 months)

ASH CLEAN-OUT PORTS

Make sure stove is cold. Ash clean-out ports must be cleaned as part of routine maintenance.

Accessing Clean-out Ports

Profile® 30 Series: Loosen screws (1 per clean-out) and lift plate out. Use an approved ash vacuum or brush to remove ash. After cleaning, replace clean-out plates and tighten screws.

IMPORTANT: Clean-out cover plates must be installed when operating unit.

Profile® 30 Series



Clean-outs

* (Recommended Frequency of 1-2 months)

* Inspect at minimum frequency stated until you establish a minimum frequency required for your installation (frequency will vary depending upon fuel BTU value / ash content, usage, and misc. installation variables).

ANNUAL MAINTENANCE (To be performed by a certified technician).

Unplug and Ensure Stove is Cold Before Performing Any Maintenance Work. Include routine maintenance with annual maintenance. The following areas need to be inspected and cleaned as part of annual maintenance:

DOOR ROPE GASKET (All Models)

The condition of the rope gasket around the door and windows should be checked periodically and replaced or repaired if necessary. A one-inch strip of paper may be used to perform a test of the integrity of the door seal. Close the door on the paper in at least eight points (see illustration, "Door Rope Gasket"). It is normal to feel only a slight amount of friction. The door gasket does not need to be "tight" in all areas, since a small amount of leakage is not hazardous or detrimental to the performance of your stove.

Door Rope Gasket
(check seal at points indicated)



- (Recommended Frequency of 1 year)

Checking Door Seal



CREOSOTE REMOVAL (All Models)

When wood is burned slowly, it produces tar and other organic vapors, which combine with expelled moisture to form creosote. The creosote vapors condense in the relatively cool chimney flue of a slow-burning fire. As a result, creosote residue accumulates on the flue lining.

When ignited this creosote makes an extremely hot fire. The chimney connector and chimney should be inspected at least once every two months during the heating season to determine if a creosote buildup has occurred.

If creosote has accumulated it should be removed to reduce the risk of a chimney fire.

* Inspect at minimum frequency stated until you establish a minimum frequency required for your installation (frequency will vary depending upon fuel BTU value / ash content, usage, and misc. installation variables).

WINDOW WASH (Models with one piece glass)

Periodically insert a small piece of cardboard (a business card) between the window trim and the window. Slide the card back & forth a few times to clear any dust or fibers from the window wash gap. Open the door and repeat from the other side of the glass.

Window Wash



- (Recommended Frequency of 1 year)

WINDOW WASH (Models with three piece glass)

Periodically remove five screws which secure the window wash bracket to the door frame, using a 5/16" socket. Lift out the window wash bracket, and set aside. Using a small brush, sweep out all debris buildup from behind the window wash bracket. After all debris has been removed re-attach the window wash bracket.

Remove Window Wash Bracket (5 screws)



- Continued, next page.

ANNUAL MAINTENANCE (To be performed by a certified technician).

Unplug and Ensure Stove is Cold Before Performing Any Maintenance Work. Include routine maintenance with annual maintenance. The following areas need to be inspected and cleaned as part of annual maintenance:

Sweep Away Debris from Behind Window Wash Bracket



- (Recommended Frequency of 1 year)

SMALL AREA PAINT TOUCH-UP

The stove body is painted with a quality high-temperature stove paint. Use only model TSPK-B Stove Paint, Catalog # 70K99. Do not touch-up your stove with any other paint.

Using one small piece of 320 grit sand paper and lightly sand the blemish so that the edges are "feathered" or smooth to the touch between the painted and bare surfaces. Do not let the sand paper gum up with paint, as this will cause scratches on the metal surface. If there are any scratches, use 600 grit sandpaper instead. Mask off surfaces you do not want painted. Paint lightly over the bare surface first as this will act as an undercoat. Then paint over a larger area in smooth even strokes to blend.

REAR STOVE COMPARTMENT (All Models)

The rear stove compartment should be cleaned periodically (a minimum of once a year). **DISCONNECT ELECTRICAL CORD PRIOR TO CLEANING STOVE.** Any household dust, pet hair or sawdust should be vacuumed or wiped out of the rear compartment of the stove, room air blower, and combustion blower (paying special attention to vacuuming out the intakes of both blowers). The electrical components should be wiped clean.

Opening Side Panels


Profile 30 FS - Using a 5/16" nut driver remove the screw from underneath the side panel at the front edge. Reinstall screw to prevent panel from opening accidentally!

Profile 30 FS – Opening Side Panels



Profile 20 FS – Using a 1/4" nut driver remove the #8 TEK screw located at the front top of the panel (see following picture). Reinstall screw to prevent panel from opening accidentally!

Profile 20 FS – Opening Side Panels

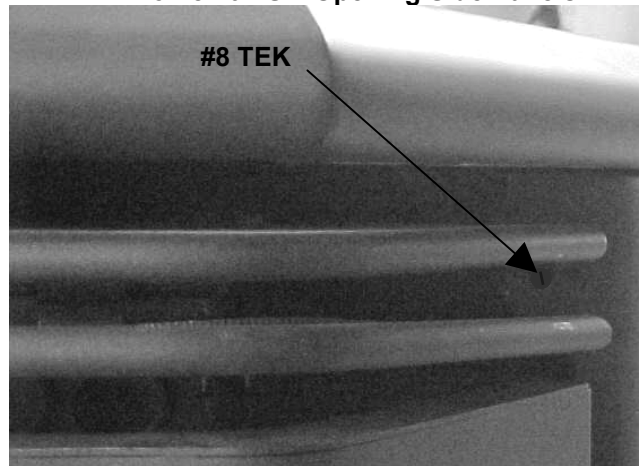

MOTOR LUBRICATION


The blowers are permanently lubricated by the manufacturer. Do not apply oil to any part of the blower, doing so may cause damage.

* Inspect at minimum frequency stated until you establish a minimum frequency required for your installation (frequency will vary depending upon fuel BTU value / ash content, usage, and misc. installation variables).

SPECIFICATIONS - Profile 20 FS

| | |
|---|---|
| Approx. Sq. Ft Heat Capacity | ~1500 - 1800 sq. Ft. |
| Flue Size | 3" Rear |
| Width, Overall | 23" |
| Depth, Overall | 22 3/4" |
| Depth, Overall w / 3" tee | 28 1/2" |
| Height | 28 5/8" |
| Floor to Rear Flue Center | 11 1/4" |
| Facing back of unit, outside edge of left side to center of rear flue outlet center | 6 1/2" |
| Floor to Rear Outside Air Inlet | 12" |
| Facing back of Unit outside edge of right side to center of air inlet | 6 3/4" |
| Floor Protection Requirements | + Front and Sides: 6" Back: 1" |
| Standard Features | Fastfire Self Igniter Wall Thermostat (wire included) |
| Hopper Capacity | 55 lbs. |
| Burn time | ◆ 15-37 hours |
| Fuse, Control Board Fuse, Igniter | 5 Amp, 250 volt, 3AG * 6 Amp, 125 volt * |
| Heat Input (BTU's per hour) Overall Efficiency Emissions | ◆ 13,000-32,000 BTU / hr 75-81% ◆ 0.4 gr / hr (varies w/size and type of fuel) EPA ex-empt. |
| Shipping Weight | 215 lbs. |
| Room Fan | 150 CFM; .8 Amps, 2175 rpm |
| Auger Motor | 1 RPM; .4 Amps |
| Draft Fan | 95 CFM: 1.0 Amps, 2880 rpm |
| Options | Nickel or Gold Trim Kits 4" Quick Disconnect Log Set |

BACK VIEW

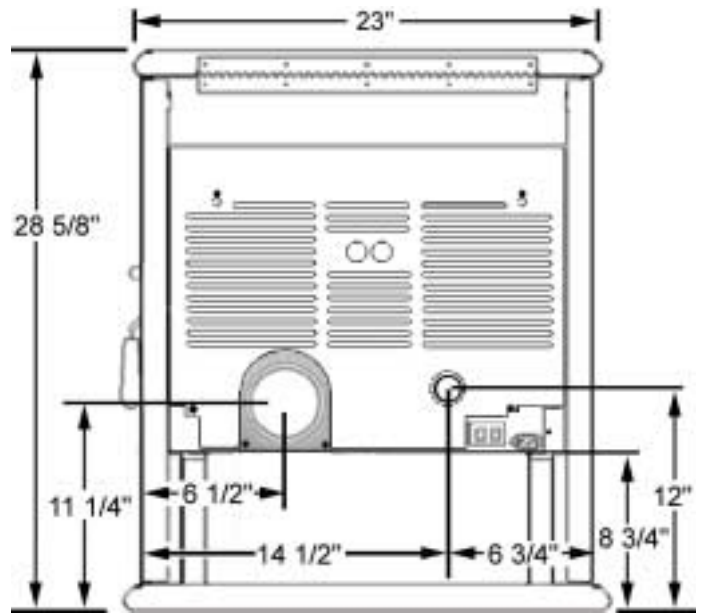

SIDE VIEW



Note: Dimensions shown are approximations only (+/- 1/4")

~ Square footage heating capacities are approximations only. They will vary depending upon the level of insulation, climate, house design, ceiling height, ambient outside temperatures and how the stove is operated.

+ Non-combustible floor protection must be used when installed on carpet (see *Floor Protection*, page 5).


◆ Fuel delivery and burn times will vary depending on size and type of fuel used. Estimated heat input based on fuel value of 8500 BTU per lb.

* Fuses are rated as fast blow.

SPECIFICATIONS - Profile 30 FS

| | |
|--|---|
| Approx. Sq. Ft Heat Capacity | ~1800 - 2000 sq. Ft. |
| Flue Size | 3" Rear |
| Width, Overall | 25 7/8" |
| Depth, Overall | 24 7/8" |
| Depth, Overall w / 3" tee | 30 3/4" |
| Height | 31 3/8" |
| Floor to Rear Flue Center | 16 7/8" |
| Facing Back of Unit, outside edge on right to center of rear flue outlet | 5 1/8" |
| Floor to Rear Outside Air Inlet | 10" |
| Facing Back of Unit outside edge on right to center of air inlet | 12 1/2" |
| Floor Protection Requirements | + Front and Side: 6" Back: 1" |
| Standard Features | Fastfire Self Igniter Wall Thermostat (wire included) |
| Hopper Capacity | 80 lbs. |
| Burn time | ◆ 18-48 hours |
| Fuse, Control Board Fuse, Igniter | 5 Amp, 250 volt, 3AG * 6 Amp, 125 volt * |
| Heat Input (Max.) | ◆ 14,000-39,000 BTU / hr |
| Overall Efficiency | 81% |
| Emissions | ◆ 1.9 gr / hr (varies w / size and type of fuel) EPA exempt |
| Ship Weight | 270 lbs. |
| Room Fan | 150 CFM; .8 Amps, 2175 rpm |
| Auger Motor | 1 RPM; .4 Amps |
| Draft Fan | 95 CFM: 1.0 Amps, 2880 rpm |
| Options | Nickel or Gold Trim Kits 4" Quick Disconnect Log Set |

BACK VIEW

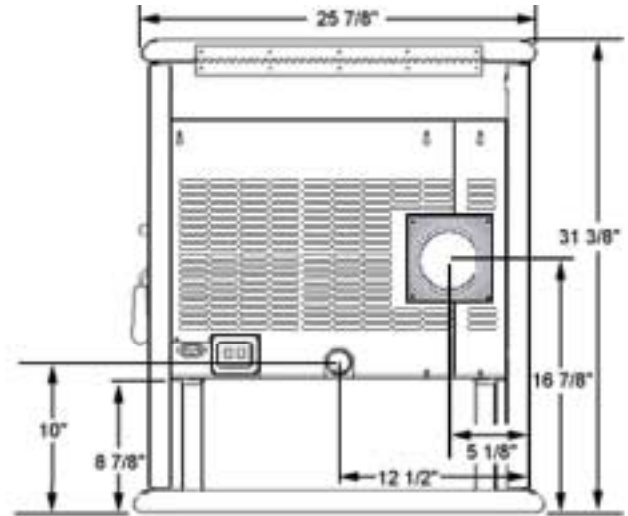

SIDE VIEW



Note: Dimensions shown are approximations only (+/- 1/4")

~ Square footage heating capacities are approximations only. They will vary depending upon the level of insulation, climate, house design, ceiling height, ambient outside temperatures and how the stove is operated.


+ Non-combustible floor protection must be used when installed on carpet (see *Floor Protection*, page 5).

◆ Fuel delivery and burn times will vary depending on size and type of fuel used. Estimated heat input based on fuel value of 8500 BTU per lb.

* Fuses are rated as fast blow.

SPECIFICATIONS - Profile 30 INS

| | |
|---|--|
| Approx. Sq. Ft Heat Capacity | ~ 1800-2000 sq. Ft. |
| Flue Size | 3" Rear |
| Width, Overall front (w/o surround) | 26" |
| Width, Overall back (w/o surround) | 24 1/8" |
| Depth, Overall (w/o surround) | 26 1/4" |
| Height, rear (w/o surround) | 19 15/16" |
| Height, front (w/o surround) | 23 5/8" |
| Floor to Rear Flue Center | 9 1/4" |
| Fireplace Face to Rear Flue Outlet Center (3" tee) | 13 1/4" |
| Dimensions into Fireplace | |
| Minimum Height | 20 1/8" |
| Minimum Width @ Front (extends back 1 1/2") | 32" |
| Minimum Width @ Back | 24 5/8" |
| Minimum Depth | 17 3/4" |
| Facing Back of Unit, Right Outside Edge of Unit to Center of Rear Flue Outlet | 5" |
| Floor to Rear Outside Air Inlet | 2 1/8" |
| Facing Back of Unit, Right Outside Edge of Unit to Center of Air Inlet | 12 7/16" |
| Floor Protection Requirements | Front: 6" |
| Standard Features | Fastfire Self Igniter Wall Thermostat (wire included) |
| Hopper Capacity | 50 lbs. |
| Burn time | ◆ 10-45 hours |
| Fuse, Control Board | 5 Amp, 250 volt, 3AG * |
| Fuse, Igniter | 6 Amp, 125 volt * |
| Heat Input (Max.) | ◆ 14,000-39,000 BTU / hr |
| Overall Efficiency | 81% |
| Emissions | ◆ 1.9 gr / hr (varies w/size and type of fuel) EPA exempt. |
| Ship Weight | 230 lbs. |
| Room Fan | 150 CFM; .8 Amps, 2175 rpm |
| Auger Motor | 1 RPM; .4 Amps |
| Draft Fan | 95 CFM: 1.0 Amps, 2880 rpm |
| Options | Nickel or Gold Trim Kits 4" Quick Disconnect Log Set |

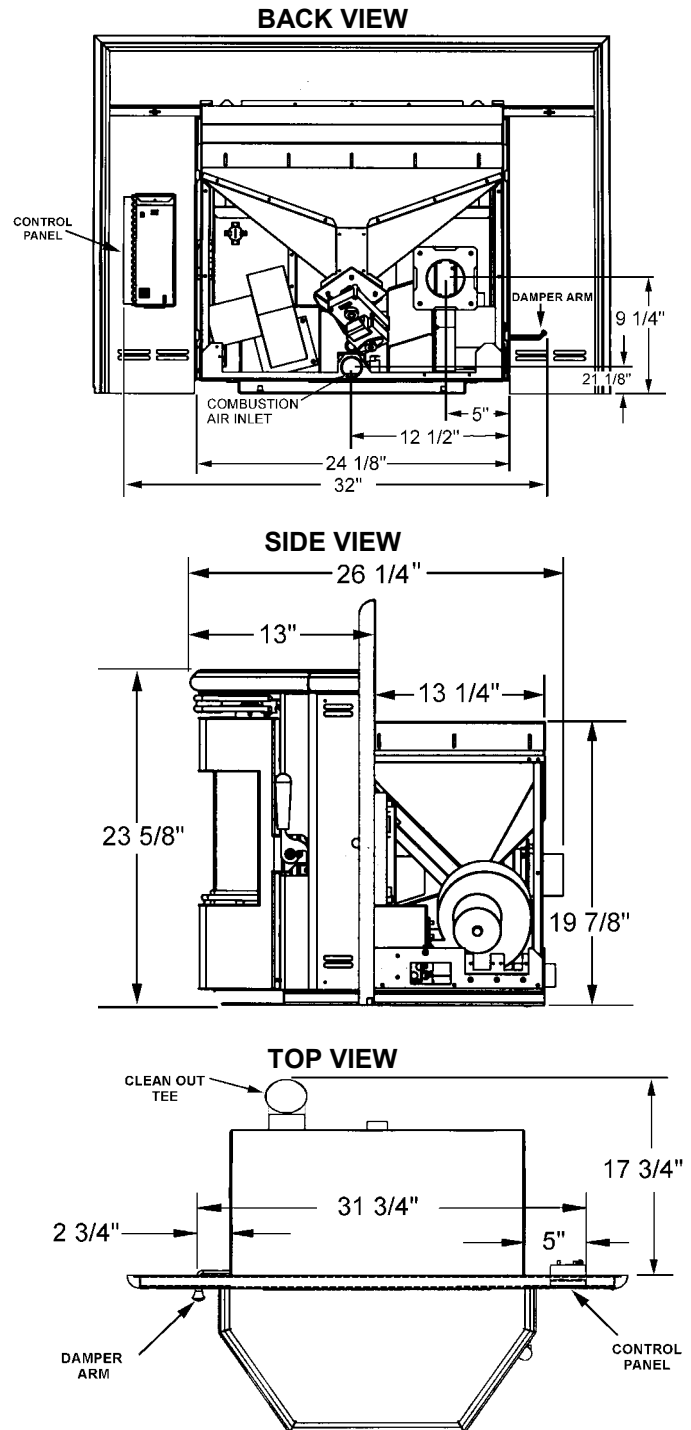

Note: Dimensions shown are approximations only (+/- 1/4")
 ~ Square footage heating capacities are approximations only. They will vary depending upon the level of insulation, climate, house design, ceiling height, ambient outside temperatures and how the stove is operated.

+ Non-combustible floor protection must be used when installed on carpet (see *Floor Protection*, page 5).

◆ Fuel delivery and burn times will vary depending on size and type of fuel used. Estimated heat input based on fuel value of 8500 BTU per lb.

* Fuses are rated as fast blow.

COMPONENT DEFINITIONS

AIR WASH

To inhibit buildup of soot on the door glass, air is delivered to the glass through an air wash system located in the doorframe surrounding the glass.

AUGER

It transfers the fuel down the burner tube into the firepot.

AUGER MOTOR

Motor specifications are: .4 Amp, 1 rpm (revolutions per minute). It drives the auger to deliver fuel to firepot.

BLOWER, CONVECTION (ROOM AIR)

The blower specifications are: 150 CFM (cubic feet per minute), .8 Amp, 2178 rpm (revolutions per minute). The blower's function is to transfer the heat from the appliance to heat the room air.

BLOWER, COMBUSTION (DRAFT INDUCER)

The blower specifications are: 95 CFM (cubic feet per minute), 1.0 Amp, 2880 rpm (revolutions per minute). It has a radial impeller to deliver more air to the firepot. It pulls air into the firepot by creating a negative pressure. This is done by extracting the exhaust gases out of the firebox and pushing the exhaust downstream to the flue exit.

DISC, CONVECTION HIGH LIMIT (L250-30F, N / C)

If the temperature of the convection air chamber reaches 250° F., the high limit auto reset will "trip" and stop the flow of electricity to the auger motor. It will not automatically reset until it has cooled below 220° F).

DISC, INLET HIGH LIMIT (L250-30F, N / C)

If negative pressure in the dwelling (ie. An extremely tight house which may not supply adequate combustion and ventilation air) causes the exhaust to pull back from the combustion air inlet, the heat from the exhaust will result in heat activation of this switch (trips at 250° F will stop the flow of electricity to the auger motor. It will not automatically reset until it has cooled below 220° F).

DOOR SWITCH (Profile® 30 FS and Profile® 30 INS)

If the door is opened during operation (on model Profile® 30 FS and Profile® 30 INS), this switch disconnects power to the auger motor resulting in the unit shutting down.

ULTRAGRATE™ (BURN GRATE)

This is where combustion occurs.

HOPPER

The hopper is where the pellets are stored.

HEAT OUTPUT BUTTON

This is the main power button, which controls power to the feed system auger motor and draft fan. It has 3 feed rate settings, which controls the burn rate.

PHOTOEYE


The photoeye is designed to signal the control board to discontinue power to the auger motor) if it does not sense a flame in the firepot.

PRESSURE SWITCH



The pressure switch is a safety device used to shut off the feed system (auger motor) if there is too much back pressure in venting system. Some possible causes are as follows:

- ◆ The venting system is obstructed.
- ◆ High altitude or other misc. environmental conditions affecting exhaust flow.
- ◆ Improper venting system.

WIRING DIAGRAM

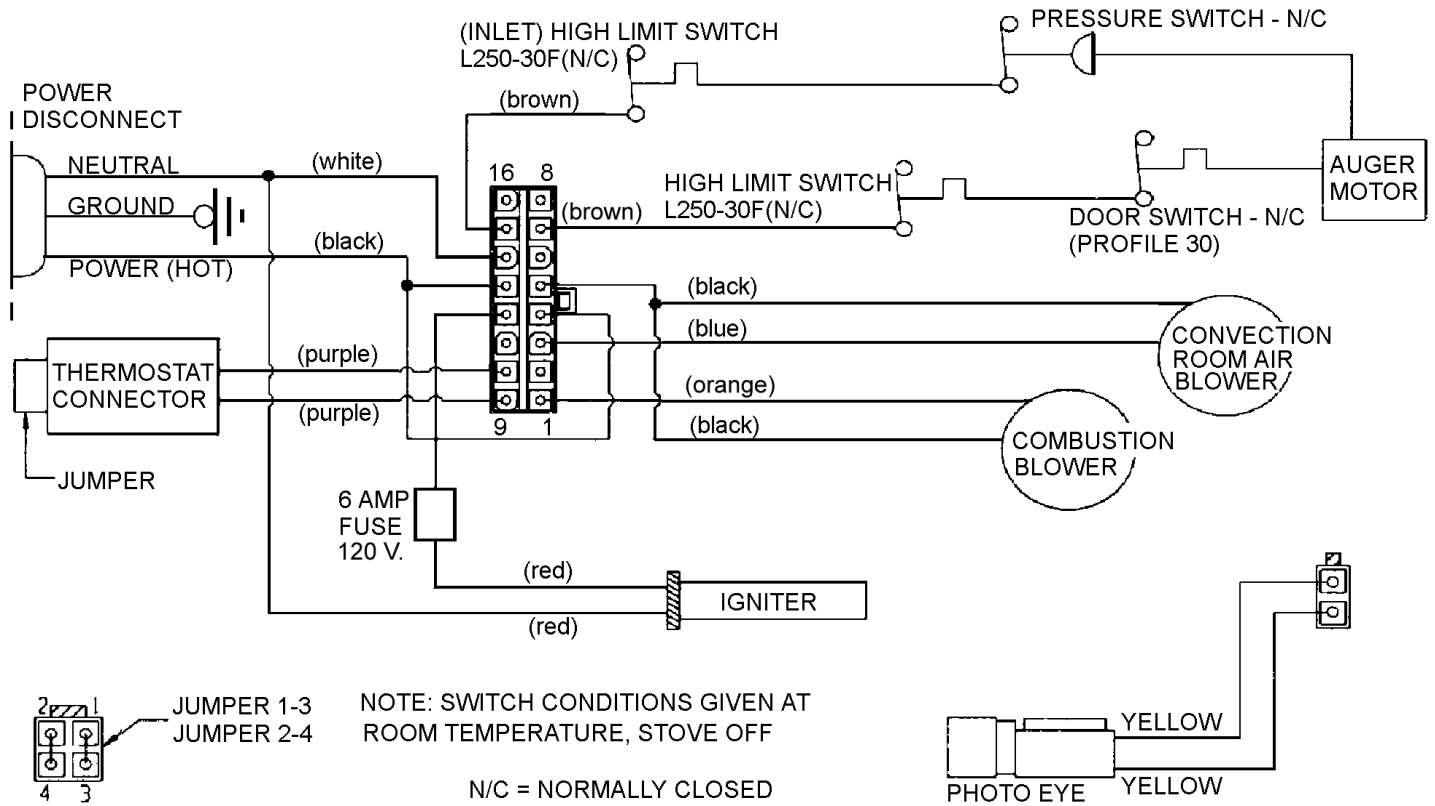

Pellet appliances will have either type 1, or type 2 terminal blocks as shown below.

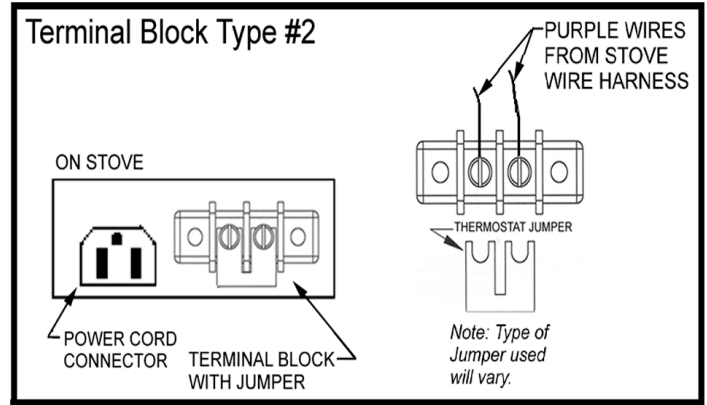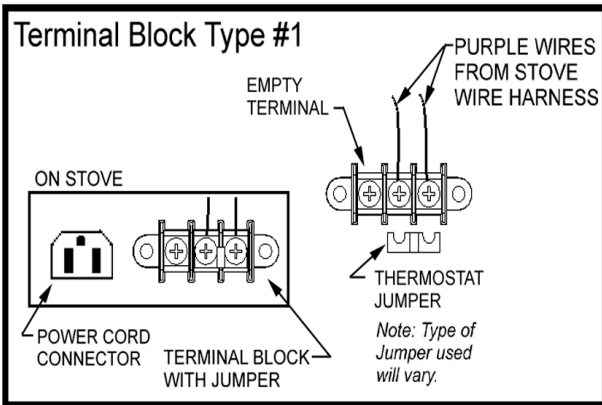

TROUBLESHOOTING Qualified *Technicians Only*

Unplug Appliance Before Performing Any Troubleshooting or Maintenance

| PROBLEM | CAUSE(S) | SOLUTIONS |
|--|---|--|
| 1. Fire burns with a lazy orange flame. Pellets build up in the grate and the window gets sooted up. | There is insufficient combustion air. | <p>Remove any clinkers or ash from the bottom of the grate that might be obstructing the primary air holes.</p> <p>Change to a better grade of fuel if necessary.</p> <p>Check that the damper has been opened enough for the amount of fuel feed.</p> <p>Check that the heat exchange tubes are not coated with ash.</p> <p>Clean internal exhaust ducts.</p> <p>Check gasket seal around the door. Use a thin strip of paper, 1 in. wide. Open the door and close it on the paper strip. A slight friction should be felt when the paper strip is pulled. Repeat this process at various locations around the door gasket. Replace the door gasket if necessary.</p> <p>Check for blockage in the air inlet tube or exhaust pipe. Clean as necessary.</p> <p>Close ash slide plates.</p> <p>Have your authorized Lennox Hearth Products dealer check your combustion blower.</p> |
| 2. Fire goes out or stove shuts down automatically | <p>Stove has run out of fuel.</p> <p>Pellets are not feeding.</p> <p>The high limit temperature switch has tripped.</p> <p>There is too much combustion air for the amount of fuel.</p> | <p>Refill hopper.</p> <p>See (Pellets will not feed) this page.</p> <p>Allow stove to cool for 1 hour and re-light. If the stove has been operating at a medium to high burn rate and the convection fan has been turned down low then the fan should be turned up higher. If this problem persists (particularly at lower burn rates) then the high limit snap switch should be replaced by your authorized dealer.</p> <p>Adjust the damper to reduce combustion air flow.</p> |
| 3. Pellets will not feed. | <p>The hopper is empty.</p> <p>The auger motor or circuit board may be defective. The pressure switch tap or hose may be blocked.</p> <p>Back pressure in venting tripping pressure switch.</p> <p>Thermostat is in stand-by mode. Thermostat wires disconnect.</p> <p>High limit switch may have been tripped.</p> <p>Door switch not engaged, stopping pellet feed (Profile[®] 30 FS and Profile[®] 30 INS).</p> <p>Self-aligning bearings in auger motor may be mis-aligned.</p> | <p>Refill hopper.</p> <p>Check to be sure that there is no blockage in the pressure tap or hose. Have your authorized Lennox Hearth Products dealer diagnose the problem and clean or replace any necessary parts.</p> <p>If new installation check for excessive 90° bends, long horizontal runs or excessive vertical run of 3" pipe. Possibly change to 4" pipe. If older installation check for excessive ash accumulation in pipe or other obstructions. Clean out pipe.</p> <p>Check to see if thermostat is set to low or if sun is shining directly on thermostat.</p> <p>Re-install wires.</p> <p>Allow stove to cool. Increase convection blower setting.</p> <p>Have dealer check operation to determine if adjustment or replacement is necessary.</p> <p><u>Gently</u> tap the auger motor.</p> |
| 4. Blowers will not operate when the start button is depressed. | <p>There is no power to the stove.</p> <p>There is no power to the control board.</p> | <p>Check that the stove is plugged in to the wall outlet.</p> <p>Check to see if your circuit breaker has tripped.</p> <p>Check the wire connections on the high limit snap switch and control board.</p> |

TROUBLESHOOTING *Qualified Technicians Only*

Unplug Appliance Before Performing Any Troubleshooting or Maintenance

| PROBLEM | CAUSE(S) | SOLUTIONS |
|--|---|--|
| 5. There is soot or fly ash in the house. | <p>The window is being cleaned when the stove is operating.</p> <p>There is leakage at the joints between the combustion fan, connection or exhaust pipe connections. This will be evidenced by dust on the impeller of the convection fan, and in the heat exchanger area.</p> <p>The vacuum cleaner is leaking.</p> | <p>Turn down the convection fan or turn off stove before cleaning to prevent dispersion of ash and soot into the room.</p> <p>Seal up any leaks in the exhaust system with room temperature vulcanizing silicone sealer (RTV).</p> <p>DO NOT use a standard household vacuum or "shop vac" as the filters will leak the fine particles of ash. Clean the stove with an approved ash vacuum ONLY.</p> |
| 6. Stove acts as if a fire is present when there is not a fire in the grate. | Excessive sun light may be shining directly into firebox from window. | Block excessive sunlight. Call authorized Lennox Hearth Products dealer if problem persists. |
| 7. Stove will not light. | <p>The igniter element may have failed.</p> <p>There is not enough pellets in the grate.</p> | <p>Check igniter element fuse in rear stove compartment. Call your authorized Lennox Hearth Products dealer. See alternate manual lighting procedure</p> <p>Prime the feed system (see Initial Start-Up, page 22).</p> |
| 8. Fault | <p>Photoeye not detecting flame.</p> <p>Stove has run out of fuel.</p> <p>A disk has tripped / pressure switch.</p> <p>Door switch not engaged, stopping pellet feed (Profile[®] 30 FS and Profile[®] 30 INS).</p> | <p>Clean feed tube slot. Check for debris (see <i>Photoeye</i> page 28). Check connection at control board following yellow wires to all connectors.</p> <p>Refill hopper.</p> <p>Blower intake, exhaust passages and / or venting system needs cleaning (follow routine and annual maintenance procedures).</p> <p>Have dealer check operation to determine if adjustment or replacement is necessary.</p> <p>If this does not correct the problem contact your local authorized Lennox Hearth Products dealer.</p> |

REPLACEMENT PARTS LIST / DIAGRAMS

Door Parts & Body Components

| Item # | Part No. / Cat. No. | Description | Stove Model |
|--------|---------------------|--|--|
| 1 | 14650006 | Door Assembly, Firebox (with 3 Piece Glass) | Profile® 20 FS |
| 2 | H0297 | Door Assembly, Firebox, DK-P30 (with 3 Piece Glass) | Profile® 30 FS & INS |
| | 15051547 | Gasket, Door, ¾" Rope, (8 Ft.) | Profile® 20 FS Profile® 30 FS & INS (<i>units with 1 piece glass</i>) |
| | 61051000 | Gasket, Door, 1" Rope, (7 Ft.) | Profile® 30 FS & INS (<i>units with 3 piece glass</i>) |
| | 61057202 | Gasket Kit, Glass (10 Ft.) | All |
| | H0257 | • Glass, Front | Profile® 20 FS |
| | H0258 | • Glass, Side (order 2 if set is needed) | Profile® 20 FS |
| | H0254 | • Glass, Front | Profile® 30 FS & INS (<i>units with 3 pc. glass</i>) |
| | H0255 | • Glass, Side (order 2 if set is needed) | Profile® 30 FS & INS (<i>units with 3 pc. glass</i>) |
| 3 | 17250095 | Handle Assembly, Door | Profile® 20 FS |
| 4 | 17150095 | Handle Assembly, Door | Profile® 30 FS & INS |
| 5 | 14650047 | Hinge Bracket | Profile® 20 FS |
| 6 | 14750021 | Hinge Bracket | Profile® 30 FS & INS |
| 7 | 14650003 | Panel, Left Side | Profile® 20 FS |
| 8 | 14650004 | Panel, Right Side | Profile® 20 FS |
| 9 | 14750070 | Panel, Left Side | Profile® 30 FS |
| 10 | 14750075 | Panel, Right Side | Profile® 30 FS |
| 11 | 14650048 | Panel, Rear | Profile® 20 FS |
| 12 | 14750150 | Panel, Rear | Profile® 30 FS |
| 13 | 14750340 | Panel, Left Side | Profile® 30 INS |
| 14 | 14750345 | Panel, Right Side | Profile® 30 INS |
| 15 | 14750300 | Panel, Top | Profile® 30 INS |
| 16 | 14650012 | Panel, Top | Profile® 20 FS |
| 16 | 14750060 | Panel, Top | Profile® 30 FS |
| 17 | 14750186 | Pedestal Assembly | Profile® 30 FS |
| | 12051409 | Knob, Control Panel Door (6 per package w/studs) | Profile® 30 INS |

• Includes gasket.

Electrical Parts

| Item # | Part # | Description | Stove Model |
|--------|----------|--|----------------------|
| 18 | 12046300 | Auger Motor | All |
| 19 | 16053941 | Control Board | Profile® 20 FS |
| 19 | 16052112 | Control Board | Profile® 30 FS & INS |
| 20 | 12147705 | Disc, High Limit, 250 DG (L250-30F,60T21) Set of 3 | All |
| 21 | 12140213 | Igniter Probe, 400 W, 4.8 A | All |
| 22 | 14650043 | Photoeye Assembly | Profile® 20 FS |
| 23 | 14750127 | Photoeye Assembly | Profile® 30 FS & INS |
| 24 | 12058820 | Power Cord, 8 feet | All |
| 25 | 16050205 | Thermostat | All |
| 26 | 16050001 | Pressure Switch | All |
| 27 | 12050815 | Wiring Harness | All |

REPLACEMENT PARTS LIST / DIAGRAMS

| | | | |
|----|----------|--|-------------------|
| | 18150150 | Fuse, Control Board, 5 Amp, 250 volt, Fast blow, 12pk. | All |
| | 12055908 | Fuse, Igniter, 6 Amp, 125 volt, Fast blow, 12pk. | All |
| 28 | 13050002 | Switch, Door (set of 3) | Profile 30 Series |

Firebox Parts

| Item # | Part # | Description | Stove Model |
|--------|----------|---------------|----------------------|
| 29 | 13640028 | Clips, Brick | Profile® 20 FS |
| 30 | 11750011 | Clips, Brick | Profile® 30 FS & INS |
| 31 | 14650011 | Firebrick Set | Profile® 20 FS |
| 32 | 14750015 | Firebrick Set | Profile® 30 FS & INS |
| 33 | 12051263 | UltraGrate™ | All |

Auger System Components


| Item # | Part # | Description | Stove Model |
|--------|----------|--------------------------------------|-------------|
| 34 | 12051001 | Bumper, Auger (Set of 5) | All |
| 35 | 12041300 | Collar & Screw Set, Auger (Set of 3) | All |
| 36 | 17250241 | Flange, Auger | All |
| 37 | 11756300 | Shaft, Auger | All |

Misc.


| Item # | Part # | Description | Stove Model |
|--------|----------|-----------------------------------|-------------|
| 38 | 12050004 | Brush, Cleaning | All |
| 39 | 61050003 | Gasket, Auger Flange, 5pc. | All |
| 40 | 61050005 | Gasket, Combustion Fan, 5pc. | All |
| 41 | 61057203 | Gasket, Convection Fan, 5pc. | All |
| 42 | 61050016 | Gasket, Quick Disconnect 5pc. | All |
| 43 | 12050011 | Blower, Combustion | All |
| 44 | 12146109 | * Blower, Convection, Hard Washer | All |
| 45 | 12055500 | Tool, Grate Scraper | All |
| 46 | 12050093 | Quick Disconnect 3" Vent Side | All |

* Includes gasket and four nuts.


1

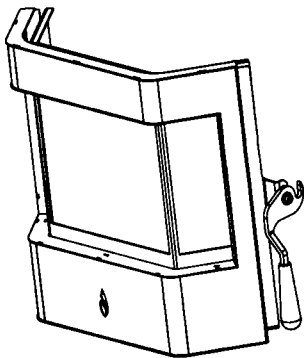

2

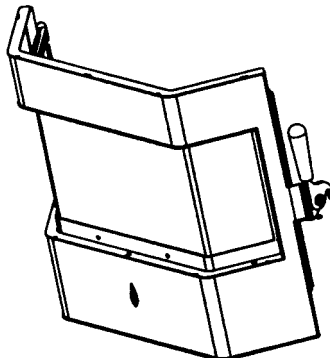


3

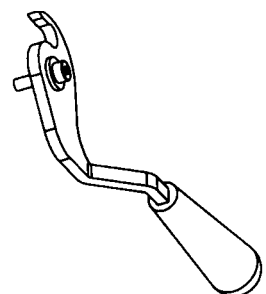


REPLACEMENT PARTS DIAGRAMS

4




5

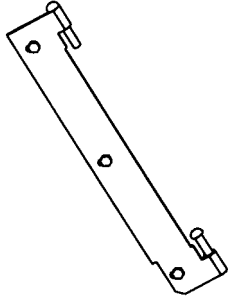


6




7

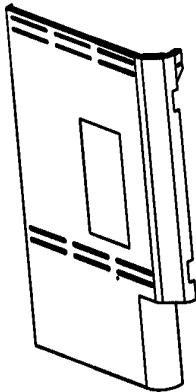


8

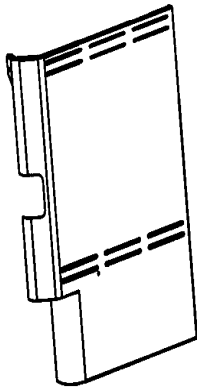


9

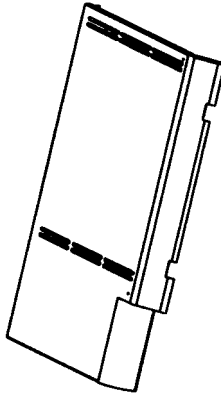


10

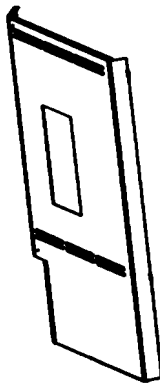


11

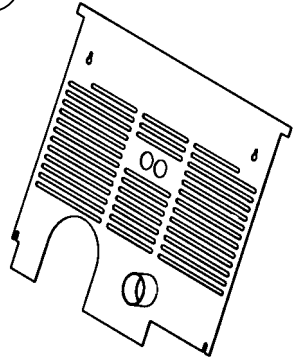


12

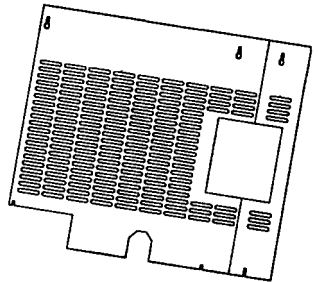

13




14

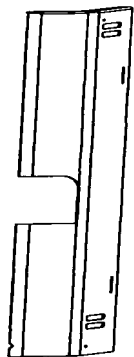


REPLACEMENT PARTS DIAGRAMS


15

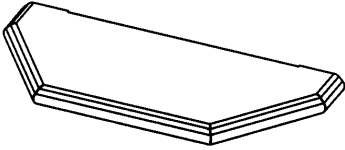


16

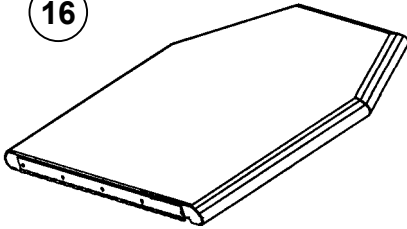


17

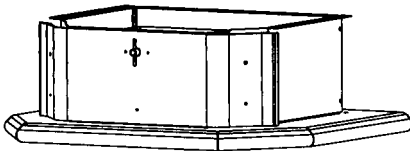


18

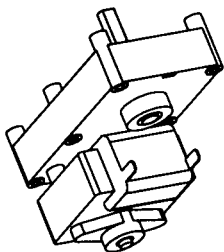


19

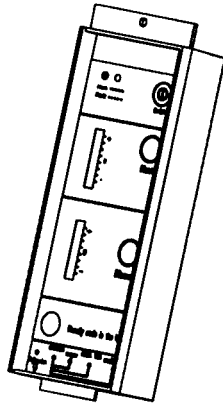


20

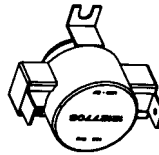


21

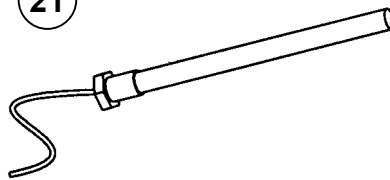


22

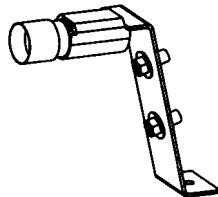


23

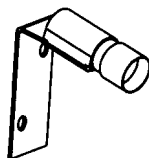


24

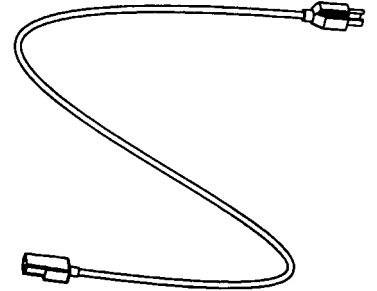

25

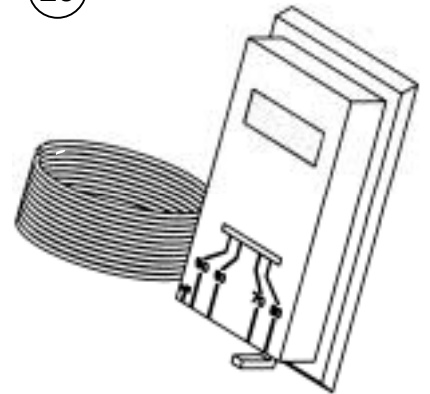

26

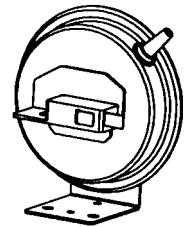

27




REPLACEMENT PARTS DIAGRAMS


28




29

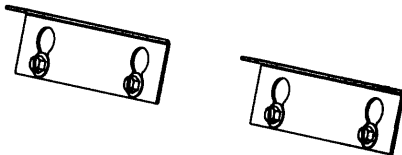


30

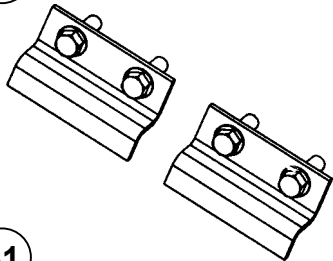


31

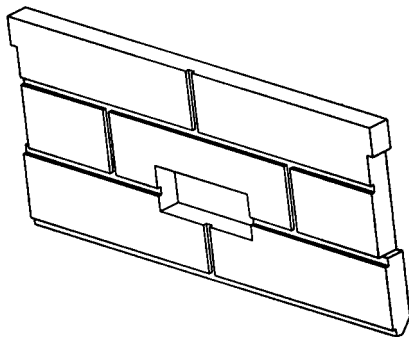


32

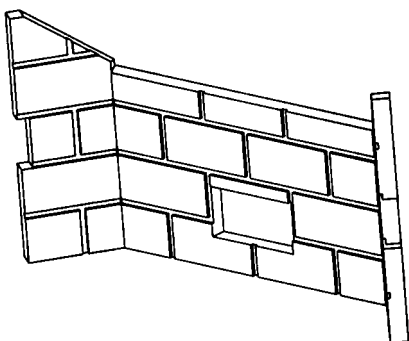


33

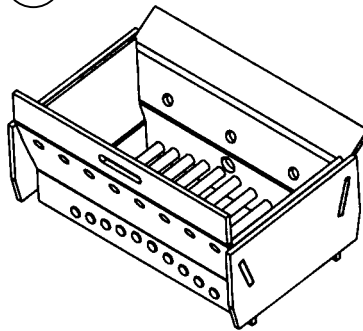


34




35

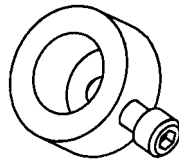


36

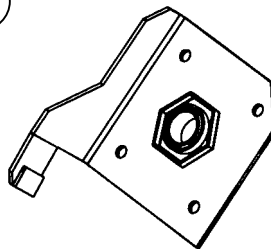


37

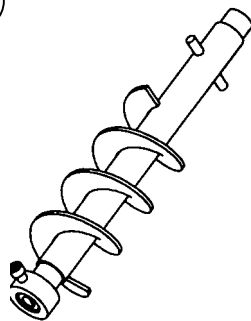


38

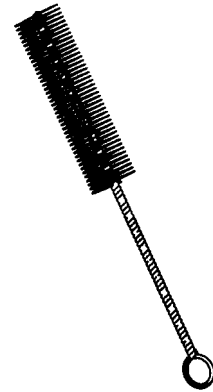


39

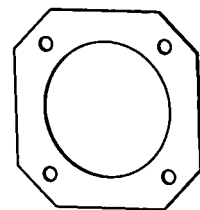

40

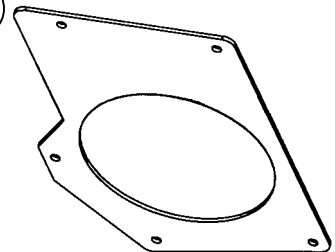


41

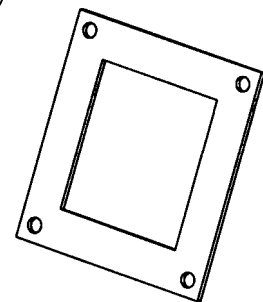


REPLACEMENT PARTS DIAGRAMS


42

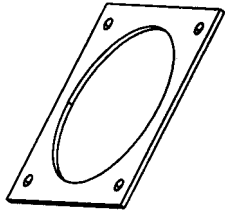


44

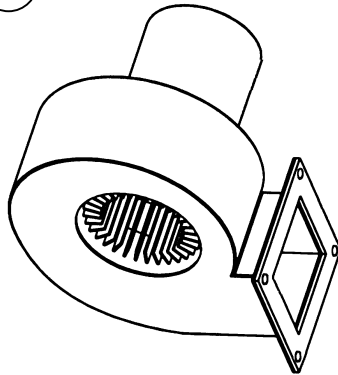


46

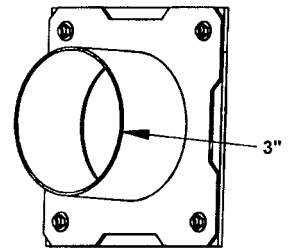

43

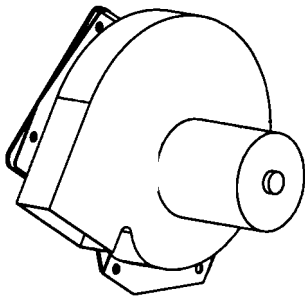




45

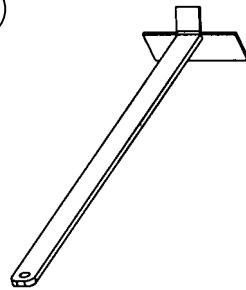

OPTIONAL ACCESSORIES DIAGRAMS

Optional Accessories

| Item # | Part # | Model | Description | Stove Model |
|--------|--------|----------|--|----------------------|
| 1 | 14M46 | TKP2-G | Trim Kit, Gold | Profile® 20 FS |
| 1 | 14M47 | TKP2-N | Trim Kit, Nickel | Profile® 20 FS |
| 1 | 14M49 | TKP3-G | Trim Kit, Gold | Profile® 30 FS & INS |
| 1 | 14M50 | TKP3-N | Trim Kit, Nickel | Profile® 30 FS & INS |
| 2 | 14M81 | QDPC-4 | Quick Disconnect Pipe Connector, 4" * | All |
| | 70K99 | TSPK-B | Touch-up Spray Paint Kit, Black | All |
| 3 | 14M52 | SKSP3 | Surround Kit, Small, 28 1/2" x 40 3/4", Black | Profile® 30 INS |
| 3 | 14M53 | SKMP3 | Surround Kit, Medium, 32" x 44", Black | Profile® 30 INS |
| 3 | 14M54 | SKLP3 | Surround Kit, Large, 36" x 48", Black | Profile® 30 INS |
| 4 | 14M55 | STKSP3-B | Surround Trim Kit, Small, 28 1/2" x 40 3/4", Brass | Profile® 30 INS |
| 4 | 14M56 | STKMP3-B | Surround Trim Kit, Medium, 32" x 44", Brass | Profile® 30 INS |
| 4 | 14M57 | STKLP3-B | Surround Trim Kit, Large, 36" x 48", Brass | Profile® 30 INS |
| 5 | H0244 | DLS-P20 | Decorative Log Set | Profile® 20 FS |
| 6 | H0245 | DLS-P30 | Decorative Log Set | Profile® 30 Series |

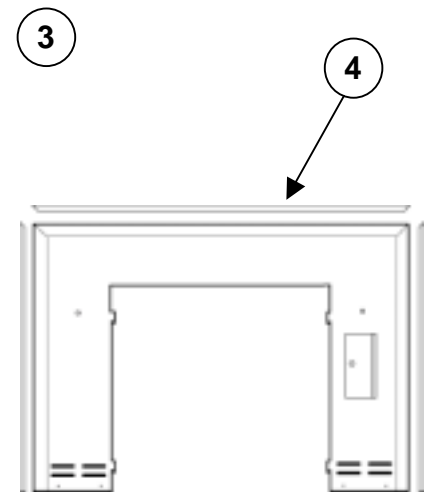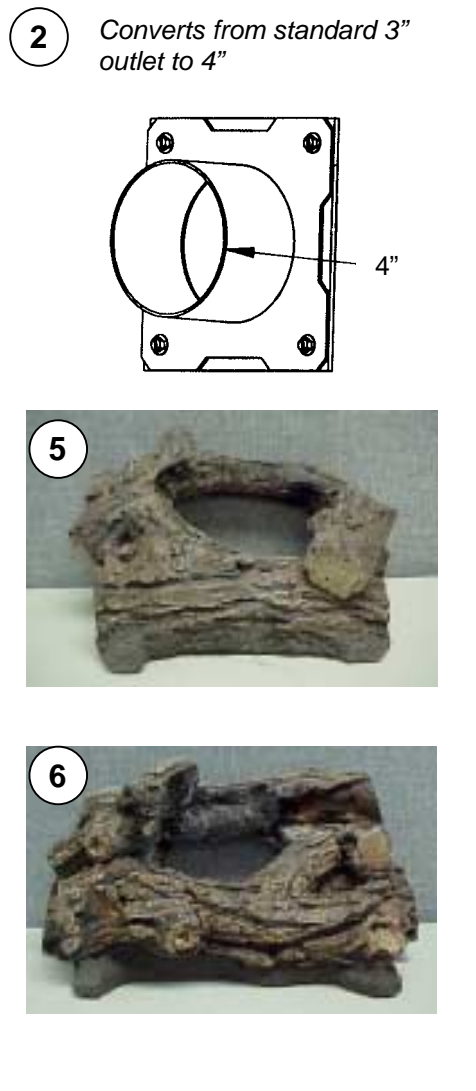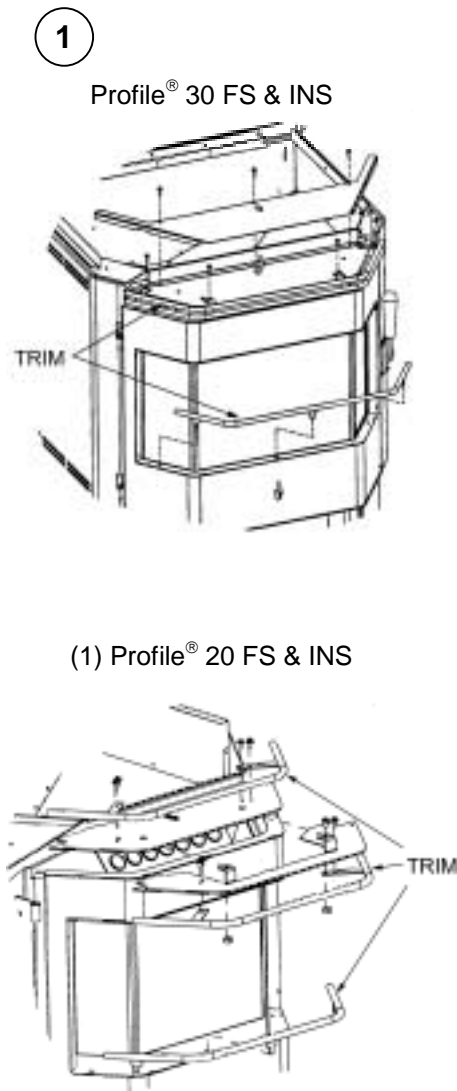

| Panel and Trim Sizes | |
|----------------------|--|
| Large: | 36" (91.4cm) height 44" (121.9cm) width |
| Medium: | 32" (81.3cm) height 44" (111.75cm) width |
| Small: | 28 1/2" (72.4cm) height 40 3/4" (103.5cm) width |

PROFILE 20 PELLET STOVE SAFETY MODEL

Note that your stove's serial number is printed on the safety label, which is located near the inside of the hopper. Your stove's serial number is preceded by a "WH-" (Example WH-000000).



CAUTION: HOT SURFACES WHILE IN OPERATION. DO NOT TOUCH. CONTACT MAY CAUSE SKIN BURNS.

KEEP CHILDREN, COMBUSTIBLE MATERIAL AND FURNISHINGS A CONSIDERABLE DISTANCE AWAY. SEE NAMEPLACE AND INSTRUCTIONS. TYPE OF FUEL: PELLETTIZED WOOD FUEL ONLY.

COMBUSTIBLE FLOOR MUST BE PROTECTED BY NON-COMBUSTIBLE MATERIAL EXTENDING BENEATH THE HEATER AND 6" TO THE FRONT AND SIDES AS INDICATED OR TO THE NEAREST PERMITTED COMBUSTIBLE MATERIAL.

USE 3" / 75mm or 4" / 100mm Type "L" LISTED PELLETT VENT AND COMPLETE COMPONENTS.

■ FREESTAND ■ INSERT

INSERT MODEL
MAY BE INSTALLED IN A MASONRY FIREPLACE THAT MEETS NATIONAL AND LOCAL BUILDING CODE REQUIREMENTS. DO NOT REMOVE BRICKS OR MORTAR. MAY BE INSTALLED IN A FACTORY BUILT ("ZERO CLEARANCE") FIREPLACE. DO NOT ALTER OR MODIFY THE FIREPLACE STRUCTURE. REFER TO OWNER'S MANUAL FOR SPECIFIC INSTALLATION REQUIREMENTS.

Manufactured by:
Lennox Hearth Products
1110 West Taft Avenue
Orange, CA 92865




WH-

MINIMUM CLEARANCES TO COMBUSTIBLE MATERIALS

| FREESTANDING STOVE INSTALLATION | MOBILE HOME OR RESIDENTIAL INSTALLATION | |
|---|--|----------------------------|
| | HORIZONTAL FLUE-DIRECTLY THROUGH WALL INSTALLATION | VERTICAL FLUE INSTALLATION |
| SIDEWALL TO UNIT | 4" / 102 MM | 4" / 102 MM |
| BACKWALL TO UNIT | 1" / 25 MM | 9" / 229 MM |
| WALL TO UNIT CORNER | 1" / 25 MM | 1" / 25 MM |
| ALCOVE TO FUEL HOPPER | 4" / 102 MM | 4" / 102 MM |
| MAX. DEPTH OF ALCOVE | 24" / 610 MM | 24" / 610 MM |
| FLUE TO WALL | 3" / 77 MM | 3" / 77 MM |
| PROTECTION SUITE TO FLOOR PROTECTION OUTSIDE EDGE | 6" / 153 MM | 6" / 153 MM |

Profile 20

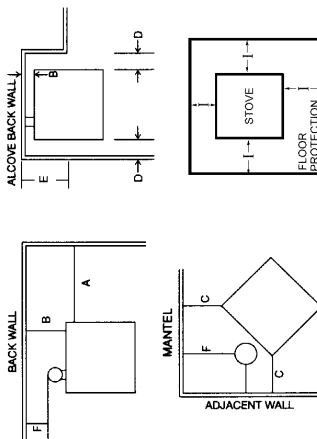

CERTIFIED FOR U.S. AND CANADA. LISTED ROOM HEATER FOR USE WITH APFI/FFI APPROVED PELLETTIZED WOOD FUEL ONLY. FOR USE IN MOBILE HOMES, AND AS AN INSERT FOR MASONRY AND FACTORY BUILT FIREPLACES. MODEL: PROFILE 20 TESTED TO ASTM E-1509/UL 1482/ULC-8627/ULC-8628 REPORT NO. 6638 (JULY 1993).

INSTALL AND USE ONLY IN ACCORDANCE WITH THE MANUFACTURER'S INSTALLATION INSTRUCTIONS. CONTACT LOCAL BUILDING OR FIRE OFFICIALS ABOUT RESTRICTIONS AND INSTALLATION INSPECTION IN YOUR AREA. DO NOT CONNECT THIS UNIT TO A CHIMNEY FLUE SERVING ANOTHER APPLIANCE. SEE LOCAL BUILDING CODE AND MANUFACTURER'S INSTRUCTIONS FOR PRECAUTIONS REQUIRED FOR PASSING A CHIMNEY THROUGH A COMBUSTIBLE WALL OR CEILING. THIS PELLET FIRED APPLIANCE HAS BEEN TESTED AND LISTED FOR USE IN MANUFACTURED HOMES IN ACCORDANCE WITH OREGON ADMINISTRATIVE RULES 814-23-900 THROUGH 814-23-909.

OPERATE ONLY WITH FIREBRICK IN PLACE. WARNING: OPERATE ONLY WITH VIEWING DOOR CLOSED. INSPECT FLUE FREQUENTLY TO PREVENT ACCUMULATION OF SOOT. THE HEATER AND FLUE MUST BE IN GOOD CONDITION. KEEP FURNISHINGS AND OTHER COMBUSTIBLE MATERIALS WELL AWAY FROM HEATER.

ROUTINE MAINTENANCE REMINDER

FREQUENCY OF CLEANING AND MAINTENANCE OF YOUR STOVE DEPENDS ON THE ASH CONTENT OF THE PELLETS YOU BURN. CHECK THE FOLLOWING PARTS OF YOUR STOVE WEEKLY FOR THE FIRST MONTH TO DETERMINE THE FREQUENCY OF CLEANING.

- A. BURN GRATE
- B. HEAT EXCHANGER TUBES
- C. ASH PAN AND EXHAUST PIPE

SEE YOUR MANUAL AND/OR DEALER FOR MORE INFORMATION.

INPUT RATING RANGE: 1.5 TO 3.8 LBS./HOUR (NOMINAL)
ELECTRICAL RATING: 60 HZ, 1.15V, LESS THAN 10 AMP

DO NOT REMOVE THIS LABEL

PROFILE 30 PELLET STOVE SAFETY LABEL

Note that your stove's serial number is printed on the safety label, which is located near the inside of the hopper. Your stove's serial number is preceded by a "WH-" (Example WH-000000).

CAUTION: HOT SURFACES WHILE IN OPERATION. DO NOT TOUCH. CONTACT MAY CAUSE SKIN BURNS. KEEP CHILDREN, COMBUSTIBLE MATERIAL AND FURNISHINGS A CONSIDERABLE DISTANCE AWAY. SEE NAMEPLATE AND INSTRUCTIONS. TYPE OF FUEL: PELLETIZED WOOD FUEL ONLY.



PROFILE-30
FREESTAND
INSERT


Manufactured by:
Lennox Hearth Products
1110 West Taft Avenue
Orange, CA 92865



DO NOT REMOVE THIS LABEL

WH-


| MINIMUM CLEARANCES TO COMBUSTIBLE MATERIALS | |
|---|--------------------------------------|
| INSTALLER'S STOVE | MOBILE HOME RESIDENTIAL INSTALLATION |
| A | INTERIOR VERTICAL FLUE INSTALLATION |
| B | 8" (203 MM) |
| C | 8" (203 MM) |
| D | 1" (25 MM) |
| E | 8" (203 MM) |
| F | 18" (457 MM) |
| | 3" (76 MM) |

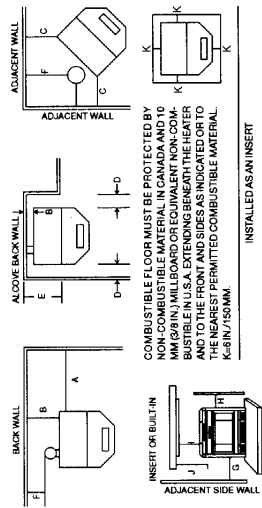

COMBUSTIBLE FLOOR MUST BE PROTECTED BY NON-COMBUSTIBLE MATERIAL IN CANADA AND 10 MM (3/8 IN.) LAYER OF NON-COMBUSTIBLE MATERIAL AND TO THE FRONT AND SIDES AS INDICATED OR TO THE NEAREST PERMITTED COMBUSTIBLE MATERIAL. K=8 IN./150 MM.

USE 3/75 MM / MODEL PL CHIMNEY COMPONENTS OR LISTED SINGLE DAMPER AND THE INSERT FLUE MAY BE INSTALLED IN A MASONRY FIREPLACE THAT MEETS NATIONAL AND LOCAL BUILDING CODE REQUIREMENTS. REFER TO OWNERS MANUAL FOR SPECIFIC INSTALLATION REQUIREMENTS. DO NOT ROTATE OR BEND OR OTHERWISE DAMAGE.

INSTALLED AS AN INSERT



MODEL: Profile-30
See Safety Label on Hopper side panel for detailed information

LISTED ROOM HEATER, PELLETIZED WOOD FUEL TYPE. ALSO FOR USE IN MOBILE HOMES, AND AS AN INSERT FOR MASONRY FIREPLACES AND FACTORY BUILT FIREPLACES, OR AS BUILT IN. MODEL: PROFILE-30 TESTED TO: UL 1482 / ULC-S627 / ULC-S628 REPORT NO.: 5515 (DEC-1981) AS TIME 1509 REPORT NO.: 476-1244 (MAR, 1996).

INSTALL AND USE ONLY IN ACCORDANCE WITH THE MANUFACTURER'S INSTALLATION INSTRUCTIONS. CONTACT LOCAL BUILDING OR FIRE OFFICIALS ABOUT RESTRICTIONS AND INSTALLATION INSPECTION IN YOUR AREA. DO NOT CONNECT THIS UNIT TO A CHIMNEY FLUE SERVING ANOTHER FIREPLACE. SEE LOCAL BUILDING CODE AND MANUFACTURER'S INSTRUCTIONS FOR PRECAUTIONS FOR PASSING A CHIMNEY THROUGH A COMBUSTIBLE WALL OR CEILING. THIS PELLET FIRED APPLIANCE HAS BEEN TESTED AND LISTED FOR USE IN MANUFACTURED HOMES IN ACCORDANCE WITH OREGON ADMINISTRATIVE RULES 814-23-900 THROUGH 814-23-909.

OPERATE ONLY WITH FIREBRICKS IN PLACE. OPERATE ONLY WITH VIEWING DOOR AND ASH REMOVAL DOOR CLOSED. INSPECT FLUE FREQUENTLY. CLEAN HEAT EXCHANGER AND FLUE FREQUENTLY TO PREVENT ACCUMULATION OF SOOT. THE HEATER AND FLUE MUST BE IN GOOD CONDITION. REQUIRED COMPONENTS: DAMPER SEALING PLATE FOR INSERT INSTALLATIONS. USE 3/75 MM OR 4/100 MM MODEL PL CHIMNEY COMPONENTS. KEEP FURNISHINGS AND OTHER COMBUSTIBLE MATERIALS WELL AWAY FROM HEATER.

ELECTRICAL RATING: 115V 60Hz Less than 10 Amp
FUEL INPUT RATING: 4.5 Lbs./Hr. Max.

ROUTINE MAINTENANCE REMINDER

FREQUENCY OF CLEANING AND MAINTENANCE OF YOUR STOVE DEPENDS ON THE ASH CONTENT OF THE PELLETS YOU BURN. CHECK THE FOLLOWING PARTS OF YOUR STOVE WEEKLY FOR THE FIRST MONTH TO DETERMINE CLEANING:

- A. BURN GRATE
- B. HEAT EXCHANGER TUBES
- C. ASH TRAPS AND ASH PAN

SEE YOUR MANUAL AND/DEALER FOR MORE INFORMATION.

LENNOX[®]

HEARTH PRODUCTS
1110 West Taft Avenue
Orange, CA 92865