

## To Add more WOOD:

1. First make sure TEMP is in the **"ACTIVE" ZONE** 



2. Turn Catalyst OFF:



3. Turn Temp knob to HIGH







- 4. Turn FAN switch OFF
- 5. Wait 30 seconds
- 6. Open door, rake coals to front
- **7. ADD WOOD**
- 8. Close door


00

9. Wait 2 min. Check TEMP

10. IF TEMP still "ACTIVE" then go to Step #10 of "Cold Start"



## Cold Start con't:

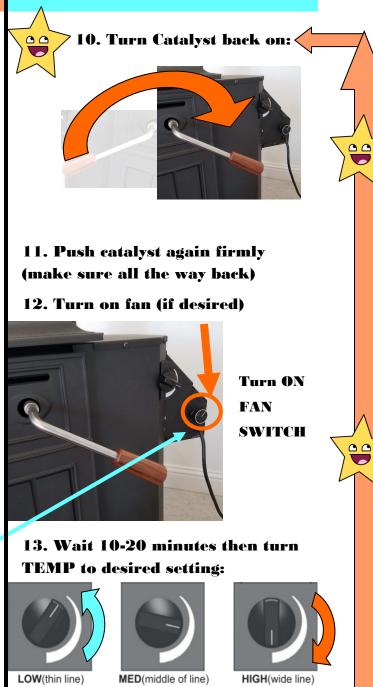

Please do NOT empty out ashes or clean chimney