



WARNING: During the installation, you must maintain a minimum of 1" clearance to combustible materials on the entire length of the system and have a minimum hot air plenum height of 15 inches.

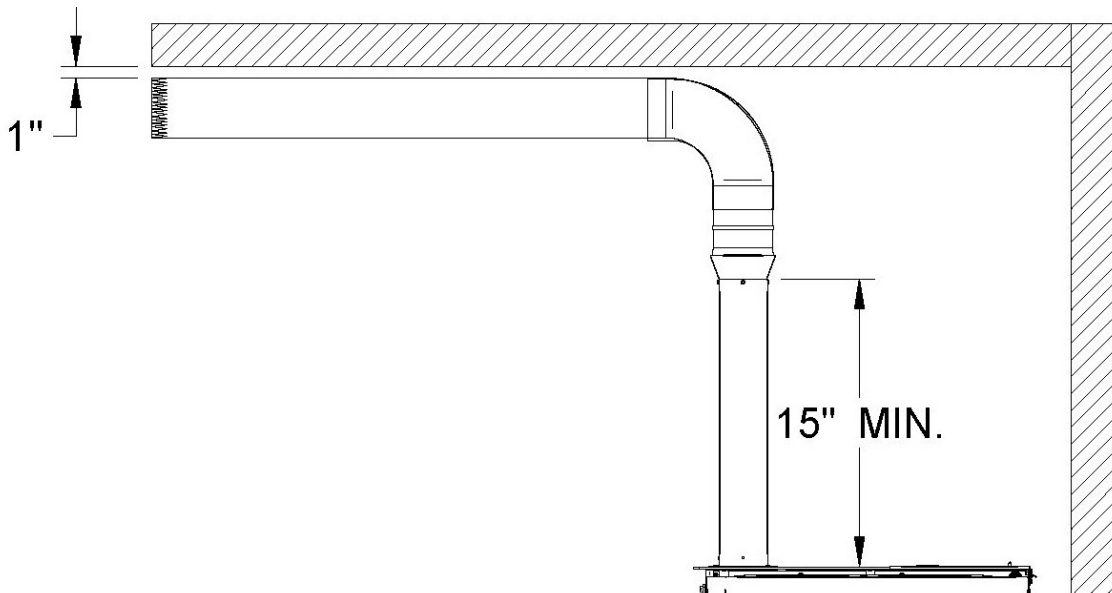

Example of a system installation

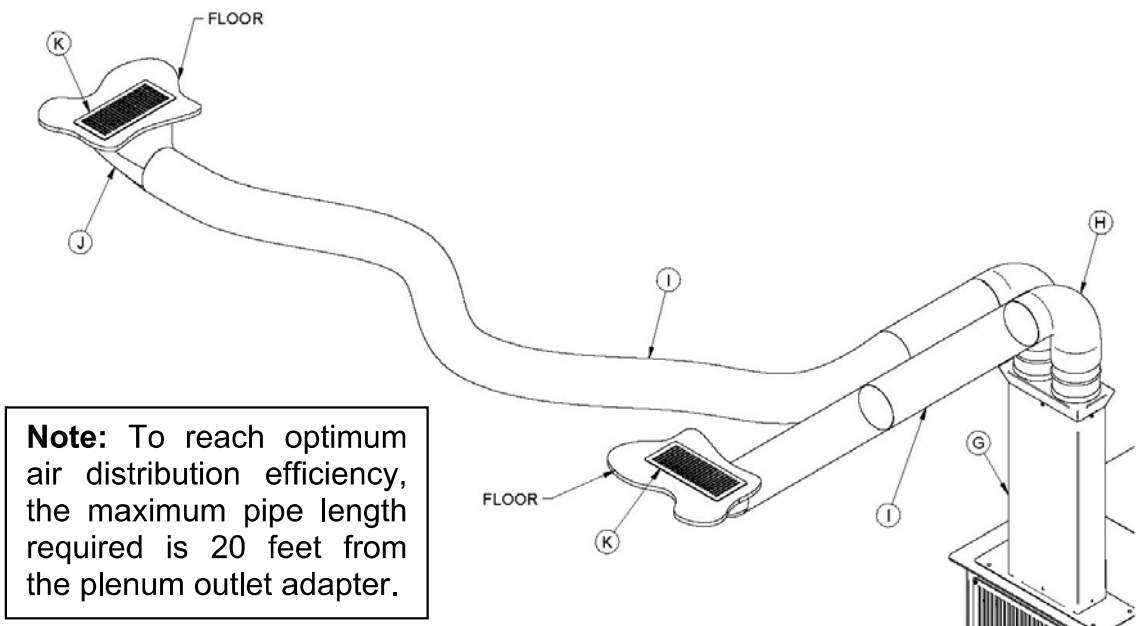

Note: To reach optimum air distribution efficiency, the maximum pipe length required is 20 feet from the plenum outlet adapter.

(I) – In regards to part (I) there are three different products you can use for your installation: semi-rigid tubing, galvanized rigid tubes or insulated aluminum tube. In all cases the material must be at least 325°F resistant and must respect the 1" clearance to combustible materials mentioned above.